

## Braun HC5030

# Braun Hair Clipper HC5030 User Manual

Model: HC5030

## 1. INTRODUCTION

---

This manual provides comprehensive instructions for the safe and effective use, maintenance, and care of your Braun Hair Clipper HC5030. Please read all instructions carefully before using the appliance and retain this manual for future reference.

## 2. IMPORTANT SAFETY INFORMATION

---

To reduce the risk of electric shock, injury, or fire, always observe the following safety precautions:

- This appliance is suitable for cleaning under running water.
- Do not use this appliance with a damaged comb or blade, as injury may occur.
- Keep the appliance dry. Do not immerse in water.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Only use the power supply provided with the appliance.
- Do not open the appliance.

### 3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Braun Hair Clipper HC5030
- Small trimming comb (3-24mm)
- Large trimming comb (14-35mm)
- Charging adapter
- Cleaning brush
- Lubricating oil
- User manual



Image 3.1: Contents of the Braun Hair Clipper HC5030 package, including the clipper, two comb attachments, charging adapter, cleaning brush, and lubricating oil.

## 4. PRODUCT OVERVIEW

Familiarize yourself with the components of your Braun Hair Clipper HC5030.



Image 4.1: Front view of the Braun Hair Clipper HC5030, highlighting the blade assembly, length setting indicator, power switch, and Braun branding.

### Key Features:

- **Ultra-sharp secured blades:** Designed for high performance and precision cutting.
- **17 length settings:** Achieved with two smart trimming attachments.
- **Lifetime lasting sharp blades:** Ensures consistent cutting performance.
- **Powerful DualBattery:** Provides constant power for up to 50 minutes of cordless operation.
- **Memory SafetyLock system:** Locks and memorizes the last used length setting.
- **Fully washable:** For easy cleaning under running water.

Lifetime lasting sharp blades for the perfect haircut

## Hair Clipper



17 length settings for customizable hair styles



Memory SafetyLock system



Lifetime lasting sharp blades



2 Powerful batteries for 100% constant power for 50 minutes.



Automatic worldwide adjustment



HC 5030



Image 4.2: Visual representation of the Braun Hair Clipper HC5030's main features, such as adjustable length settings, safety lock, durable blades, battery power, and global voltage compatibility.

## 5. SETUP

## **5.1 Charging the Appliance**

1. Ensure the appliance is switched off.
2. Connect the charging adapter to the clipper and plug it into an electrical outlet.
3. The charging indicator light will illuminate to show that the appliance is charging.
4. A full charge takes approximately 8 hours and provides up to 50 minutes of cordless operation.
5. For first use, charge the appliance for the recommended duration.

## **5.2 Attaching and Adjusting Comb Attachments**

The Braun Hair Clipper HC5030 comes with two comb attachments to achieve 17 precise length settings.



## **Two dedicated combs.** **For 17 precise length settings.**

Two smart trimming attachments allows you to customise your look with any hair style you want. With a total of 17 length settings, you'll have the flexibility to create a new style for any occasion. The small trimming comb creates 8 shorter styles (3-24mm long), while the larger comb can be used for 8 longer styles between 14-35mm. Plus an extra short length setting can be used without the comb attachments.

Image 5.1: Illustration demonstrating the attachment of the small and large combs to the clipper head and how to adjust their positions to select desired hair cutting lengths.

1. Select the desired comb attachment: the small comb for lengths 3-24mm, or the large comb for lengths 14-35mm.
2. Slide the comb onto the clipper head until it clicks into place.
3. Adjust the length setting by sliding the comb up or down. The selected length will be indicated on the clipper.

4. For an extra short length setting (approximately 1mm), use the clipper without any comb attachment.

## 6. OPERATING THE HAIR CLIPPER

---

### 6.1 Basic Operation

1. Ensure the clipper is charged and the desired comb attachment and length setting are in place.
2. Press the power button to turn on the appliance.
3. Hold the clipper with the blades pointing upwards and move it against the direction of hair growth.
4. Use slow, controlled movements for an even cut.
5. To turn off the appliance, press the power button again.

### 6.2 Memory SafetyLock System

The Memory SafetyLock system conveniently locks and memorizes the last used length setting. This ensures consistent results for subsequent uses without needing to re-adjust the comb.

## 7. CLEANING AND MAINTENANCE

---


Regular cleaning and maintenance will ensure optimal performance and extend the lifespan of your hair clipper.

### 7.1 Cleaning

1. Ensure the appliance is switched off and disconnected from the power supply.
2. Remove the comb attachment.
3. Brush away any loose hairs from the blades and the clipper body using the provided cleaning brush.
4. The clipper is fully washable. You can rinse the clipper head and blades under running tap water.
5. Allow the clipper to air dry completely before storing or recharging.

### 7.2 Oiling the Blades

To maintain the sharpness and smooth operation of the blades, regular oiling is recommended.

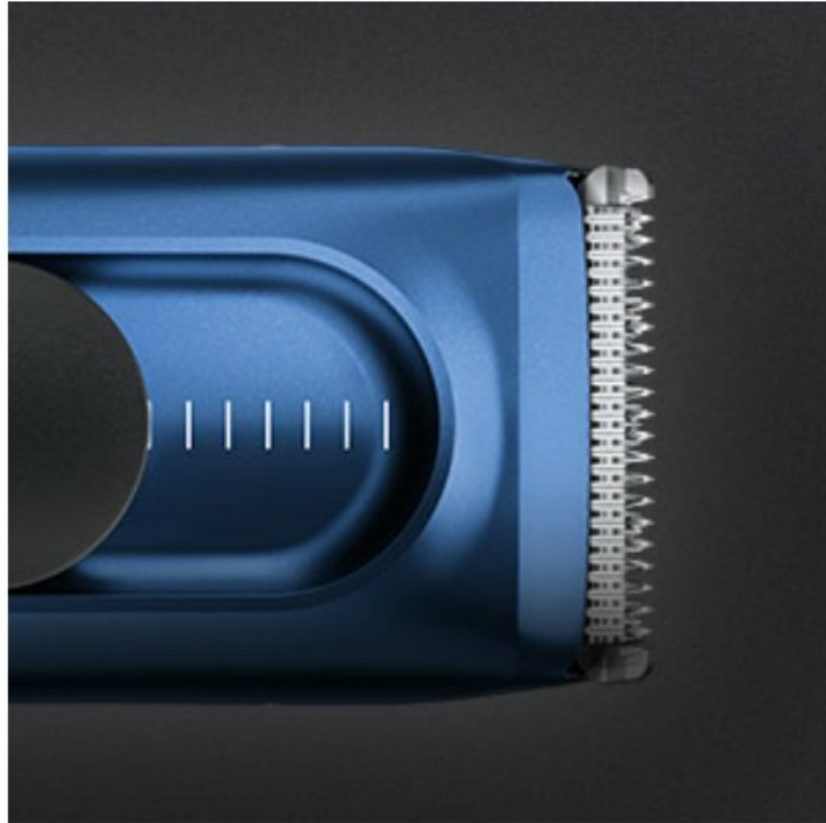

## **Lifetime lasting sharp blades for precision cutting.**

The blades of the Braun Hair Clipper are engineered for lifetime lasting sharpness, providing the high performance precision you need to achieve your style. The ultra-sharp stainless steel trimming elements ensure even long or thick hair isn't a challenge.

Image 7.1: Detailed view of the Braun Hair Clipper HC5030's precision blades, which require regular oiling for optimal performance.

1. After cleaning and drying, apply one or two drops of the provided lubricating oil onto the blades.
2. Turn on the clipper for a few seconds to distribute the oil evenly.
3. Wipe off any excess oil with a soft cloth.

### **7.3 Storage**

Store the appliance in a cool, dry place, away from direct sunlight and out of reach of children.

## 8. TROUBLESHOOTING

If you encounter any issues with your Braun Hair Clipper HC5030, refer to the following table:

| Problem                             | Possible Cause   | Solution  |
|-------------------------------------|--|---|
| Clipper does not turn on.           | Battery is depleted.   | Charge the clipper for at least 8 hours.                                      |
| Clipper runs slowly or pulls hair.  | Blades are dirty or not oiled.                               | Clean the blades and apply lubricating oil.                                   |
| Uneven cutting.                     | Comb attachment not properly secured or incorrect technique. | Ensure comb is securely attached. Use slow, even strokes against hair growth. |
| Charging indicator not lighting up. | Power adapter or outlet issue.                               | Check power connections and try a different outlet.                           |

## 9. SPECIFICATIONS

| Feature                 | Detail                             |
|-------------------------|------------------------------------|
| Model Number            | HC5030                             |
| Manufacturer            | Braun                              |
| Dimensions (L x W x H)  | 50 x 100 x 100 mm (5 x 10 x 10 cm) |
| Item Weight             | 490 g                              |
| Battery Type            | 1 Lithium Ion battery (included)   |
| Hair Type Compatibility | All                                |
| Color                   | Blue                               |
| Recommended Uses        | Clipping, Trimming                 |

## 10. WARRANTY AND SUPPORT

---

### 10.1 Manufacturer's Warranty

The Braun Hair Clipper HC5030 comes with a **2-year manufacturer warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, alteration, or unauthorized repair.

### 10.2 Customer Support

For warranty claims, technical assistance, or further inquiries, please contact Braun customer service through their official website or the contact information provided with your purchase documentation. Please have your model number (HC5030) and proof of purchase ready.