

[Manuals.plus](#) /

› [OneConcept](#) /

› OneConcept DB003 Mini Camping Washing Machine - Compact Clothes Washer, For Outdoor Caravans Small Apartments and Travel, 2 kg Load Capacity, 250W/150W Rinse and Spin Power, White/Blue

OneConcept DB003

OneConcept DB003 Mini Camping Washing Machine User Manual

Model: DB003 | Brand: OneConcept

1. INTRODUCTION

Thank you for choosing the OneConcept DB003 Mini Camping Washing Machine. This compact and efficient appliance is designed for small loads, making it ideal for camping, caravans, small apartments, and travel. With its dual functionality for washing and spinning, it offers a convenient solution for your laundry needs.

This manual provides essential information on the safe operation, setup, maintenance, and troubleshooting of your washing machine. Please read it thoroughly before first use and keep it for future reference.



Figure 1: Front view of the OneConcept DB003 Mini Camping Washing Machine, showing its compact white and blue design with two top-loading compartments.

2. SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage to the appliance or injury to yourself, please observe the following safety precautions:

- Always connect the appliance to a properly grounded power outlet with the correct voltage (220-240V, 50/60Hz).
- Do not operate the machine with a damaged power cord or plug. If damaged, contact qualified service personnel.

- Keep the appliance away from direct sunlight, heat sources, and damp environments. It is watertight according to IPX4 standard, but not submersible.
- Ensure the machine is placed on a stable, level surface to prevent tipping during operation.
- Do not overload the machine. Adhere to the maximum washing capacity of 2kg.
- Never put hands or objects into the washing or spinning compartments while the machine is operating.
- Always unplug the machine from the power supply before cleaning, maintenance, or if it is not in use for an extended period.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Supervise children to ensure they do not play with the appliance.
- Only use detergents suitable for washing machines.

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the main parts of your OneConcept DB003 washing machine:

- 1. Wash Compartment:** For washing clothes.
- 2. Spin Compartment:** For spinning excess water from clothes.
- 3. Wash Timer Knob:** Sets the washing duration (0-15 minutes).
- 4. Program Selector Knob:** Selects wash program (Delicate/Normal).
- 5. Spin Timer Knob:** Sets the spinning duration (0-5 minutes).
- 6. Water Inlet:** For connecting the input hose to fill water.
- 7. Drainage Pipe:** Fixed pipe for draining water.
- 8. Power Cable:** For connecting to the electrical supply.
- 9. Transparent Lids:** Covers for wash and spin compartments.
- 10. Side Handles:** For easy transport of the unit.



Figure 2: Top view of the washing machine, illustrating the two compartments and the control knobs for wash time, program, and spin time.

4. SETUP

Before using your washing machine for the first time, follow these steps:

1. **Unpacking:** Carefully remove the washing machine from its packaging. Retain packaging materials for future transport or storage.
2. **Placement:** Place the machine on a firm, flat, and stable surface. Ensure there is enough space around it for ventilation and operation. Avoid placing it on carpets or soft surfaces that might obstruct airflow.
3. **Drainage:** Position the fixed drainage pipe to allow water to drain into a sink, bucket, or drain. Ensure the pipe is not kinked or blocked. The drainage pipe length is approximately 30cm.
4. **Water Supply:** Connect the input hose (1m length) to the water inlet on the machine and to a water tap. Ensure connections are secure to prevent leaks.
5. **Power Connection:** Plug the power cable (1.5m length) into a suitable 220-240V, 50/60Hz grounded power outlet.



Figure 3: Side view of the washing machine, highlighting the fixed drainage hose for water disposal.



Figure 4: Rear view of the washing machine, displaying the power cord and the product information label.

5. OPERATING INSTRUCTIONS

5.1. Washing Process

1. **Load Clothes:** Open the lid of the wash compartment. Place up to 2kg of dry laundry into the wash tub. Do not overload.

2. **Add Water and Detergent:** Fill the wash compartment with water to the desired level (indicated inside the tub, if present, or based on load size). Add an appropriate amount of laundry detergent suitable for washing machines.
3. **Select Program:** Turn the Program Selector Knob to choose between "Delicate" or "Normal" wash cycles, depending on the fabric type.
4. **Set Wash Timer:** Turn the Wash Timer Knob to set the desired washing duration, from 0 to 15 minutes. The machine will start automatically once the timer is set.
5. **Drain Water:** Once the wash cycle is complete, ensure the drainage pipe is positioned to drain water into a suitable receptacle. The machine will drain automatically.

5.2. Rinsing Process (Manual)

Since this is a twin-tub machine, rinsing is typically done manually after the wash cycle:

1. After draining the wash water, refill the wash compartment with clean water.
2. Run a short wash cycle (e.g., 3-5 minutes) to rinse the clothes.
3. Drain the rinse water. Repeat if necessary until clothes are free of soap residue.

5.3. Spinning Process

1. **Transfer Clothes:** Carefully transfer the washed and rinsed clothes from the wash compartment to the spin compartment. Distribute them evenly to ensure balance.
2. **Place Safety Cover:** Place the safety cover firmly on top of the clothes in the spin compartment. This prevents clothes from flying out during spinning.
3. **Set Spin Timer:** Close the spin compartment lid. Turn the Spin Timer Knob to set the desired spinning duration, from 0 to 5 minutes. The machine will start spinning.
4. **Remove Clothes:** Once the spin cycle is complete and the drum has stopped rotating, open the lid and carefully remove the spun clothes.



Figure 5: The washing machine shown with a small pile of folded clothes, illustrating the typical load size it can handle.

6. MAINTENANCE AND CARE

Regular cleaning and proper care will extend the life of your washing machine:

- **Cleaning the Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Interior:** After each use, rinse the wash and spin compartments with clean water. You can wipe them dry with a cloth to prevent water spots or mildew.
- **Drainage Pipe:** Ensure the drainage pipe is clear of lint or debris. Periodically check for blockages.
- **Storage:** If storing the machine for an extended period, ensure it is completely dry. Store it in a cool, dry place, away from direct sunlight.
- **Power Cord:** When not in use, wrap the power cord neatly around the cable winder provided at the back of the unit.

7. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not start.	Not plugged in; power outage; timer not set.	Check power connection; check circuit breaker; ensure timer knob is turned.
Water does not drain.	Drainage pipe kinked or blocked; pipe positioned too high.	Straighten pipe; clear blockages; ensure pipe is lower than the machine's base.
Machine vibrates excessively during spin.	Uneven load in spin compartment; machine not on a level surface.	Redistribute clothes evenly; adjust machine's position on a level surface.
Water leaks.	Input hose not securely connected; drainage pipe not properly positioned.	Tighten hose connections; ensure drainage pipe is correctly placed.
Poor washing performance.	Overloading; insufficient detergent; incorrect program selected.	Reduce load size; use correct amount of detergent; select appropriate wash program.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	OneConcept
Model	DB003
Model Number	4260489827550

Feature	Detail
Type	Mini Camping Washing Machine (Twin-Tub)
Wash Power	250W
Spin Power	120W
Washing Capacity	2 kg
Programs	Delicate, Normal
Wash Timer	0 - 15 minutes
Spin Timer	0 - 5 minutes
Power Supply	220 - 240V, 50/60Hz
Dimensions (W x H x D)	57 x 58 x 35 cm
Weight	10.2 kg
Cable Length	1.5 m
Input Hose Length	1 m
Drainage Pipe Length	30 cm
Water Protection	IPX4 standard (Watertight)
Material	High-quality plastic



Figure 6: A visual representation of the washing machine's compact size relative to an average adult.

9. WARRANTY AND SUPPORT

OneConcept products are designed for reliability and performance. For information regarding warranty coverage, technical support, or spare parts, please refer to the warranty card included with your purchase or visit the official OneConcept website. Please have your model number (DB003) and serial number ready when contacting support. For general inquiries or to find authorized service centers, you may also refer to the contact information provided in your purchase documentation or on the manufacturer's website.

© 2024 OneConcept. All rights reserved.

This manual is subject to change without notice.