

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [MUST](#) /
- › [MUST Lungo Coffee Capsules Instruction Manual](#)

## MUST Lungo Blend Intensity 5/8

# MUST Lungo Coffee Capsules Instruction Manual

For 100% Recyclable Aluminum Capsules, Lungo Blend Intensity 5/8

[Introduction](#)   [Setup](#)   [Operating](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Support](#)

## 1. INTRODUCTION

---

This manual provides instructions for the proper use and care of MUST Lungo coffee capsules. These capsules are designed for compatibility with Nespresso coffee machines and contain a Lungo blend with an intensity level of 5 out of 8. The capsules are made from 100% recyclable aluminum, ensuring freshness and environmental consideration.



Image: MUST Lungo coffee capsules and a brewed cup of coffee, highlighting the product packaging and a single capsule.

## 2. SETUP

1. **Unpacking:** Carefully remove the 10-capsule boxes from the main packaging. Each box contains 10 individual aluminum capsules.
2. **Machine Preparation:** Ensure your Nespresso machine is clean and filled with fresh water. Turn on the machine and allow it to preheat according to its manufacturer's instructions.
3. **Capsule Insertion:** Open the capsule compartment of your Nespresso machine. Insert one MUST Lungo capsule into the designated slot. Close the compartment firmly.

## 3. OPERATING INSTRUCTIONS

1. **Select Cup Size:** Place a cup suitable for a Lungo (approximately 110 ml or 3.7 oz) under the coffee outlet.
2. **Brewing:** Press the Lungo button on your Nespresso machine. The machine will begin brewing, extracting the coffee from the capsule.
3. **Enjoy:** Once brewing is complete, remove your cup and enjoy your MUST Lungo coffee.



Problem	Possible Cause	Solution
Capsule does not fit or compartment won't close.	Capsule is misaligned or incorrect type.	Ensure the capsule is correctly oriented and fully inserted. Verify it is a Nespresso-compatible capsule.
No coffee or very slow flow.	Water tank empty, machine not preheated, or capsule blockage.	Check water level. Allow machine to fully preheat. Eject and re-insert capsule, or try a new capsule. Descale machine if necessary.
Coffee tastes weak or watery.	Incorrect cup size selected, or machine needs descaling.	Ensure you are using the Lungo button for the intended volume. Descale your Nespresso machine regularly.
Machine leaks during brewing.	Capsule not properly sealed, or machine gasket wear.	Ensure the capsule is inserted correctly and the lever is fully closed. If leaks persist, consult your Nespresso machine's manual or service center.

## 6. PRODUCT SPECIFICATIONS

- **Product Name:** MUST Lungo Coffee Capsules
- **Blend:** Lungo
- **Intensity:** 5/8
- **Capsule Material:** 100% Recyclable Aluminum
- **Compatibility:** Nespresso Original Line machines
- **Quantity:** 100 capsules (10 packs of 10 capsules)
- **Coffee Type:** Caffeinated
- **Roast Level:** Medium Roast
- **Origin:** Made in Italy
- **Shelf Life:** 24 months from production date

 


Image: Packaging for MUST Lungo coffee capsules, showing a box of 10 capsules and a single capsule.

## 7. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your MUST Lungo coffee capsules, please contact our customer service. We are committed to providing assistance and ensuring your satisfaction.

You can find more information and contact details on our official website: [www.mustespresso.com](http://www.mustespresso.com)