

[Manuals.plus](#) /

› [RealTruck](#) /

› RealTruck Roll-N-Lock A-Series Tonneau Cover User Manual

RealTruck BT530A

RealTruck Roll-N-Lock A-Series Retractable Truck Bed Tonneau Cover User Manual

Model: BT530A | Brand: RealTruck

INTRODUCTION

The RealTruck Roll-N-Lock A-Series Retractable Truck Bed Tonneau Cover is designed to provide a secure, stylish, and convenient solution for your truck bed. Its low-profile aluminum construction and innovative features ensure protection for your cargo while maintaining the aesthetic appeal of your vehicle. This manual provides essential information for proper measurement, installation, operation, and maintenance of your tonneau cover.



Image: The A-Series Retractable Truck Bed Tonneau Cover installed on a truck, showcasing its sleek, low-profile design.

KEY FEATURES

- **Low-Profile Design:** The A-Series features a sleek, low-profile appearance that complements your truck's aesthetics.
- **Durable Construction:** Made with powder-coated, all-aluminum construction for scratch and UV protection, ensuring long-lasting durability.
- **Compact Canister Housing:** Designed with the most compact canister housing on the market, averaging only 7 ¼ inches deep, to maximize your truck bed's cargo space.
- **Enhanced Security:** Patented hinge technology provides a nearly impenetrable seam, and a four-point locking system secures the cover instantly and simultaneously with the tailgate.
- **Effortless Operation:** A torsion spring enclosed in a 3-inch aluminum casing and a patented contoured hinge design allow for smooth, frictionless opening and closing in seconds.
- **Multiple Latching Positions:** Features a patented, ratchet-style latching mechanism, enabling the cover to lock in place at four open positions.
- **Weather Protection:** Built to protect against harsh weather conditions, keeping your cargo safe and dry.

A-SERIES



Image: The A-Series cover demonstrating its fully closed and fully retracted positions, highlighting its compact design.



Image: Detail of the A-Series cover, emphasizing its powder-coated, all-aluminum construction for durability and UV resistance.

MEASURING YOUR TRUCK BED

Accurate measurement of your truck bed is crucial to ensure proper fitment of your Roll-N-Lock tonneau cover. Always measure the length of the truck bed floor from the bulkhead (front wall) to the tailgate (rear, with tailgate down).

Your browser does not support the video tag.

Video: This video provides a detailed guide on how to accurately measure your truck bed for proper tonneau cover selection. It demonstrates the correct points of measurement and conversion of inches to feet and inches.

HOW TO MEASURE YOUR TRUCK BED

TOYOTA TACOMA

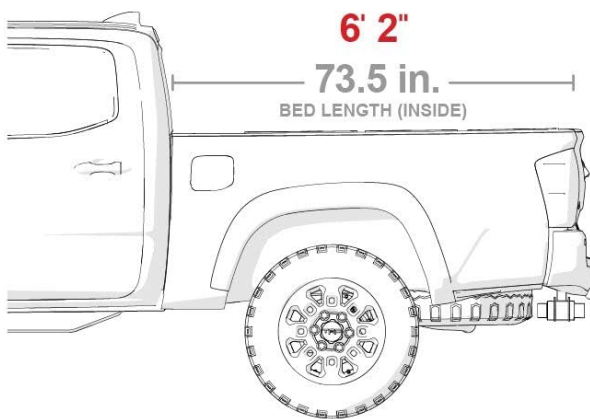
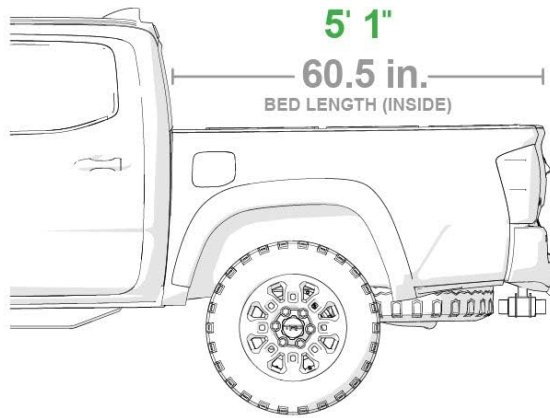


Image: A visual guide illustrating the correct measurement of a truck bed, specifically for a Toyota Tacoma, showing the 5' 1" bed length (60.5 inches) that fits this model.

For the BT530A model, designed for 2016 - 2023 Toyota Tacoma (w/o OE track system or Trail Edition) 5' 1" Bed (60.5"), ensure your truck bed measures approximately 60.5 inches (5 feet, 0.5 inches) from the bulkhead to the inside edge of the tailgate. Round to the closest inch. If your measurement is within a few inches of the specified length, it should be compatible. If it differs by more than 6 inches, re-measure to confirm.

SETUP AND INSTALLATION

Installation of the Roll-N-Lock A-Series Tonneau Cover typically involves mounting the rails and canister to your truck bed. While the installation process is designed to be straightforward, professional installation is recommended for optimal fit and performance. Refer to the detailed installation guide provided with your product for step-by-step instructions specific to your truck model.

Pre-Installation Checklist:

- Verify all components are present as listed in the packing slip.
- Ensure your truck bed is clean and free of debris.
- Confirm truck bed measurements match the product specifications.

- Gather necessary tools (e.g., tape measure, wrenches, drill if required).

General Installation Steps (Consult Full Guide for Details):

1. Position the canister assembly at the front of the truck bed.
2. Attach the side rails to the canister and align them along the bed rails.
3. Secure the rails using the provided clamps or fasteners.
4. Install the drain tubes to direct water away from the bed.
5. Test the cover's operation to ensure smooth retraction and closure.

OPERATING INSTRUCTIONS

The A-Series cover is designed for ease of use, allowing quick access to your truck bed.

Opening the Cover:

- Insert the key into the lock cylinder located at the tailgate end of the cover.
- Turn the key to unlock the cover.
- Turn the lever to release the latching mechanism.
- Gently pull the built-in pull strap towards the bulkhead to retract the cover into its canister. The torsion spring will assist in smooth retraction.
- The cover can be locked in four open positions using the ratchet-style latching mechanism.

Closing and Locking the Cover:

- Pull the cover back towards the tailgate using the pull strap.
- Ensure the cover is fully extended and aligned with the tailgate.
- The four-point locking system will engage automatically when the cover is fully closed and the tailgate is shut, securing your cargo.
- For additional security, ensure your tailgate is also locked.



Image: A user demonstrating easy access to the truck bed with the A-Series cover partially retracted.

MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your Roll-N-Lock A-Series Tonneau Cover.

- **Cleaning:** Clean the cover surface regularly with mild soap and water. Avoid abrasive cleaners or harsh chemicals that could damage the powder-coated aluminum finish.
- **Rail Maintenance:** Keep the side rails free of dirt and debris to ensure smooth operation. Periodically wipe down the rails and apply a silicone-based lubricant if needed.
- **Drain Tubes:** Ensure the drain tubes are clear of obstructions to allow proper water drainage from the canister.
- **Inspection:** Periodically inspect all moving parts, hinges, and the locking mechanism for any signs of wear or damage. Address any issues promptly.

TROUBLESHOOTING

This section addresses common issues you might encounter with your tonneau cover.

Problem	Possible Cause	Solution
Cover does not retract smoothly.	Debris in rails, lack of lubrication, or misaligned rails.	Clean rails thoroughly. Apply silicone-based lubricant to the rails. Check rail alignment and adjust if necessary.
Water leaking into the truck bed.	Improper seal, clogged drain tubes, or damaged weather stripping.	Ensure the cover is properly seated and sealed. Clear any obstructions from drain tubes. Inspect and replace damaged weather stripping.
Locking mechanism not engaging.	Misalignment of cover with tailgate, or debris in lock.	Ensure the cover is fully closed and aligned with the tailgate. Clear any debris from the lock cylinder and latching points.
Cover is difficult to open or close.	Torsion spring issue or excessive friction.	Ensure rails are clean and lubricated. If the issue persists, contact customer support as the torsion spring may require professional adjustment or replacement.

SPECIFICATIONS

- **Brand:** RealTruck
- **Model:** A-Series (BT530A)
- **Style:** Manual Retractable
- **Exterior Finish:** Powder-coated Aluminum
- **Material:** Aluminum
- **Lock Type:** Key, Tailgate (Four-point locking system)
- **Item Weight:** Approximately 95 pounds
- **Product Dimensions:** Approximately 74 x 13 x 12.5 inches (packaged)
- **Compatibility:** Fits 2016 - 2023 Toyota Tacoma (w/o OE track system or Trail Edition) 5' 1" Bed (60.5")
- **Manufacturing:** Made in the USA with Global Materials



Image: "Made in the USA with Global Materials" emblem, indicating the product's origin and component sourcing.

WHAT'S IN THE BOX

Your RealTruck Roll-N-Lock A-Series Tonneau Cover package includes:

- Tonneau cover assembly (pre-assembled canister and cover)
- Side rails (left and right)
- Mounting hardware (clamps, bolts, etc.)
- Drain tubes
- Keys for the lock cylinder
- Detailed installation instructions

WARRANTY AND SUPPORT

RealTruck products are backed by a manufacturer's warranty. For specific warranty details, including coverage period and terms, please refer to the warranty card included with your product or visit the official RealTruck website. For any questions, technical assistance, or warranty claims, please contact RealTruck Customer Support.

Customer Support: [Contact RealTruck Support](#)

Returns: This product is eligible for 30-day easy returns. For more information, please refer to the return policy on the purchase platform.

© 2023 RealTruck. All rights reserved.

For the latest product information and updates, please visit [RealTruck.com](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question