

Grizzly TCLS 2502, TCLS 2503, TCLS 2504, TCLS 2505

Collection Bag Instruction Manual

For ALDI TOPCRAFT Electric Leaf Blower Models

Brand: Grizzly | **Models:** TCLS 2502, TCLS 2503, TCLS 2504, TCLS 2505

1. PRODUCT OVERVIEW

This collection bag is designed as a replacement or accessory for specific ALDI TOPCRAFT electric leaf blower models. It features a durable construction and a convenient zipper for easy emptying of collected leaves and debris.

Key Features:

- Integrated zipper for comfortable and efficient emptying.
- Durable material designed for collecting leaves and light garden debris.
- Specifically compatible with ALDI TOPCRAFT Electric Leaf Blower models TCLS 2502, TCLS 2503, TCLS 2504, TCLS 2505.

2. SETUP AND INSTALLATION

Follow these steps to properly attach the collection bag to your leaf blower.

1. **Ensure Safety:** Before beginning, ensure your leaf blower is turned off and unplugged from the power source to prevent accidental startup.
2. **Identify Attachment Point:** Locate the collection bag attachment point on your ALDI TOPCRAFT leaf blower. This is typically a circular or oval opening where the vacuumed debris is directed.
3. **Align the Bag:** Take the collection bag and align its opening with the attachment point on the leaf blower. The bag's plastic collar or connector should fit snugly into the blower's port.
4. **Secure the Bag:** Depending on your specific leaf blower model, secure the bag using the integrated clips, latches, or straps. Ensure the connection is firm and there are no gaps that could allow debris to escape. Refer to your leaf blower's original manual for specific attachment mechanisms if needed.
5. **Check Connection:** Gently tug on the bag to confirm it is securely attached and will not detach during operation.



Image 2.1: A close-up view of the collection bag's rigid plastic collar, designed to connect to the leaf blower's intake port. This image shows the opening and the securing clips.



Image 2.2: An interior perspective of the collection bag's attachment collar, illustrating the smooth inner surface and the mechanism for securing it to the leaf blower. This view highlights the robust construction of the connection point.

3. OPERATING INSTRUCTIONS

Once the collection bag is securely attached, you can begin using your leaf blower in vacuum mode.

1. **Power On:** Plug in your leaf blower and turn it on, ensuring it is set to vacuum mode (if applicable).
2. **Begin Vacuuming:** Direct the leaf blower's intake nozzle towards the leaves and debris you wish to collect. The vacuumed material will be drawn into the collection bag.
3. **Monitor Bag Fill Level:** Periodically check the collection bag to ensure it does not become overfilled. An overfilled bag can reduce vacuuming efficiency and put strain on the leaf blower motor.
4. **Emptying the Bag:** When the bag is full, turn off and unplug the leaf blower. Locate the zipper on the collection bag. Unzip the bag completely and empty the contents into a compost bin or waste receptacle.
5. **Re-secure Zipper:** After emptying, ensure the zipper is fully closed before resuming operation.



Image 3.1: A complete view of the black collection bag, showcasing its overall shape, the integrated zipper for emptying, and the attachment point. This image provides a general understanding of the product's design.

4. MAINTENANCE AND CARE

Proper maintenance will extend the life of your collection bag.

- **Cleaning:** After each use, especially when collecting damp debris, empty the bag completely. If necessary, you can gently shake out any remaining dust or small particles. For heavier dirt, the bag can be hand-washed with mild soap and water. Allow it to air dry completely before storage or next use.
- **Inspection:** Periodically inspect the bag for any signs of wear, tears, or damage, particularly around the zipper and attachment points.
- **Storage:** Store the collection bag in a clean, dry place, away from direct sunlight and extreme temperatures. Ensure it is completely dry before storing to prevent mold or mildew growth.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with the collection bag.

Problem	Possible Cause	Solution
Bag not collecting debris efficiently.	Bag is full or partially blocked. Bag not securely attached.	Empty the bag. Check for blockages in the bag or leaf blower intake. Re-attach the bag securely, ensuring no gaps.
Debris escaping from the bag.	Zipper is not fully closed. Bag is damaged (tear or hole). Bag not securely attached to blower.	Ensure zipper is completely closed. Inspect bag for damage; replace if necessary. Re-attach the bag securely.
Difficulty zipping/unzipping.	Debris caught in zipper. Zipper mechanism is stiff.	Clear any debris from the zipper teeth. Apply a small amount of zipper lubricant (e.g., silicone spray) if needed.

6. SPECIFICATIONS

Detailed specifications for the Grizzly Collection Bag.

- **Brand:** Grizzly
- **Compatible Devices:** ALDI TOPCRAFT Electric Leaf Blower TCLS 2502, TCLS 2503, TCLS 2504, TCLS 2505
- **Material:** Durable Fabric (Note: Source data indicated 'metal', which is likely an error for the bag itself. The bag is made of fabric, with plastic/metal components for attachment.)
- **Color:** Black
- **Number of Items:** 1
- **First Available Date:** January 15, 2020




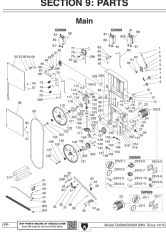


7. WARRANTY AND SUPPORT

For warranty information or technical support regarding this collection bag, please refer to the documentation provided with your original ALDI TOPCRAFT leaf blower or contact the manufacturer, Grizzly, directly. Contact details for Grizzly may be found on their official website or through your purchase retailer.

Please retain your proof of purchase for any warranty claims.

© 2024 Grizzly. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

<p>Grizzly Charcoal Oven</p>  <p>Instruction Manual Please read these instructions carefully before using this appliance.</p>	<p>Grizzly Charcoal Oven Instruction Manual</p> <p>Comprehensive instruction manual for the Grizzly Charcoal Oven, covering safety guidelines, operation, cleaning, cooking techniques, pellet burner use, trolley assembly, and warranty information.</p>
	<p>Grizzly G0942/G0943 Extreme-Series Air Compressors Owner's Manual</p> <p>Comprehensive owner's manual for Grizzly G0942 and G0943 Extreme-Series Air Compressors. Includes safety, setup, operation, maintenance, troubleshooting, and parts information.</p>
	<p>Grizzly G0674 12" Sliding Table Saw Owner's Manual</p> <p>Comprehensive owner's manual for the Grizzly G0674 12" Sliding Table Saw. Includes setup guides, operating instructions, maintenance procedures, safety warnings, parts breakdown, and troubleshooting tips.</p>
	<p>Grizzly G0568/G0569 Bandsaw Parts List and Diagrams</p> <p>Comprehensive parts list, diagrams, and label placement guide for Grizzly Industrial G0568 and G0569 bandsaws. Includes detailed part numbers and descriptions for all components, essential for maintenance and repair.</p>
	<p>Grizzly G0774 Automatic Edgebander Owner's Manual</p> <p>Comprehensive owner's manual for the Grizzly G0774 Automatic Edgebander, detailing safety, setup, operation, maintenance, and troubleshooting for woodworking professionals.</p>
	<p>Grizzly G0506X/G0506X3 Extreme Series Super Heavy-Duty Bandsaws Owner's Manual</p> <p>This owner's manual provides essential safety instructions, setup procedures, operation guidelines, maintenance schedules, and service information for the Grizzly G0506X and G0506X3 Extreme Series Super Heavy-Duty Bandsaws.</p>