

Della 048-GM-48237

DELLA 048-GM-48237 10 Quart 1400W 8-in-1 Programmable Electric Pressure Cooker User Manual

1. PRODUCT OVERVIEW

The DELLA 048-GM-48237 is a versatile 10-quart electric pressure cooker designed to simplify meal preparation. This 8-in-1 appliance combines the functions of a pressure cooker, slow cooker, food steamer, rice cooker, sauté pan, and soup maker, offering a quick and energy-efficient cooking solution. It features a 1400W heating element, automatic keep-warm function, and a safety lid lock mechanism.

The unit operates by trapping high-pressure steam, which cooks food evenly, seals in nutrients, and retains flavor. Its digital control panel provides preset programs for various food types, making it user-friendly for a range of culinary tasks.



Figure 1.1: Overall view of the DELLA 10 Quart Electric Pressure Cooker, showcasing its stainless steel exterior and control panel.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions thoroughly before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance cooks under pressure. Improper use may result in scalding injury. Make certain unit is properly closed before operating.
- Never force open the pressure cooker. Ensure internal pressure is completely released before opening.
- Do not fill the unit over 2/3 full. When cooking foods that expand during cooking, such as rice or dried vegetables, do not fill the unit over 1/2 full.
- Always check the pressure release valve and float valve for clogging before use.

3. COMPONENTS AND FEATURES

Familiarize yourself with the various parts of your DELLA Electric Pressure Cooker:

1. **Main Unit:** The stainless steel exterior housing the heating element and control panel.
2. **Lid:** Features a safety lock, steam release valve, and float valve. It must be properly sealed for pressure cooking.
3. **Inner Pot:** A removable, non-stick pot where food is cooked. It has measurement markings.
4. **Control Panel:** Digital display and buttons for selecting cooking programs and settings.
5. **Steam Release Valve:** Controls the release of steam and pressure.
6. **Float Valve:** Indicates when the cooker is pressurized.
7. **Water Catcher:** Collects condensation.
8. **Accessories:** Includes a stainless steel rack, measuring cup, and spoon.



Figure 3.1: The pressure cooker with its lid open, showing the inner pot and the lid's internal components.



Figure 3.2: A view into the pressure cooker, highlighting the removable inner pot.



Figure 3.3: Close-up of the digital control panel with various preset cooking functions and display.



Figure 3.4: Detailed view of the inner pot, showing the capacity markings for easy measurement.



Figure 3.5: Close-up of the steam release valve on the lid, indicating 'Exhaust' and 'Airtight' positions.



Figure 3.6: Included accessories: a measuring cup and a serving spoon.

4. SETUP AND FIRST USE

4.1 Unpacking

- Carefully remove all contents from the packaging.
- Remove any packaging materials, stickers, or labels from the appliance.
- Retain the packaging for future storage or shipping.

4.2 Initial Cleaning

- Before first use, wash the inner pot, lid, and accessories (measuring cup, spoon, rack) with warm, soapy water. Rinse thoroughly and dry completely.
- Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

4.3 Placement

- Place the pressure cooker on a stable, level, heat-resistant surface, away from walls or cabinets to allow for

proper ventilation.

- Ensure the power cord is not obstructed or near hot surfaces.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation Steps

1. **Prepare Ingredients:** Place your food and required liquid into the inner pot. Ensure the liquid meets the minimum requirement for pressure cooking (typically 1 cup for most recipes) and do not exceed the MAX fill line (2/3 full, or 1/2 full for expanding foods).
2. **Insert Inner Pot:** Place the inner pot into the main unit.
3. **Close Lid:** Place the lid on the cooker, aligning the arrow on the lid with the 'OPEN' indicator on the base. Rotate the lid clockwise until the arrow aligns with the 'CLOSE' indicator. The lid should lock securely.
4. **Set Steam Release Valve:** Ensure the steam release valve is in the 'Airtight' (sealing) position for pressure cooking.
5. **Plug In:** Connect the power cord to a grounded electrical outlet. The display will illuminate.
6. **Select Cooking Program:** Press the desired preset function button on the control panel (e.g., Fish, Rice, Meat/Chicken, Baby Cereals, Cake, Tendon/Bean, Soup, Congee). The corresponding indicator light will illuminate.
7. **Adjust Settings (if applicable):** Some programs may allow for pressure level adjustments (Standard, Delicate, Rich) or delayed start ('Preset'). Refer to specific recipe requirements.
8. **Start Cooking:** The cooker will automatically begin the preheating phase, then build pressure. The float valve will rise when pressure is reached.
9. **Cooking Completion:** Once the cooking cycle is complete, the cooker will beep and automatically switch to the 'Keep Warm' function.
10. **Release Pressure:** There are two methods for pressure release:
 - **Natural Release:** Allow the pressure to dissipate naturally. This is recommended for foamy foods or large cuts of meat. The float valve will drop on its own.
 - **Quick Release:** Carefully turn the steam release valve to the 'Exhaust' position. **Caution:** Hot steam will be released. Keep hands and face away from the valve. The float valve will drop once pressure is fully released.
11. **Open Lid:** Once the float valve has dropped, rotate the lid counter-clockwise to the 'OPEN' position and lift it away from you to avoid residual steam.

5.2 Preset Functions

The DELLA 048-GM-48237 offers 8 preset cooking programs:

- **Fish:** Optimized for cooking various types of fish.
- **Rice:** For preparing perfect rice.
- **Meat/Chicken:** Ideal for tenderizing meats and poultry.
- **Baby Cereals:** Gentle cooking for baby food.
- **Cake:** For baking cakes and desserts.
- **Tendon/Bean:** Longer cooking times for tougher ingredients.
- **Soup:** For preparing various soups and broths.
- **Congee:** Specialized setting for congee or porridge.

Additionally, the cooker features:

- **Keep Warm:** Automatically activates after cooking to maintain food temperature.
- **Preset (Delay Start):** Allows you to set a delayed start time for cooking.
- **Cancel:** Stops the current cooking program.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your pressure cooker.

6.1 After Each Use

- **Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- **Inner Pot:** Remove the inner pot and wash it with warm, soapy water. It is dishwasher safe.
- **Lid:** Wash the lid, including the sealing ring, float valve, and steam release valve, with warm, soapy water. Ensure all food particles are removed from the valves. The sealing ring can be removed for thorough cleaning.
- **Water Catcher:** Empty and clean the water catcher.
- **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Never immerse the main unit in water.
- **Accessories:** Wash the measuring cup, spoon, and stainless steel rack with warm, soapy water.
- **Dry Thoroughly:** Ensure all parts are completely dry before reassembling and storing.

6.2 Storage

Store the pressure cooker in a dry place. For best results, place the lid upside down on the inner pot to prevent odors and allow air circulation.

7. TROUBLESHOOTING

If you encounter issues with your pressure cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooker not building pressure / Steam leaking from lid	Lid not properly closed; Sealing ring not correctly installed or damaged; Steam release valve in 'Exhaust' position; Food debris on sealing ring or rim.	Ensure lid is fully locked; Check sealing ring for proper placement and damage; Turn steam release valve to 'Airtight'; Clean sealing ring and rim.
Float valve not rising	Insufficient liquid; Lid not sealed; Float valve clogged.	Add more liquid; Ensure lid is properly closed and sealed; Clean float valve.
Lid cannot be opened after cooking	Internal pressure has not been fully released.	Ensure float valve has dropped completely. If not, release remaining pressure using the steam release valve or allow natural release. Never force the lid open.
Food is undercooked	Insufficient cooking time; Not enough liquid; Incorrect program selected.	Increase cooking time; Ensure adequate liquid; Select appropriate program for the food type.
Display shows error code	Specific internal malfunction.	Unplug the cooker, wait a few minutes, then plug it back in. If the error persists, contact customer support.

8. SPECIFICATIONS

- **Model Number:** 048-GM-48237
- **Capacity:** 10 Quarts
- **Power:** 1400W
- **Voltage:** 120V / 60Hz
- **Material:** Stainless Steel and Aluminum
- **Dimensions (Overall):** Approximately 17" (W) x 15" (L) x 14-3/4" (H)
- **Certifications:** ETL, CSA, UL
- **Functions:** 8-in-1 (Fish, Rice, Meat/Chicken, Baby Cereals, Cake, Tendon/Bean, Soup, Congee)

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact the retailer/manufacturer directly. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2023 Della. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

