

Sykik SYDVD9116

Sykik SYDVD9116 Portable DVD Player with Digital TV Tuner User Manual

Model: SYDVD9116

INTRODUCTION

Thank you for purchasing the Sykik SYDVD9116 Portable DVD Player with Digital TV Tuner. This device combines a versatile DVD player with a 10.1-inch swivel screen and an integrated ATSC digital TV tuner, allowing you to enjoy movies, music, and television on the go. This manual provides essential information for safe operation, setup, and maintenance of your device. Please read it thoroughly before use and retain it for future reference.

SAFETY INFORMATION

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Avoid placing the unit near heat sources such as radiators, heat registers, stoves, or other heat-producing appliances.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Keep the unit away from strong magnetic fields.
- Do not attempt to open the casing; there are no user-serviceable parts inside.

PACKAGE CONTENTS

Please check the package for the following items:

- Sykik SYDVD9116 Portable DVD Player with Digital TV Tuner
- Matching Color Headphones
- Remote Control

- AC Power Adapter (Home Adapter)
- Car Power Adapter (Vehicle Adapter)
- RCA Cable
- Digital TV ATSC Antenna
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components of your portable DVD player.



Image: The Sykik SYDVD9116 Portable DVD Player shown open, displaying a car on its 10.1-inch screen. Included are a pair of black over-ear headphones and a detachable digital TV antenna. This image illustrates the main components of the product.

Key Features:

- **10.1-inch High Contrast TV / DVD Display:** 1024 x 600 resolution screen that rotates 180 degrees for optimal viewing angles.
- **Digital TV ATSC Tuner:** Integrated tuner for receiving over-the-air digital television broadcasts.
- **Multi-Region DVD Playback:** Compatible with DVDs from all regions.
- **Media Compatibility:** Supports CD, DVD, DVD+, R/RW, VCD, MP3, WMA, VOB, AVI, MPEG1, XVID, JPEG.
- **Built-in Rechargeable Battery:** Provides up to 3 hours of playback per charge.
- **Connectivity:** USB port, SD card reader, 3.5mm headphone jack, RCA input/output.
- **Anti-Shock & Anti-Skip System:** Ensures smooth playback during movement.

SETUP

1. Charging the Battery

Before first use, fully charge the internal lithium polymer battery. Connect the AC power adapter to the DC IN port on the player and plug it into a standard wall outlet. The charging indicator light will illuminate. Charging typically takes several hours. The unit can be used while charging.

2. Connecting Power Adapters

- **AC Power Adapter:** For home use, connect the AC adapter to the DC IN port and a wall outlet.
- **Car Power Adapter:** For in-vehicle use, connect the car adapter to the DC IN port and your vehicle's 12V power socket (cigarette lighter).

3. Connecting the Digital TV Antenna

To receive digital TV broadcasts, screw the provided ATSC antenna into the ANT IN port on the player. Extend the antenna fully for best reception. For stronger signals, an external antenna can be connected.

4. Connecting Headphones

Plug the included headphones into the 3.5mm headphone jack for private listening. The built-in speakers will automatically mute when headphones are connected.

5. Connecting External Devices (Optional)

- **RCA Output:** Use the RCA cable to connect the player's AV OUT to a larger TV or monitor for displaying content.
- **RCA Input:** Use the RCA cable to connect an external video source (e.g., game console) to the player's AV IN to use its screen as a monitor.

OPERATING INSTRUCTIONS

1. Power On/Off

Slide the POWER switch to the ON position to turn on the player. The screen will illuminate. To turn off, slide the POWER switch to the OFF position.

2. DVD Playback

1. Open the disc cover gently.
2. Place a DVD or CD disc onto the spindle with the label side facing up.
3. Close the disc cover.
4. The player will automatically detect and begin playing the disc. If a menu appears, use the directional buttons on the player or remote to navigate and select your desired option.
5. Use the PLAY/PAUSE, STOP, FORWARD, and REVERSE buttons for playback control.

3. Digital TV Operation

1. Ensure the ATSC antenna is properly connected and extended.
2. Turn on the player.
3. Press the SOURCE button to select the TV input.
4. The first time you use the TV function, you will need to perform an auto-scan for channels. Navigate to the TV menu using the MENU button and select "Auto Scan" or "Channel Search."
5. Once scanning is complete, use the CH+/CH- buttons to change channels.

4. USB/SD Card Playback

1. Insert a USB flash drive into the USB port or an SD card into the SD card slot.
2. Press the SOURCE button to select USB or SD input.
3. A file browser will appear. Use the directional buttons to navigate through your files (videos, music, photos) and press ENTER to select and play.

5. Screen Adjustment

The 10.1-inch screen can be tilted and swiveled up to 180 degrees. Adjust the screen to your preferred viewing angle for comfort and optimal visibility.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the unit's exterior. For the screen, use a soft, lint-free cloth specifically designed for electronics screens. Do not use liquid cleaners or abrasive materials.
- **Disc Care:** Handle discs by their edges. Keep them clean and free of scratches. Store discs in their cases when not in use.

- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. If storing the unit for an extended period, charge the battery to about 50% and recharge every few months.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery discharged; Power adapter not connected; Power switch off.	Charge the battery; Connect power adapter; Slide power switch to ON.
No picture on screen	Screen brightness too low; Incorrect source selected; Unit in standby mode.	Adjust brightness; Press SOURCE button to select correct input; Press POWER button to wake up.
No sound	Volume too low; Headphones connected; Mute function active.	Increase volume; Disconnect headphones if using speakers; Press MUTE button on remote.
Disc not playing	Disc inserted incorrectly; Disc dirty or scratched; Incompatible disc format.	Reinsert disc correctly; Clean or replace disc; Check disc format compatibility.
Poor TV reception	Antenna not extended; Weak signal; No channel scan performed.	Extend antenna fully; Reposition unit/antenna; Perform auto-scan for channels.
Remote control not working	Batteries dead or inserted incorrectly; Obstruction between remote and player.	Replace batteries, ensure correct polarity; Remove obstructions, point remote directly at sensor.

SPECIFICATIONS

- **Model:** SYDVD9116
- **Screen Size:** 10.1 Inches
- **Display Type:** LCD
- **Resolution:** 1024 x 600
- **Battery:** Built-in rechargeable lithium polymer (up to 3 hours playback)
- **Media Compatibility:** CD, DVD, DVD+, R/RW, VCD, MP3, WMA, VOB, AVI, MPEG1, XVID, JPEG
- **Connectivity:** USB, SD Card Slot, 3.5mm Headphone Jack, RCA AV In/Out
- **Power Input:** Dual-voltage (100V-240V, 50/60Hz)
- **Item Weight:** Approximately 4.39 pounds
- **Package Dimensions:** Approximately 12.8 x 9.4 x 6.9 inches

WARRANTY AND SUPPORT

Sykik products are designed for reliability and performance. For information regarding warranty coverage, technical support, or service inquiries, please refer to the warranty card included with your purchase or visit the official Sykik website. Please have your model number (SYDVD9116) and purchase date available when contacting support.

