

Sykik SYDVD9113TV

Sykik SYDVD9113TV 15.6-inch Portable TV/DVD Player Instruction Manual

Model: SYDVD9113TV

INTRODUCTION

This manual provides detailed instructions for the proper setup, operation, and maintenance of your Sykik SYDVD9113TV 15.6-inch Portable TV/DVD Player. Please read this manual thoroughly before using the device to ensure optimal performance and longevity.

PACKAGE CONTENTS

Upon unpacking, please verify that all the following items are included:

- Sykik SYDVD9113TV 15.6-inch Portable TV/DVD Player
- AC Power Adapter (100V-240V, 50/60Hz)
- Vehicle Power Adapter (Car Adapter)
- Stereo Headphones
- Remote Control
- External Antenna (for TV function)
- Car Headrest Straps



Figure 1: The Sykik SYDVD9113TV portable player shown with its screen open, accompanied by the included headphones and external antenna.

SETUP INSTRUCTIONS

1. Powering On

1. **Charging the Battery:** Before first use, fully charge the built-in rechargeable lithium polymer battery using the provided AC power adapter. Connect the adapter to the player's DC input and plug it into a standard wall outlet. The charging indicator will illuminate.
2. **Connecting to Power:** For extended use, connect the AC power adapter or the vehicle power adapter (for car use) to the player's DC input.
3. **Turning On:** Press the **POWER** button on the player or the remote control to turn on the device.

2. Connecting Peripherals

- **Headphones:** Plug the included stereo headphones into the 3.5mm headphone jack for private listening.
- **USB Devices:** Insert a USB flash drive into the USB port to play compatible media files.
- **SD Cards:** Insert an SD card into the SD card slot to play compatible media files.

3. Antenna Connection (for TV Function)

To utilize the built-in Digital TV ATSC Tuner, connect the external antenna to the designated antenna input port on the player. Extend the antenna fully for optimal signal reception.

OPERATING INSTRUCTIONS

1. Basic Controls

- **Power:** Press the **POWER** button to turn the unit on or off.
- **Volume:** Use the **VOL+** and **VOL-** buttons to adjust the audio volume.
- **Mode:** Press the **MODE** button to switch between DVD, TV, USB, and SD card input modes.

2. DVD/CD Playback

1. Open the disc compartment.
2. Carefully place a compatible disc (CD, DVD, DVD+, R/RW, VCD) onto the spindle with the label side facing up.
3. Close the disc compartment.
4. Ensure the player is in DVD mode (select via **MODE** button if necessary).
5. Playback should begin automatically. Use the remote control or player buttons for functions like Play, Pause, Stop, Skip, and Fast Forward/Rewind.

3. TV Function (ATSC Tuner)

1. Ensure the external antenna is connected and positioned for best reception.
2. Switch the player to TV mode using the **MODE** button.
3. Perform a channel scan if prompted or if channels are not found. Refer to the on-screen menu for channel scanning options.
4. Use the **PROG SEARCH** or channel up/down buttons to navigate channels.

4. Media Playback (USB/SD)

1. Insert your USB flash drive or SD card into the respective port.
2. Switch the player to USB or SD mode using the **MODE** button or the **SD/USB** button on the remote.
3. Navigate through your files using the directional buttons and **ENTER** button on the player or remote.
4. Supported formats include MP3, WMA, VOB, AVI, MPEG1, XVID, JPEG.

5. Screen Adjustment

The 15.6-inch TFT screen can tilt and swivel up to 180 degrees to provide an optimum viewing angle. Adjust the screen gently to your desired position.

6. Remote Control Usage

The included remote control provides full functionality for the player. Ensure clear line of sight to the player's IR receiver when using the remote.





Figure 2: The remote control for the Sykik SYDVD9113TV, showing various function buttons for power, volume, mode selection, playback, and menu navigation.

MAINTENANCE

1. Cleaning

- **Screen:** Use a soft, lint-free cloth specifically designed for electronics screens. Do not use abrasive cleaners or sprays directly on the screen.

- **Unit Body:** Wipe the exterior with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed by a dry cloth.
- **Disc Compartment:** Keep the disc compartment free of dust and debris.

2. Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- If storing the device for an extended period, charge the battery to approximately 50% and store in a cool, dry place.

3. Storage

Store the player in a cool, dry environment, away from direct sunlight, extreme temperatures, and high humidity. Use the original packaging or a protective case when transporting the device.

TROUBLESHOOTING

- **No Power:**
 - Ensure the AC adapter is securely connected to both the player and a working power outlet.
 - Check if the battery is charged. If not, charge it for at least 30 minutes before attempting to power on.
- **No Disc Playback:**
 - Verify the disc is clean and free of scratches or smudges.
 - Ensure the disc is inserted correctly with the label side facing up.
 - Confirm the player is in DVD mode.
 - The player features Electronic Anti Shock & Anti Skip System, but excessive movement can still affect playback.
- **No TV Signal:**
 - Ensure the external antenna is securely connected.
 - Adjust the antenna's position for better reception.
 - Perform a channel scan in the TV menu.
 - Signal strength can vary based on location.
- **No Sound:**
 - Check the volume level.
 - If using headphones, ensure they are fully plugged in and functioning.
 - Verify the MUTE function is not activated.
- **USB/SD Card Not Recognized:**
 - Ensure the USB device or SD card is inserted correctly.
 - Verify the player is in the correct USB or SD mode.
 - Check if the file format is supported (MP3, WMA, VOB, AVI, MPEG1, XVID, JPEG).
 - Try a different USB device or SD card.

PRODUCT SPECIFICATIONS

Feature	Specification
Brand	Sykik
Model Number	SYDVD9113TV
Screen Size	15.6 Inches

Display Type	High Contrast LCD, 180-degree swivel
Resolution	1366 x 768
Media Compatibility	CD, DVD, DVD+, R/RW, VCD, MP3, WMA, VOB, AVI, MPEG1, XVID, JPEG
Tuner	Digital TV ATSC Tuner
Ports	USB, SD Card Slot, 3.5mm Headphone Jack
Battery	Built-in rechargeable lithium polymer, up to 3 hours playback
Power Input	Dual-voltage (100V-240V, 50/60Hz)
Item Weight	5.34 pounds
Dimensions (approx.)	18 x 11.6 x 7.2 inches (Product), 21.5 x 11.5 x 3.25 inches (Package)

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or contact Sykik customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.