

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Alcatel](#) /
- › [Alcatel Pixi 4 \(4.5\) 4060S User Manual](#)

Alcatel 5045I-2AALUS1

Alcatel Pixi 4 (4.5) 4060S User Manual

Model: 5045I-2AALUS1 | Brand: Alcatel

INTRODUCTION

This manual provides essential instructions for setting up, operating, and maintaining your Alcatel Pixi 4 (4.5) 4060S smartphone. Please read this guide thoroughly to ensure proper usage and to maximize your device's capabilities.

1. SETUP

1.1 Unboxing and Initial Inspection

Upon unboxing, verify that all components listed in the "What's in the Box" section are present and undamaged.





Figure 1: Front view of the Alcatel Pixi 4 (4.5) 4060S smartphone, displaying its screen and front camera.

1.2 Inserting SIM Card and MicroSD Card

The Alcatel Pixi 4 (4.5) 4060S supports a SIM card for cellular connectivity and a MicroSD card for expandable storage. Locate the SIM/MicroSD card tray on the side of the device. Use the provided SIM ejector tool to open the tray. Carefully place your SIM card(s) and MicroSD card into their respective slots, ensuring correct orientation. Close the tray securely.

1.3 Charging the Device

Before first use, fully charge your device. Connect the provided USB cable to the phone's charging port (located at the bottom) and the other end to the charger. Plug the charger into a power outlet. The battery indicator on the screen will show charging progress.





 


Figure 2: Side view of the Alcatel Pixi 4 (4.5) 4060S, showing the volume and power buttons.

1.4 Powering On/Off

To power on, press and hold the Power button (located on the side) until the Alcatel logo appears. To power off, press and hold the Power button, then select "Power off" from the options on the screen.

2. OPERATING YOUR DEVICE

2.1 Touchscreen Navigation

The device features a responsive touchscreen. Use gestures such as tap, swipe, pinch-to-zoom, and long-press to navigate the interface, open applications, and interact with content.

2.2 Making Calls and Sending Messages

Tap the Phone icon to access the dialer and make calls. Tap the Messages icon to compose and send text messages. Ensure your SIM card is properly inserted and activated for cellular services.

2.3 Camera Functions

The Alcatel Pixi 4 (4.5) 4060S is equipped with a 5MP main camera with auto-focus and a 2MP front camera with flash. Open the Camera app to capture photos and videos. Various shooting modes are available to enhance your pictures.





Figure 3: Back view of the Alcatel Pixi 4 (4.5) 4060S, highlighting the main camera and flash.

2.4 Internet and Applications

Connect to Wi-Fi or use 4G LTE for internet access. The device runs on Android 6.0, providing access to the Google Play Store for downloading a wide range of applications, including social media, entertainment, and productivity tools.

2.5 Using Headphones

A standard 3.5mm headphone jack is located at the top of the device. Plug in your headphones or headset to enjoy music or for private calls.

3. MAINTENANCE

3.1 Battery Management

The device is powered by a 2000mAh Lithium Ion battery. To optimize battery life, utilize the battery saving mode available in the device settings. Avoid extreme temperatures and prolonged exposure to direct sunlight.

3.2 Storage Management

The phone comes with 16GB of internal storage. You can expand this by inserting a MicroSD card into the dedicated slot. Regularly manage your files and applications to free up space and maintain optimal performance.

4. TROUBLESHOOTING

- **Device not powering on:** Ensure the battery is charged. Connect the charger and attempt to power on again.
- **No network service:** Check if the SIM card is correctly inserted and activated. Verify network coverage in your area.
- **Applications freezing/crashing:** Close background applications. Restart the device. If the issue persists, consider uninstalling and reinstalling the problematic app.
- **Slow performance:** Clear cache, uninstall unused apps, and ensure sufficient storage space.

5. SPECIFICATIONS

Feature	Detail
Model Name	Pixi 4
Item Model Number	5045I-2AALUS1
Operating System	Android 6.0
Screen Size	5 Inches
Display Resolution	1280 x 720 (HD)
RAM Memory Installed Size	1.5 GB
Memory Storage Capacity	32 GB (internal, expandable)
CPU Model	Quad Core 2.26GHz
CPU Speed	1.1 GHz
Rear Camera	5 MP (with auto-focus)
Front Camera	2 MP (with flash)
Battery Capacity	2000 Milliamp Hours
Wireless Communication Technologies	Cellular, Wi-Fi
Dimensions	5.54 x 0.37 x 2.85 inches
Item Weight	5.9 ounces
Color	Black

6. WHAT'S IN THE BOX

- Handset
- Battery
- Charger
- USB Cable
- Quick Start Guide
- PSI (Product Safety Information)

7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your device or visit the official Alcatel support website. Keep your proof of purchase for warranty claims.