

## DJI CP.PT.000591

# DJI Mavic Pro Portable Shoulder Bag Instruction Manual

Model: CP.PT.000591

Brand: DJI

## 1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your DJI Mavic Pro Portable Shoulder Bag. Designed for convenience and protection, this bag allows you to transport your DJI Mavic Pro drone and its accessories securely.

## 2. KEY FEATURES

- **Dedicated Design:** Specifically tailored for DJI Mavic series drones and their accessories.
- **Portability:** Lightweight and compact for easy transport.
- **Shoulder Carry:** Equipped with a comfortable shoulder strap for hands-free carrying.
- **Organized Storage:** Multiple compartments designed to hold various components securely.

## 3. WHAT'S IN THE BOX

- DJI Mavic Pro Shoulder Bag ×1

## 4. SETUP

The DJI Mavic Pro Portable Shoulder Bag comes ready for immediate use. To prepare your bag:

1. **Attach Shoulder Strap:** Locate the shoulder strap and securely attach its clips to the D-rings on either side of the bag. Ensure clips are fully engaged.
2. **Adjust Strap Length:** Adjust the strap length to your preferred carrying height for comfort and stability.

## 5. USAGE

The bag is designed for efficient and secure transport of your drone equipment. Follow these guidelines for optimal use:

### 5.1 Storing Equipment

The main compartment features custom-fit sections to cradle your drone and essential accessories. Additional pockets are available for smaller items.



Figure 1: Front view of the DJI Mavic Pro Portable Shoulder Bag. The bag is black with a textured finish and features a top handle, a zippered front flap, and the DJI logo at the bottom right.

- **Main Compartment:** Carefully place your folded DJI Mavic Pro aircraft into the designated padded slot.
- **Controller Slot:** Insert your remote controller into its dedicated padded section.
- **Battery Pockets:** Utilize the side mesh pockets or internal compartments for up to 4 batteries.
- **Accessory Pockets:** Use the zippered front pocket and internal mesh pockets for a smartphone, cables, propellers, and other small accessories.

### 5.2 Carrying Options

- **Shoulder Bag:** Wear the bag comfortably over your shoulder using the adjustable strap.
- **Hand Carry:** Use the sturdy top handle for quick and easy transport.

## 6. CAPACITY

---

The DJI Mavic Pro Portable Shoulder Bag is designed to hold the following items:

- 1 DJI Mavic Pro aircraft
- 1 remote controller
- Up to 4 batteries
- 1 smartphone
- Smaller accessories such as cables, propellers, and memory cards.



Figure 2: Angled view of the DJI Mavic Pro Portable Shoulder Bag, highlighting its compact form factor and the textured material. The DJI logo is visible on the front flap.

## 7. MAINTENANCE

---

- **Cleaning:** Wipe the exterior with a damp cloth and mild soap if necessary. Avoid harsh chemicals.
- **Drying:** Allow the bag to air dry completely before storing equipment to prevent moisture damage.
- **Storage:** Store the bag in a cool, dry place away from direct sunlight when not in use.

## 8. TROUBLESHOOTING

- **Tight Fit:** If your drone or accessories feel too tight, ensure all items are correctly folded and placed in their designated compartments. The bag is specifically designed for the DJI Mavic Pro. Compatibility with other models (e.g., Mavic 2, Mini series) may vary, and a tight fit could occur.
- **Strap Issues:** Ensure the shoulder strap clips are fully secured to the D-rings. If the strap is frayed or damaged, discontinue use and consider replacement.

## 9. SPECIFICATIONS

Attribute	Detail
Product Dimensions	9 x 5.3 x 6.5 inches (17.5 x 12.5 x 21 cm)
Item Weight	1 pounds (0.45 kg)
Item Model Number	CP.PT.000591
Compatibility	DJI Mavic Pro
Maximum Weight Capacity	3 kg
Manufacturer	DJI Europe B.V.

## 10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official DJI website or contact your authorized DJI retailer. Keep your purchase receipt for warranty claims.