

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Channellock](#) /

› [Channellock 3-Speed 3-Position 550 CFM Air Mover Blower Fan \(Model AM201 2001\) Instruction Manual](#)

Channellock AM201 2001

Channellock 3-Speed 3-Position 550 CFM Air Mover Blower Fan (Model AM201 2001) Instruction Manual

Your guide to safe and effective operation.

IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before operating this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always plug the air mover into a grounded 120V AC outlet.
- Do not operate the air mover with a damaged cord or plug. If the cord or plug is damaged, contact qualified service personnel.
- Keep children and pets away from the air mover during operation.
- Do not use the air mover in standing water or excessively wet conditions.
- Ensure the air intake and exhaust are clear of obstructions.
- Unplug the air mover before cleaning or performing any maintenance.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

PRODUCT OVERVIEW

The Channellock AM201 2001 Air Mover is designed for efficient air circulation and drying tasks. It features a robust motor and versatile positioning options.



Figure 1: Front-side view of the Channellock AM201 2001 Air Mover, showing the control knob and air outlet.

Key Features:

- **Powerful Motor:** 1.3 amp induction motor.
- **Variable Speed:** 3 speed settings for controlled airflow.
- **Multi-Position Operation:** Can be tilted to 3 positions for versatile drying.
- **Integrated Outlets:** Two 120V grounded power receptacles.
- **Safety Breaker:** Built-in circuit breaker with reset button.
- **Long Power Cord:** 12-foot power cord with convenient cord storage.
- **Portability:** Skid-resistant rubber feet and a carrying handle for easy transport.
- **Linkable Design:** Multiple units can be linked to cover larger areas.

SETUP

1. **Unpack:** Carefully remove the air mover from its packaging. Inspect for any shipping damage.
2. **Placement:** Position the air mover on a stable, level surface. Ensure the air intake and exhaust are not blocked. The unit can be placed flat, angled, or upright to direct airflow as needed.
3. **Power Connection:** Extend the 12-foot power cord and plug it into a standard 120V grounded

electrical outlet.

4. **Daisy-Chaining (Optional):** If using multiple units, plug additional air movers into the integrated 120V grounded power receptacles on the primary unit. Ensure the total current draw does not exceed the circuit breaker's rating.



Figure 2: The air mover positioned inside a kitchen cabinet, demonstrating its compact size and ability to dry confined spaces.

OPERATING INSTRUCTIONS

1. **Power On:** Once plugged in, turn the control knob located on the top of the unit to select the desired speed setting (Low, Medium, High).
2. **Adjust Position:** The air mover can be operated in three different positions:
 - **Flat:** For drying floors or large horizontal surfaces.
 - **Angled:** For drying walls, stairs, or specific areas.
 - **Upright:** For drying ceilings or directing airflow upwards.Adjust the unit's orientation to best suit your drying needs.
3. **Monitor Operation:** Allow the air mover to operate until the desired area is dry. Periodically check the progress.
4. **Power Off:** Turn the control knob to the "OFF" position when drying is complete. Unplug the unit from the power outlet.



Figure 3: The air mover positioned on the floor and angled, demonstrating its use for drying various surfaces.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your air mover.

- **Cleaning:**

- Before cleaning, always unplug the air mover.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Periodically check the air intake and exhaust grilles for dust, lint, or debris. Use a vacuum cleaner or a soft brush to remove any blockages.

- **Cord Storage:** Wrap the power cord neatly around the designated cord storage area on the unit to prevent damage during storage or transport.
- **Storage:** Store the air mover in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air mover does not turn on.	Not plugged in. Power outlet is not functioning. Circuit breaker tripped.	Ensure the power cord is securely plugged into a grounded outlet. Test the outlet with another appliance. Press the reset button on the air mover's circuit breaker. If it trips repeatedly, discontinue use and contact support.
Reduced airflow.	Air intake or exhaust is blocked. Unit is on a low-speed setting.	Check and clear any obstructions from the grilles. Increase the speed setting using the control knob.
Unusual noise or vibration.	Unit is not on a stable surface. Internal obstruction.	Place the air mover on a firm, level surface. Unplug the unit and inspect for any foreign objects inside the grilles. If noise persists, contact support.

If you encounter problems not listed here, or if solutions do not resolve the issue, please contact Channellock customer support.

SPECIFICATIONS

Brand	Channellock
Model Name	AM201 2001
Electric Fan Design	Blower
Air Flow Capacity	550 Cubic Feet Per Minute (CFM)
Number of Speeds	3
Voltage	120 Volts
Item Weight	9 Pounds

Product Dimensions (L x W x H)	11 x 9.5 x 12 inches
Indoor/Outdoor Usage	Indoor
Special Feature	Portable
Controller Type	Button Control (Rotary Knob)

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Channellock customer service directly. Keep your purchase receipt as proof of purchase.

You can typically find contact information on the manufacturer's official website or on the product packaging.

© 2024 Channellock. All rights reserved. This manual is for informational purposes only.