

[Manuals.plus](#) /

› [Axess](#) /

› AXESS SPBT1065 Portable Bluetooth Speaker User Manual

Axess SPBT1065

AXESS SPBT1065 Portable Bluetooth Speaker User Manual

Model: SPBT1065

INTRODUCTION

Thank you for purchasing the AXESS SPBT1065 Portable Bluetooth Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.



Image: Front view of the AXESS SPBT1065 Portable Bluetooth Speaker, showcasing its cylindrical design and speaker grille.

PACKAGE CONTENTS

Ensure all items are present upon unboxing:

- AXESS SPBT1065 Portable Bluetooth Speaker
- Charging Cable

PRODUCT FEATURES

- Wireless music streaming via Bluetooth from smartphones or compatible devices.
- Integrated dancing LED lights on the front for visual effects.
- Adjustable bass and treble controls.
- Built-in FM radio functionality.
- Multiple input options: USB, AUX-in, and TF card.
- Rechargeable lithium-ion battery for portable use.

CONTROLS AND PORTS

Familiarize yourself with the control panel and connection ports located on the speaker.

 


Image: Detailed diagram of the speaker's rear control panel, indicating RCA input, AUX-IN, USB port, TF card slot, power switch, volume, treble, bass controls, and FM antenna connection.

- **RCA Input:** For connecting external audio devices using RCA cables.
- **AUX-IN:** 3.5mm audio input for wired connection to audio sources.
- **USB Port:** For playing music from USB flash drives.
- **TF Card Slot:** For playing music from TransFlash (microSD) cards.
- **Power Switch:** Turns the speaker ON or OFF.
- **Volume Control:** Adjusts the overall audio output level.
 - Treble Control:** Adjusts the high-frequency audio output.
- **Bass Control:** Adjusts the low-frequency audio output.
- **FM Antenna:** Connection point for the FM radio antenna.
- **Playback Controls:** Buttons for Forward, Pause/Play, and Backward functions.

SETUP

Charging the Speaker

1. Connect the provided charging cable to the DC 12V input port on the speaker.
2. Plug the other end of the charging cable into a suitable power source.
3. Allow the speaker to charge fully before first use. The charging indicator (if present) will typically change color or turn off when charging is complete.

Powering On/Off

Locate the Power Switch on the control panel. Flip the switch to the 'ON' position to power on the speaker. Flip it to the 'OFF' position to power off the speaker.

OPERATING INSTRUCTIONS

Bluetooth Pairing

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light or an audible prompt.
2. Enable Bluetooth on your smartphone or other Bluetooth-enabled device.
3. Search for available Bluetooth devices and select "AXESS SPBT1065" from the list.
4. Once paired, the speaker will confirm with an audible tone or a solid LED light. You can now stream audio wirelessly.

FM Radio Operation

1. Ensure the FM antenna is connected to the speaker.
2. Press the 'Mode' button (if available, or cycle through inputs) to switch to FM radio mode.

3. Use the 'Play/Pause' button to initiate an automatic scan for available FM stations.
4. Use the 'Forward' and 'Backward' buttons to navigate between saved stations.

USB/TF Card Playback

1. Insert a USB flash drive or TF (microSD) card containing MP3 audio files into the respective port.
2. The speaker should automatically detect the storage device and begin playback. If not, press the 'Mode' button to switch to USB or TF card mode.
3. Use the 'Forward', 'Backward', and 'Play/Pause' buttons to control playback.

AUX Input Usage

1. Connect one end of a 3.5mm audio cable (not included) to the AUX-IN port on the speaker.
2. Connect the other end of the cable to the headphone jack or audio output of your external audio device.
3. Press the 'Mode' button to switch the speaker to AUX mode.
4. Control playback and volume from your external audio device.

Adjusting Bass and Treble

Use the dedicated Bass and Treble control knobs on the control panel to fine-tune the audio output to your preference.

Dancing LED Lights

The speaker features built-in dancing LED lights that synchronize with the music. These lights activate automatically when the speaker is in use. There is no separate control for the LED lights.



Image: Front view of the AXESS SPBT1065 speaker with its integrated LED lights illuminated, creating a dynamic visual effect.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in active use.
- **Water Exposure:** This speaker is not waterproof. Avoid exposing it to water or excessive moisture.

TROUBLESHOOTING

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source using the charging cable. Check the power switch position.
No sound from the speaker.	Check the volume level on both the speaker and the connected device. Ensure the correct input mode (Bluetooth, AUX, USB, TF) is selected. Verify audio cables are securely connected.
Bluetooth device cannot pair.	Ensure the speaker is in Bluetooth pairing mode. Make sure the speaker is within range (typically 10 meters) of your device. Turn off and on Bluetooth on your device, then try pairing again.
Poor FM radio reception.	Extend the FM antenna fully. Try repositioning the speaker to improve signal reception.

SPECIFICATIONS

- **Brand:** Axxess
- **Model Name:** SPBT1065
- **Connectivity Technology:** Auxiliary, Bluetooth, USB
- **Speaker Maximum Output Power:** 31 Watts
- **Speaker Type:** Subwoofer
- **Power Source:** Battery Powered (1 Lithium Ion battery included)
- **Control Method:** Touch (for playback controls)
- **Item Weight:** 9.3 Pounds
- **Features:** FM Radio, Dancing LED Lights, Bass/Treble Adjustment

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact Axxess customer service directly. Keep your proof of purchase for warranty claims.