

[manuals.plus](#) /› [TechniSat](#) /› [TechniSat TECHNIPLAYER LP 300 Professional DJ USB Turntable User Manual](#)**TechniSat LP 300**

# TechniSat TECHNIPLAYER LP 300 Professional DJ USB Turntable

**User Manual**

## INTRODUCTION

The TechniSat TechniPlayer LP 300 is a professional DJ USB turntable designed for high-quality vinyl playback and digital conversion. This direct-drive turntable features a quartz-controlled motor, allowing for stable rotation and precise speed control. It includes advanced features such as needle illumination, adjustable tracking force, a balanced S-shaped tonearm, and an anti-skating function, catering to both professional DJs and home audio enthusiasts. Additionally, the integrated USB port enables easy digitization of your vinyl collection into MP3 files, with accompanying software provided. A switchable phono preamplifier ensures versatile connectivity to various audio systems, including phono or AUX-IN inputs.



Figure 1: The TechniSat TECHNIPLAYER LP 300 turntable with its dust cover open, showcasing the platter, tonearm, and controls.

## SETUP INSTRUCTIONS

### 1. Unpacking and Component Check

Carefully remove all components from the packaging. Ensure the following items are present:

- TECHNIPLAYER LP 300 Turntable Unit
- System holder with needle (cartridge)
- Aluminum platter
- Felt platter mat
- Palet (record weight/stabilizer)
- Counterweight
- USB cable
- Software CD
- User manual

### 2. Placement

Place the turntable on a stable, level surface away from direct sunlight, heat sources, and strong vibrations. Ensure adequate ventilation around the unit.

### 3. Assembly

1. **Install the Platter:** Carefully place the aluminum platter onto the center spindle of the turntable.
2. **Place the Felt Mat:** Lay the felt platter mat on top of the aluminum platter.
3. **Attach the Cartridge:** Mount the system holder with the needle (cartridge) to the tonearm headshell. Ensure it is securely fastened.
4. **Install the Counterweight:** Slide the counterweight onto the rear of the tonearm. Adjust it later for proper tracking force.
5. **Place the Palet:** The palet can be placed on the record during playback for added stability.



**Figure 2:** Detailed view of the tonearm and cartridge assembly, crucial for proper record playback.

### 4. Connecting to an Audio System

The TechniPlayer LP 300 offers both phono and AUX-IN connectivity via its switchable preamplifier.

- **RCA Audio Output (L/R):** Connect the RCA cables from the turntable's audio output to your amplifier's PHONO input (if available) or AUX-IN input. Use the PHONO/LINE switch on the rear of the turntable to select the appropriate output level.
  - Set to **PHONO** if connecting to an amplifier with a dedicated PHONO input.
  - Set to **LINE** if connecting to an amplifier's AUX-IN or other line-level input.
- **USB Connection:** Connect the USB cable from the turntable to your computer for digitizing records.



Figure 3: The rear panel of the turntable, illustrating the RCA audio outputs and the USB port for connecting to an amplifier or computer.

## 5. Power Connection

Connect the power cable to the turntable and then to a suitable wall outlet.

## OPERATING INSTRUCTIONS

### 1. Powering On/Off

To power on the turntable, rotate the **START/STOP** knob clockwise. The platter will begin to rotate. To power off, rotate the knob counter-clockwise until it clicks.



Figure 4: The start/stop control and speed selection buttons (33/45 RPM) located on the turntable's top panel.

## 2. Playing a Record

1. **Place the Record:** Place your vinyl record on the platter. If desired, use the palet for added stability.
2. **Select Speed:** Press the **33** or **45** button to select the appropriate playback speed for your record.
3. **Adjust Tracking Force:** Refer to your cartridge's specifications for the recommended tracking force. Adjust the counterweight by rotating it until the tonearm is balanced and then set the desired tracking force using the numbered ring.
4. **Set Anti-Skating:** Adjust the anti-skating dial to match the tracking force setting. This prevents the tonearm from drifting inwards or outwards.
5. **Lower the Tonearm:** Use the cueing lever to gently lower the tonearm onto the record's lead-in groove.
6. **Start Playback:** The record will begin playing.
7. **End Playback:** At the end of the record, use the cueing lever to lift the tonearm and return it to its rest.

## 3. Using the Target Light

The **TARGET LIGHT** provides illumination for the stylus, which is useful in low-light conditions for precise cueing. Press the button next to the target light to extend and illuminate it. Press again to retract it.



**Figure 5:** The target light, which illuminates the stylus for accurate placement on the record.

#### 4. Adjusting Pitch

The **PITCH ADJ.** slider allows for fine adjustment of the playback speed. Move the slider up or down to increase or decrease the pitch, respectively. This is particularly useful for DJ applications or correcting minor speed variations.



Figure 6: The pitch adjustment slider, enabling precise control over the playback speed.

## 5. USB Digitization

To convert your vinyl records to digital MP3 files, connect the turntable to your computer using the provided USB cable. Install the included software from the CD. Follow the software's instructions to record and save your audio. The software is compatible with both Mac and PC operating systems.

## MAINTENANCE

---

### 1. Cleaning the Stylus (Needle)

A clean stylus is essential for optimal sound quality and to prevent damage to your records. Use a soft brush, specifically designed for stylus cleaning, and gently brush from back to front. Never brush from side to side.

### 2. Cleaning the Turntable Unit

Wipe the turntable's surface with a soft, dry, lint-free cloth. For stubborn marks, a slightly damp cloth can be used, but ensure no liquid enters the unit. Avoid abrasive cleaners or solvents.

### 3. Dust Cover Care

The dust cover protects your turntable from dust and debris. Clean it with a soft, damp cloth. Avoid using dry cloths as they can scratch the acrylic surface.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Power cable not connected; outlet not active.	Check power cable connection; test outlet with another device.
No sound or low volume	Incorrect PHONO/LINE switch setting; amplifier input issue; damaged cartridge/stylus.	Ensure PHONO/LINE switch matches amplifier input; check amplifier connections and volume; inspect cartridge/stylus for damage.
Distorted sound	Dirty stylus; incorrect tracking force or anti-skating; damaged record.	Clean stylus; re-adjust tracking force and anti-skating; try a different record.
Incorrect playback speed	Wrong speed selected (33/45 RPM); pitch adjustment off.	Select correct speed; adjust pitch slider to center or desired setting.

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please contact customer support.

## SPECIFICATIONS

<b>Brand</b>	TechniSat
<b>Model Name</b>	LP 300
<b>Model Number</b>	0000/9413
<b>Drive Type</b>	Direct Drive (Quartz Controlled)
<b>Rotation Speeds</b>	33, 45 RPM
<b>Material</b>	Aluminum (Platter)
<b>Connections</b>	Analog Audio Output (RCA L/R), USB 2.0
<b>Special Features</b>	Balanced S-shaped tonearm, Adjustable tracking force, Anti-skating, Needle illumination, Integrated switchable phono preamplifier, PC recording software included (Mac/PC)
<b>Compatible Devices</b>	Personal Computer, Smartphone (for digital audio output)
<b>Operating System (for software)</b>	Windows (and Mac for software)
<b>Weight</b>	5.3 Kilograms
<b>Dimensions (LxHxP)</b>	45.00 x 13.90 x 35.00 cm (approximate, from feature bullets)

## WARRANTY INFORMATION

The TechniSat TECHNIPLAYER LP 300 comes with a **2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty card included with your product or visit the official TechniSat website.

**Note:** Spare parts availability is currently listed as "unavailable" by the manufacturer. Software updates are also listed as

"information not available."

## SUPPORT

---

For technical assistance, product inquiries, or warranty service, please contact TechniSat customer support.

- **Online Support:** Visit the official TechniSat website for FAQs, support resources, and contact forms.
- **Contact Information:** Refer to the contact details provided in your product packaging or on the TechniSat website for phone or email support.

Before contacting support, please have your product model (LP 300) and serial number (if applicable) ready.

© 2024 TechniSat. All rights reserved.