

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [JustFine](#) /

> JustFine Replacement Remote Control User Manual for Samsung TVs (Models: UN40C6300SF, UN40C6300SFXZA, UN40C6300SFXZC, UN46C5000, UN46C5000QF, LN37C550J1FXZAAA01)

JustFine LYSB01M09CD4H

JustFine Replacement Remote Control User Manual for Samsung TVs

Compatible Models: UN40C6300SF, UN40C6300SFXZA, UN40C6300SFXZC, UN46C5000, UN46C5000QF,
LN37C550J1FXZAAA01

1. INTRODUCTION

This manual provides comprehensive instructions for the JustFine replacement remote control. Designed to be compatible with various Samsung TV models, this remote offers a straightforward solution for controlling your television. It is pre-programmed and requires no additional setup beyond battery installation.

2. PRODUCT FEATURES

- Direct replacement remote for specified Samsung TV models.
- Pre-programmed for immediate use; no additional programming required.
- Ergonomic design for comfortable handling.
- Controls essential television functions including power, volume, channel, and menu navigation.

3. SETUP AND INSTALLATION

3.1 Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Back of the remote control with the battery compartment.

3.2 Initial Use

Once batteries are installed, the remote is ready for use. No programming or pairing is required. Point the remote directly at your Samsung TV and press the desired function button.

4. OPERATING INSTRUCTIONS

This remote control provides access to all standard functions of your compatible Samsung TV. Below is a general overview of key buttons:



Figure 2: Front view of the remote control.

- **POWER:** Turns the TV on or off.
- **SOURCE:** Selects input sources (HDMI, AV, Component, etc.).
- **Number Buttons (0-9):** Directly select channels.
- **VOL (+/-):** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the TV sound.
- **CH (+/-):** Changes channels sequentially.
- **MENU:** Accesses the TV's main menu.
- **Navigation Pad (Up/Down/Left/Right/Enter):** Navigates through menus and confirms selections.
- **RETURN:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or function.

- **TOOLS:** Accesses quick settings or context-sensitive options.
- **INFO:** Displays information about the current program or input.
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within certain TV menus or applications.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote is not working.	Dead or incorrectly inserted batteries.	Replace batteries with new ones, ensuring correct polarity (+/-).
Remote is unresponsive.	Obstruction between remote and TV's IR sensor.	Ensure a clear line of sight between the remote and the TV.
Some buttons do not function.	Remote may not be fully compatible with all specific TV functions, or button is stuck.	Verify TV model compatibility. Clean the remote if a button feels stuck.

7. SPECIFICATIONS

- **Brand:** JustFine
- **Model Number:** LYSB01M09CD4H
- **Compatible Devices:** Samsung Televisions (Specific models listed in title)
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 8 x 2 x 0.5 inches
- **Item Weight:** 2.72 ounces
- **Special Feature:** Ergonomic design

8. WARRANTY AND SUPPORT

This product is sold with a money-back guarantee and a 30-day quality warranty. For any issues or support inquiries, please contact the seller directly.

For further assistance, please refer to the contact information provided by your retailer or the product packaging.

