

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Shot Navi](#) /

› [Shot Navi W1-GL Golf GPS User Manual](#)

Shot Navi W1-GL

Shot Navi W1-GL Golf GPS User Manual

INTRODUCTION

This manual provides comprehensive instructions for the Shot Navi W1-GL Golf GPS watch. This device is designed to enhance your golf experience by providing accurate distance measurements and course information directly on your wrist. It comes pre-loaded with over 30,000 golf courses globally, eliminating the need for additional fees or downloads for course updates.

Key features include:

- Pre-loaded access to over 30,000 golf courses worldwide.
- Accurate distance readings to the front, center, and back of the green, as well as to hazards.
- Functionality to calculate shot distances during your round.
- Long-lasting battery life: up to 8 hours in GPS mode and 4 weeks in watch mode.
- No membership or download fees required for course data.

PRODUCT OVERVIEW



This image displays the Shot Navi W1-GL Golf GPS watch. The digital screen shows '10H PAR 5' and a large number '435', indicating a distance measurement. Markers 'B', 'C', 'F' are visible, likely representing Back, Center, and Front of the green. The watch features a white strap and a metallic bezel with several control buttons on the side, including 'UP', 'OK/MARK', 'MODE', and 'DOWN'.

SETUP

1. Initial Charging

Before first use, fully charge the device. Connect the charging cable to the watch and a compatible USB power source. The battery indicator on the display will show charging status. A full charge ensures optimal performance during your golf round.

2. Powering On/Off

- **To Power On:** Press and hold the 'MODE' button until the display illuminates.
- **To Power Off:** Press and hold the 'MODE' button until the power-off confirmation appears, then confirm.

3. GPS Acquisition

Once powered on, the device will automatically attempt to acquire a GPS signal. For best results, ensure you are outdoors with a clear view of the sky. This process may take a few moments. Upon successful acquisition, the device will display available golf courses in your vicinity.

4. Course Selection

Use the 'UP' and 'DOWN' buttons to navigate through the list of detected courses. Press the 'OK/MARK' button to select your desired course. The device will then load the course data and display the first hole information.

OPERATING INSTRUCTIONS

1. Golf Mode Display

In Golf Mode, the display typically shows:

- Current Hole Number and Par.
- Distances to the Front (F), Center (C), and Back (B) of the green.
- Distances to various hazards (e.g., bunkers, water).
- Battery level indicator.

2. Navigating Holes

The device automatically advances to the next hole as you move. If manual adjustment is needed, use the 'UP' and 'DOWN' buttons to change holes.

3. Shot Distance Measurement

To measure the distance of your shot:

1. At your starting position, press the 'OK/MARK' button to mark the spot.
2. Walk to where your ball landed. The display will show the distance from your marked starting point.
3. Press 'OK/MARK' again to clear the measurement and mark a new starting point for the next shot.

4. Watch Mode

To switch to Watch Mode, press the 'MODE' button. In Watch Mode, the device functions as a standard digital watch, conserving battery life. To return to Golf Mode, press 'MODE' again.

MAINTENANCE

1. Cleaning

Wipe the device regularly with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the screen and casing. Ensure the charging port is clean and dry before connecting the charger.

2. Battery Care

The Shot Navi W1-GL uses a Lithium Ion battery. To prolong battery life:

- Avoid extreme temperatures.
- Do not fully discharge the battery frequently.
- Store the device with a partial charge (around 50%) if not used for extended periods.

3. Storage

Store the device in a cool, dry place away from direct sunlight and moisture when not in use.

TROUBLESHOOTING

1. Device Not Powering On

Ensure the device is fully charged. If the issue persists, try connecting it to a different USB power source or charging cable.

2. GPS Signal Not Acquired

Ensure you are outdoors with a clear view of the sky, away from tall buildings or dense foliage that might obstruct the signal. Wait a few minutes for the device to acquire satellites. If the problem continues, try restarting the device.

3. Incorrect Distances Displayed

Verify that the correct golf course has been selected. Ensure the device has a strong GPS signal. Course data updates are automatically managed by Shot Navi, but if you suspect an issue with a specific course, check the manufacturer's website for any known issues or updates.

4. Short Battery Life

Ensure the device is fully charged before use. Using GPS mode continuously will consume battery faster than Watch Mode. Reduce screen brightness if possible. If battery life significantly degrades, contact support.

SPECIFICATIONS

Feature	Detail
Brand	Shot Navi
Model Name	W1-GL
Item Model Number	SNW1GLWHI
Product Dimensions	10.01 x 12.98 x 8.1 cm
Item Weight	240.4 g
Batteries	1 Lithium Ion battery (included)
GPS Mode Battery Life	Up to 8 hours

Watch Mode Battery Life	Up to 4 weeks
Screen Size	1.1 inches
Map Type	Worldwide (30,000+ courses pre-loaded)
Human Interface Input	Touchscreen
UPC	710619488983

WARRANTY AND SUPPORT


Information regarding product warranty and customer support is not provided in the available data. Please refer to the official Shot Navi website or the product packaging for detailed warranty terms and contact information for support services.

Related Documents - W1-GL

 <p>Shot Navi Evolve PRO Touch User Manual: GPS Golf Watch Features and Operation Guide</p> <p>Detailed user manual for the Shot Navi Evolve PRO Touch GPS golf watch, covering setup, operation, golf navigation features, pedometer functions, specifications, FAQs, and warranty information.</p>
 <p>Shot Navi Crest II Touch</p> <p>Shot Navi Crest II Touch GPS</p>
 <p>Shot Navi EXCEEDS GPS</p> <p>Shot Navi EXCEEDS GPS Dynamic Green Eye</p>
 <p>Shot Navi INFINITY Touch User Manual</p> <p>User manual for the Shot Navi INFINITY Touch golf GPS device, covering features, operation, settings, and maintenance.</p>

 Shot Navi W1 Evolve GPS Golf Watch User Manual	<p>Shot Navi W1 Evolve GPS Golf Watch User Manual</p> <p>Comprehensive user manual for the Shot Navi W1 Evolve GPS golf watch, covering features, operation, charging, Bluetooth connectivity, and troubleshooting.</p>
	<p>Shot Navi Shot Tracker</p> <p>Shot Navi Shot Tracker GPS</p>

Documents - Shot Navi – W1-GL

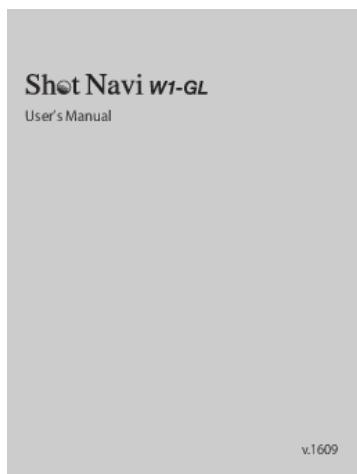

[\[pdf\]](#) User Manual Quick Start Guide Frequently Asked Questions Specifications
Warranty

W1 English1.indd User's Manual Shot Navi Thank you for choosing GL. With design concept of simplicity and lightness this product is a wearable golf GPS. It timely Precaution Information. Do not attempt to disassemble, modify or repair the Device can be damaged from above actions in which may invalidate terms warranty. ■ use EN 829 shotnavi.jp/snp/w1gl/data |||

User's Manual v.1609 Introduction Thank you for choosing Shot Navi **W1-GL**. With design concept of simplicity and lightness, this product is a wearable golf GPS. It timely detects the distance from current location to the greens, along with preloaded global golf courses data. It can measure the rema...

lang:en score:26 filesize: 1.02 M page_count: 28 document date: 2016-08-29

Shot Navi w1-GL

取扱説明書

v.1707

[\[pdf\]](#) Frequently Asked Questions

W1 GL 1707.indd v 1707 GL.japanese1707.shotnavi.jp.snp.w1gl.data |||
v.1707 Shot Navi **W1-GL** P2 P2 P4 P5 P6 P7 P8 P9 2 / GPS SCO FAQ P10 P10 P11
P12 P13 P14 P16 P17 P18,19 P20 P22 P23 P24 P25 P26 P27 P28 3 0 50 / 1. 2. 3.
90 4. 50 4 40 50 0 0 5 Shot Na...

lang:en **score:24** filesize: 1.16 M page_count: 27 document date: 2017-08-16

Shot Navi w1-GL

取扱説明書

v.1609

[\[pdf\]](#) Frequently Asked Questions

W1 GL 1.indd v 1609 GL.JP.8.29.shotnavi.jp.snp.w1gl.data |||
v.1609 Shot Navi **W1-GL** P2 P2 P4 P5 P6 P7 P8 P9 2 / GPS SCO FAQ P10 P10 P11
P12 P13 P14 P16 P17 P18,19 P20 P22 P23 P24 P25 P26 P27 P28 3 0 50 / 1. 2. 3.
90 4. 50 4 40 50 0 0 5 Shot Na...

lang:en **score:23** filesize: 1.17 M page_count: 28 document date: 2016-08-29