

[Manuals.plus](#) /

› [Cuisinart](#) /

› Cuisinart Convection Toaster Oven Model TOB-260N1NAS Instruction Manual

Cuisinart TOB-260N1

Cuisinart Convection Toaster Oven Model TOB-260N1NAS Instruction Manual

Model: TOB-260N1NAS

INTRODUCTION

Welcome to the Cuisinart Convection Toaster Oven, Model TOB-260N1NAS. This appliance is designed to provide versatile cooking options with its 15 functions, including convection baking, toasting, and broiling. With 1800 watts of power, it ensures quick heat-up times and precise temperature control for consistent results. Its spacious interior accommodates a 13-inch pizza, a 9" x 13" baking pan, or a 9-pound chicken. This manual provides essential information for safe operation, setup, use, maintenance, and troubleshooting.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation.

- Do not place any materials other than manufacturer's recommended accessories in this oven when not in use.
- Do not place cardboard, plastic, paper, or similar materials in the oven.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Always wear protective, insulated oven mitts when inserting or removing items from the hot oven.

PRODUCT OVERVIEW AND COMPONENTS

The Cuisinart Convection Toaster Oven TOB-260N1NAS is designed for versatility and ease of use.

Included Components:

- Cuisinart Convection Toaster Oven Unit
- 13-inch Pizza Stone
- 2 Cooking Racks
- 9" x 13" Enamel Baking Pan
- Broiling Pan
- Removable Crumb Tray
- Recipe Book



Figure 1: Front view of the Cuisinart Convection Toaster Oven with a pizza stone on the rack. The digital display shows temperature and time settings.



Figure 2: Interior view of the oven with the door open, showing the two rack positions, heating elements, and the convection fan on the right side.

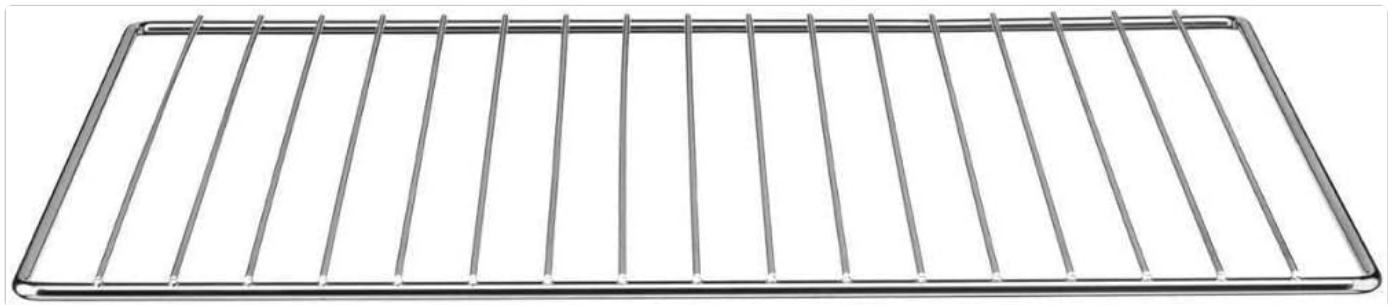


Figure 3: A single wire cooking rack, one of two included with the oven.



Figure 4: The 13-inch pizza stone accessory included with the oven.

Unpacking and Placement:

1. Remove all packaging materials and any promotional labels or stickers from your oven.
2. Place the oven on a flat, stable, heat-resistant surface. Ensure there is at least 4 inches of clearance on all sides of the oven for proper ventilation. Do not place directly under overhead cabinets.
3. Plug the power cord into a standard 120V AC electrical outlet.

Before First Use:

1. Wipe the exterior of the oven with a damp cloth and dry thoroughly. Clean the interior with a damp cloth and mild liquid soap. Dry thoroughly.
2. Wash all accessories (baking pan, broiling pan, wire racks, pizza stone) in warm, soapy water or in the dishwasher. Rinse and dry thoroughly.
3. To eliminate any manufacturing oils, operate the oven empty on the "Bake" function at 450°F (230°C) for approximately 15 minutes. A slight odor or smoke may be present; this is normal and will dissipate. Ensure adequate ventilation during this process.

OPERATING INSTRUCTIONS

Control Panel Overview:

The control panel features a large blue backlit LCD display, a selector dial, and various function buttons.

- **Selector Dial:** Used to scroll through cooking functions, adjust temperature, time, and toast shade.
- **LCD Display:** Shows selected function, temperature, time, and other settings.
- **Function Buttons:** Dedicated buttons for Convection, Speed Convection, Dual Cook, and Start/Stop.

General Operation:

1. **Select Function:** Turn the Selector Dial to choose your desired cooking function (e.g., Toast, Bake, Broil, Pizza).
2. **Adjust Settings:** Once a function is selected, the display will show default settings. Turn the Selector Dial to adjust temperature, time, or toast shade as needed.
3. **Start Cooking:** Press the "Start/Stop" button to begin the cooking cycle. The oven will typically preheat first, if applicable to the selected function.
4. **Monitor Progress:** The internal light allows you to monitor cooking progress without opening the door.
5. **End Cycle:** The oven will beep when the cooking cycle is complete. Press "Start/Stop" to cancel a cycle at any time.

Specific Cooking Functions:

- **Toast/Bagel:** Place items directly on the wire rack. Select desired shade level using the dial. The oven calculates time automatically.
- **Bake:** Use for general baking. Select temperature and time. The oven will preheat before the timer begins counting down.
- **Broil:** Ideal for browning or cooking thin cuts of meat. Place food on the broiling pan. Select temperature and time.
- **Convection (Conv):** Activates the convection fan for faster, more even cooking. Can be used with Bake, Roast, or Pizza functions.
- **Speed Convection (Speed Conv):** Provides even faster cooking by combining high heat with powerful convection.
- **Pizza:** Optimized for cooking pizzas. Use the pizza stone for best results. Select size and desired doneness.
- **Dual Cook:** Allows programming two consecutive cooking stages with different temperatures and times.
- **Keep Warm:** Maintains food at a warm temperature after cooking.
- **Leftover:** Reheats food gently.



Figure 5: The oven's interior capacity demonstrated by baking two cakes on separate racks.



Figure 6: A roasted chicken inside the oven, illustrating its capacity for larger items.

MAINTENANCE AND CLEANING

Regular cleaning will ensure optimal performance and extend the life of your Cuisinart Convection Toaster Oven. Always unplug the oven and allow it to cool completely before cleaning.

- **Exterior:** Wipe the exterior surfaces with a damp cloth and dry thoroughly. Avoid abrasive cleaners or metal scouring pads.
- **Interior:** The non-stick interior can be wiped clean with a damp cloth and mild liquid soap. For stubborn stains, use a non-abrasive sponge. Do not use steel wool or harsh chemical cleaners.
- **Crumb Tray:** The front pull-out crumb tray should be emptied and cleaned regularly. Slide it out, discard crumbs, and wash with warm, soapy water. Rinse and dry completely before reinserting.
- **Accessories:** All included accessories (baking pan, broiling pan, wire racks, pizza stone) are dishwasher safe or can be hand-washed with warm, soapy water.
- **Door:** Clean the glass door with a soft cloth and glass cleaner or mild soapy water. Do not use abrasive sprays or sharp objects.

TROUBLESHOOTING

If you encounter issues with your Cuisinart Convection Toaster Oven, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; circuit breaker tripped.	Ensure oven is securely plugged into a working outlet. Check household circuit breaker.
Food is not cooking evenly.	Incorrect rack position; overcrowding; convection fan issue.	Refer to recipe for recommended rack position. Avoid overcrowding the oven. Ensure convection fan is operating if selected.
Oven produces smoke or odor during first use.	Residual manufacturing oils.	This is normal during initial use. Ensure good ventilation. It will dissipate after a few uses.
Toast is too light or too dark.	Incorrect toast shade setting.	Adjust the toast shade setting using the Selector Dial.
Buttons or display not responding.	Temporary electronic glitch.	Unplug the oven from the power outlet for 1 minute, then plug it back in to reset.

For issues not covered here, please contact Cuisinart Customer Service.

SPECIFICATIONS

Feature	Detail
Brand	Cuisinart
Model Number	TOB-260N1
Color	Stainless Steel
Product Dimensions (D x W x H)	16.93" x 20.87" x 11.42"
Power Source	Corded Electric
Wattage	1800 Watts
Control Type	Knob
Number of Cooking Functions	15
Interior Capacity	0.95 cubic feet
Item Weight	32.4 pounds
BPA Free	Yes

Chef's Convection Toaster Oven



Figure 7: Diagram showing the approximate dimensions of the Cuisinart Convection Toaster Oven: 21" (W) x 17" (D) x 11.5" (H).

WARRANTY AND SUPPORT

Limited 3-Year Warranty:

This Cuisinart product is covered by a limited 3-year warranty from the date of original purchase. This warranty covers defects in materials and workmanship under normal home use. It does not cover damage resulting from accident, misuse, abuse, commercial use, or unauthorized modification.

For complete warranty details, including exclusions and limitations, please refer to the warranty section in the original product packaging or visit the official Cuisinart website.

Customer Support:

For technical assistance, troubleshooting, or warranty claims, please contact Cuisinart Customer Service.

- **Website:** www.cuisinart.com
- **Phone:** Refer to the Cuisinart website or product packaging for current contact numbers.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question