

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Backyard Discovery](#) /

› Backyard Discovery Mount McKinley Cedar Wood Swing Set Instruction Manual

Backyard Discovery 1705012

Backyard Discovery Mount McKinley Cedar Wood Swing Set Instruction Manual

MODEL: 1705012

Introduction

Thank you for choosing the Backyard Discovery Mount McKinley Cedar Wood Swing Set. This manual provides essential information for the safe assembly, operation, and maintenance of your new outdoor playset. The Mount McKinley features an elevated play deck, an 8-foot wave slide, a double rock wall, a rope ladder, two belt swings, and a trapeze bar, all crafted from durable cedar wood.



Image: The complete Backyard Discovery Mount McKinley Cedar Wood Swing Set, showcasing its various play features including the elevated play deck, slide, swings, and climbing wall, set in a vibrant green backyard with children actively engaged in play.

Safety Information

Your safety and the safety of your children are paramount. Please read and adhere to all safety guidelines.

General Safety Guidelines

- Adult supervision is required at all times.
- Recommended for children aged 3 to 10 years.
- Ensure children wear appropriate clothing, avoiding loose items that could snag.
- Do not slide down or twist swing chains.
- Do not climb on the fort rooftop.
- Avoid climbing when the equipment is wet.
- Always slide feet first.

Structural Safety

- The swing set is engineered to meet or exceed ASTM standards (code F1148-22) for residential use only.
- Utilize the provided fixed metal anchors to secure the playset firmly into the ground, ensuring stability during use.
- Regularly inspect all components for wear and tear.

Video: Official Backyard Discovery "Safety Tips & Tricks" video, providing visual guidance on safe usage and maintenance of playsets.

Setup and Assembly


The Mount McKinley Cedar Wood Swing Set is designed for home assembly with pre-cut, pre-drilled, and pre-stained pieces. For easier installation, guided instructions are available through the interactive BILT app.

Before You Begin

- Unpack and verify all parts against the packing list. Contact customer service immediately if any parts are missing or damaged.
- Organize all hardware, which comes in labeled bags, to streamline the assembly process.
- Recommended tools include: a cordless drill with a Phillips head driver bit, hammer, open-end wrenches (1/2"), 3/8" drive ratchet with 1/2" STD sockets, tape measure, 24" level, and a square.
- Consider applying an additional stain or sealant to the cedar wood before assembly to enhance its longevity and weather resistance.

Assembly Process

Assembly typically requires two adults and can take approximately 6-10 hours. The slide assembly, in particular, benefits from two people to properly align and secure its sections. Ensure all fasteners are tightened securely, but avoid overtightening to prevent damage to the wood.

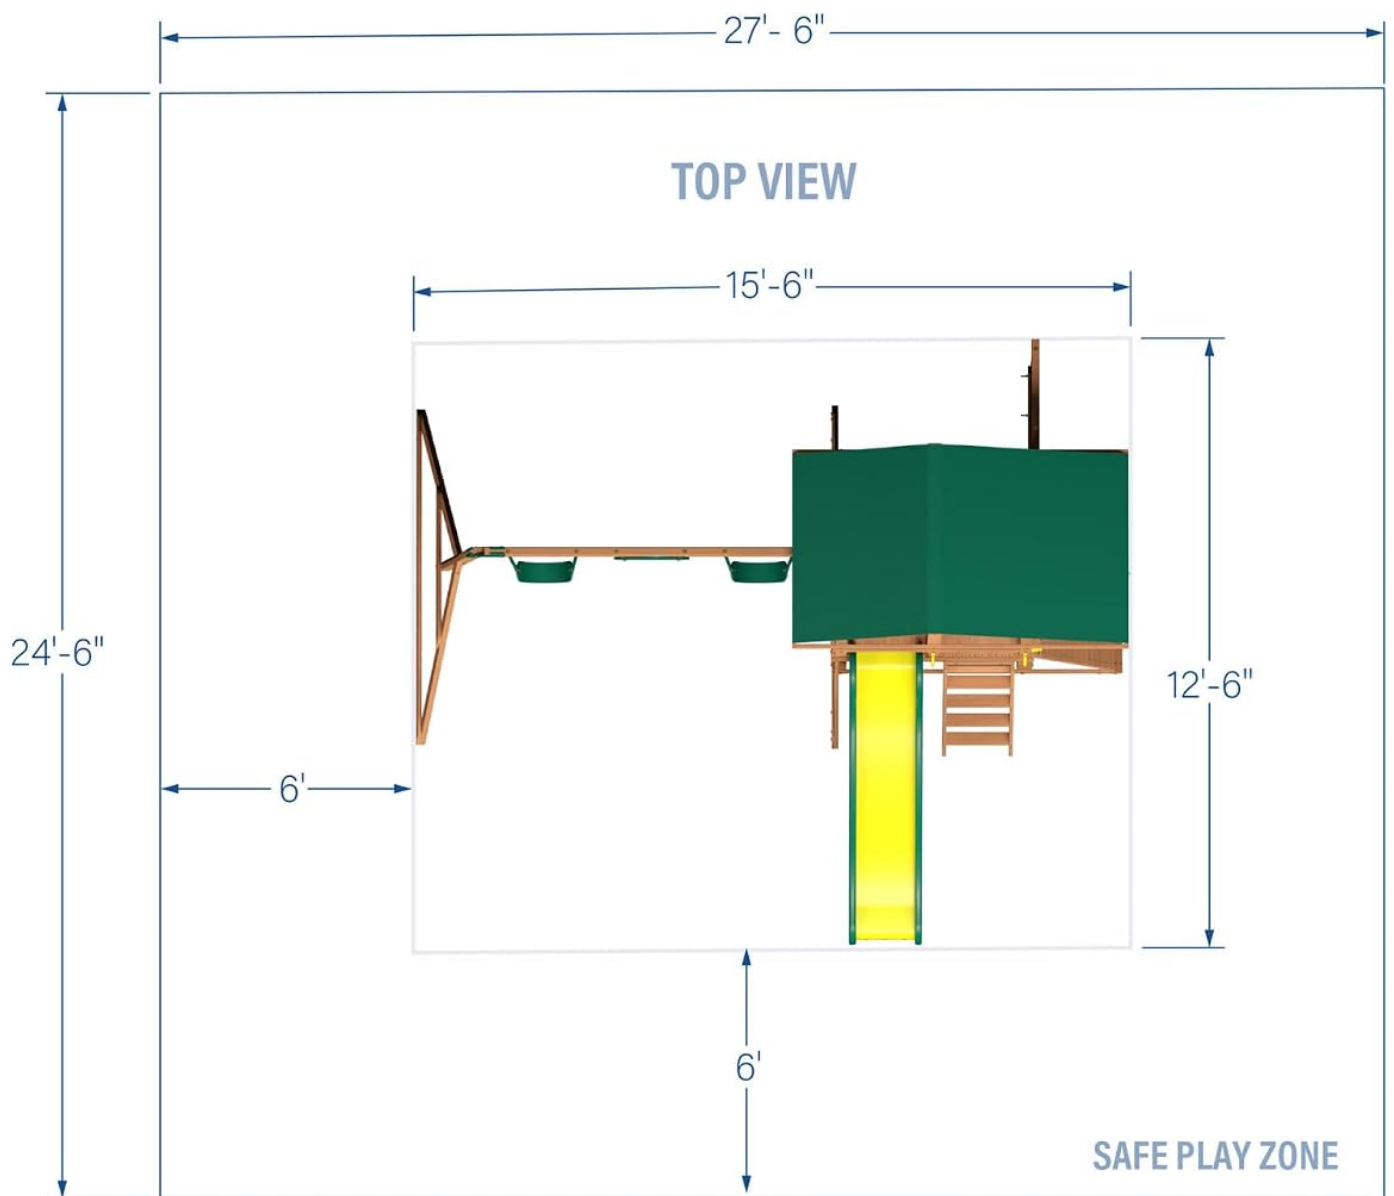

MOUNT McKINLEY

SWING SET



Image: Detailed diagrams illustrating the top and front views of the Mount McKinley Swing Set, complete with precise dimensions and a clearly marked safe play zone for proper installation planning.

Operating Instructions

The Mount McKinley playset offers a variety of activities designed for active play and imagination.

Play Deck

- Access the spacious raised play deck using the wide step ladder.
- The brightly colored canopy roof provides a shaded lookout area.
- Engage in imaginative play with the included toy telescope and steering wheel.

Swings

- Enjoy soaring through the air on the two classic belt swings.
- Practice acrobatic skills on the trapeze bar.
- Ensure children hold chains securely and swing within safe limits.

Slide

- Descend quickly and safely down the thrilling 8-foot speedy wave slide.
- Always slide feet first and one child at a time.



Image: A young boy is captured mid-descent on the vibrant green and yellow wave slide, demonstrating one of the playset's exciting

features.

Climbing Features

- Scale the extra-wide double rock climbing wall, featuring 9 holds and a rope assist, designed for two climbers simultaneously.
- Challenge agility with the over 6-foot-tall rope ladder, equipped with sturdy wooden rungs.



Image: Two young children are actively climbing the playset's double rock wall, utilizing the colorful handholds and the central rope for assistance, highlighting the climbing feature.

Sandbox Area

- The shaded lower play space is ideal for creative sensory play with sand (sand not included).

Maintenance

Regular maintenance is crucial to ensure the longevity and safety of your playset.

- Inspect all components, including wood, hardware, swings, and ropes, at the beginning of each play season and monthly thereafter.
- Tighten all nuts and bolts as needed to maintain structural integrity.
- Check for splinters, cracks, or loose parts and repair or replace them promptly.
- The cedar wood is naturally resistant to decay, but periodic application of a water-repellent stain or sealant is recommended to protect it from weathering and extend its lifespan.

Troubleshooting

Missing or Damaged Parts

If you receive your playset with missing or damaged parts, it is recommended to accept the delivery and contact customer service immediately for replacement parts. Do not refuse the shipment.

Assembly Difficulties

Ensure all pieces are correctly identified using the labels provided on the wood and hardware bags. Use appropriate power tools for efficiency, but avoid overtightening screws to prevent stripping or breaking wood. Refer to the interactive BILT app for detailed, step-by-step guidance.

Product Specifications

Attribute	Detail
Brand	Backyard Discovery
Model Number	1705012
Material	Cedar Wood
Product Dimensions (D x W x H)	150"D x 186"W x 119"H
Item Weight	308 Pounds
Manufacturer Minimum Age	36 Months
Manufacturer Maximum Age	120 Months
Maximum Weight Recommendation	1080 Pounds
Required Assembly	Yes

Warranty and Support

Warranty Information

The Backyard Discovery Mount McKinley Cedar Wood Swing Set comes with a 5-year limited warranty.

Customer Support

For freight damage or replacement parts, please refer to the contact information provided on the product packaging. For general inquiries or additional support, please visit the official Backyard Discovery website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01M0ET1BR>

More documents and user manuals: <https://manuals.plus/>