

Imusa Chef Can Opener

Imusa Manual Chef Can Opener Instruction Manual

Model: Chef Can Opener

1. PRODUCT OVERVIEW

The Imusa Manual Chef Can Opener is a versatile kitchen tool designed for opening various types of cans and bottles with ease. Constructed from high-quality stainless steel with durable plastic accents, it offers a comfortable grip and efficient operation.

Key Features:

- **Durable Construction:** Made of high-quality stainless steel with nylon handles.
- **Multi-functional:** Works as a can opener, lever, and bottle opener.
- **Ergonomic Design:** Heavy-duty design with comfortable grip for easy operation.
- **Easy to Clean:** Simple design allows for straightforward cleaning.
- **Universal Fit:** Ideal for opening various can sizes.



Image 1: The Imusa Manual Chef Can Opener from multiple angles, highlighting its ability to fit all can sizes, its sharp blade for quick lid removal, and its lightweight design with a comfortable grip for easy operation.

2. SAFETY INFORMATION

Please read and understand all safety instructions before using the Imusa Manual Chef Can Opener.

- **Sharp Edges:** The cutting wheel and can edges can be sharp. Handle with care to prevent injury.
- **Children:** Keep the can opener out of reach of children. This is not a toy.
- **Proper Use:** Use only for its intended purpose of opening cans and bottles. Do not attempt to open objects not designed for this tool.
- **Inspection:** Before each use, inspect the can opener for any damage or loose parts. Do not use if damaged.

3. SETUP

The Imusa Manual Chef Can Opener requires no assembly. Simply remove it from its packaging and inspect it for any shipping damage. Wash the can opener with warm, soapy water before its first use, then rinse thoroughly and dry completely.

4. OPERATING INSTRUCTIONS

4.1 Opening Cans

1. **Position the Can Opener:** Place the can opener on the rim of the can, ensuring the cutting wheel is on the inside edge of the rim and the gear is on the outside edge.
2. **Engage the Can:** Squeeze the handles firmly to pierce the can lid and engage the gear with the can's rim.
3. **Turn the Knob:** Rotate the turning knob clockwise to move the can opener around the can's rim, cutting the lid as it goes. Maintain a firm grip on the handles.
4. **Remove the Lid:** Once the can opener has traveled completely around the can, release the handles. Carefully lift the can opener, using the small lever on the side to help lift the lid if necessary. Dispose of the lid safely.



Image 2: A detailed view of the can opener, emphasizing its stainless steel construction and durable plastic turning knob.

4.2 Opening Bottles

The Imusa Manual Chef Can Opener includes a built-in bottle opener for added functionality.

1. **Position the Bottle Opener:** Locate the bottle opener hook on the side of the can opener.
2. **Engage the Bottle Cap:** Place the hook under the edge of the bottle cap.
3. **Leverage to Open:** Apply upward pressure to the handle while holding the bottle firmly to pry off the cap.



Image 3: Demonstrating the can opener's secondary function as a bottle opener, showcasing its dual functionality.



Image 4: The can opener in a kitchen setting, emphasizing its utility for opening cans, bottles, and lifting lids.



Image 5: Highlighting the can opener's design for safe and effortless can opening.

5. MAINTENANCE AND CARE

Proper care will extend the life of your Imusa Manual Chef Can Opener.

- **Cleaning:** Wash the can opener by hand with warm, soapy water immediately after each use. Rinse thoroughly to remove all food particles and soap residue.
- **Drying:** Dry the can opener completely with a clean cloth to prevent rust, especially on the stainless steel components.
- **Storage:** Store in a dry place, such as a kitchen drawer, away from excessive moisture.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners or scouring pads, as these can damage the

finish.

6. TROUBLESHOOTING

- **Can Opener Not Cutting:**

- Ensure the cutting wheel is properly aligned with the can's rim and the gear is firmly engaged.
- Apply consistent pressure to the handles while turning the knob.
- Check for any food debris or residue obstructing the cutting wheel or gear. Clean if necessary.

- **Difficulty Turning the Knob:**

- Ensure the can opener is correctly positioned and engaged with the can.
- The can opener may require lubrication if it feels stiff. A small amount of food-grade mineral oil can be applied to the moving parts.
- If the issue persists, the gears may be misaligned or worn. Consider replacing the unit.

7. SPECIFICATIONS

- **Model:** Chef Can Opener
- **Brand:** Imusa
- **Color:** Black
- **Material:** Stainless Steel, Nylon
- **Blade Material:** Stainless Steel
- **Operation Mode:** Manual
- **UPC:** 094046711730
- **Manufacturer:** IMUSA USA

8. WARRANTY AND SUPPORT

For warranty information or product support, please contact IMUSA USA directly. Refer to the product packaging or the official IMUSA website for contact details.