



Manuals.plus /

› UNIVERSAL REMOTE /

› UNIVERSAL REMOTE X-8 Instruction Manual

UNIVERSAL REMOTE X-8

UNIVERSAL REMOTE X-8 Instruction Manual

Model: X-8 | 200-Device Universal Remote Control

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your UNIVERSAL REMOTE X-8. This remote control is designed to operate up to 200 different audio/video devices from various manufacturers. Please read this manual thoroughly before using your new remote control to ensure proper functionality and to maximize your user experience.

SETUP

1. Battery Installation

The UNIVERSAL REMOTE X-8 requires batteries for operation. Ensure you use the correct type and insert them with the correct polarity.

- Open the battery compartment cover on the back of the remote control.
- Insert the required batteries (e.g., 2 x AAA or 2 x AA, specific type not provided in JSON, but typically standard batteries for universal remotes) according to the polarity indicators (+ and -) inside the compartment.
- Close the battery compartment cover securely.



Image: The UNIVERSAL REMOTE X-8, showing the general design. The battery compartment is typically located on the rear of the device.

2. Device Code Programming

To control your devices, you must program the remote with the correct device codes. Refer to the code list provided with your remote (not included in this digital manual) or use the auto-search function.

2.1 Direct Code Entry

1. Turn on the device you wish to program (e.g., TV, DVD player).

2. Press and hold the **SET** button (or equivalent) on the remote until the indicator light illuminates.
3. Press the device button (e.g., **TV**, **DVD**) for the device you are programming. The indicator light will flash.
4. Enter the 4-digit code for your device's brand from the code list. The indicator light should turn off.
5. Point the remote at the device and press the **POWER** button. If the device turns off, the code is correct. If not, repeat the process with the next code for your brand.

2.2 Auto Code Search

1. Turn on the device you wish to program.
2. Press and hold the **SET** button until the indicator light illuminates.
3. Press the device button (e.g., **TV**, **DVD**) for the device you are programming.
4. Press the **POWER** button repeatedly (or **CH+**) until your device turns off. This may take several minutes as the remote cycles through codes.
5. Once the device turns off, immediately press the **SET** button to save the code.

OPERATING YOUR REMOTE

1. Basic Functions

- **Device Selection:** Press the corresponding device button (e.g., **TV**, **DVD**, **CBL**) to select the device you wish to control. The indicator light will illuminate briefly.
- **Power On/Off:** Press the **POWER** button to turn the selected device on or off.
- **Volume Control:** Use the **VOL+** and **VOL-** buttons to adjust the volume. The **MUTE** button will silence the audio.
- **Channel Control:** Use the **CH+** and **CH-** buttons to change channels. Enter specific channel numbers using the numeric keypad.
- **Input/Source:** Press the **INPUT** or **SOURCE** button to cycle through available input sources on your TV or receiver.

2. Advanced Functions (Macro Programming)

The UNIVERSAL REMOTE X-8 may support macro programming, allowing a sequence of commands to be executed with a single button press. Refer to the full product manual (if available) for detailed instructions on macro setup, as this functionality can vary significantly between universal remote models.

MAINTENANCE

1. Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish and buttons.

2. Battery Replacement

If the remote's indicator light does not illuminate or if commands become unresponsive, the batteries may need replacement. Follow the battery installation steps outlined in the Setup section.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote does not operate any device.	Batteries are dead or incorrectly inserted. No device is selected. Remote is not programmed.	Check and replace batteries. Press the desired device button (e.g., TV, DVD). Reprogram the remote for your devices.
Remote operates some functions but not others.	Incorrect device code programmed.	Try programming a different code for your device's brand from the code list.
Indicator light does not illuminate.	Dead batteries.	Replace batteries.
Remote is unresponsive.	Obstruction between remote and device. Remote is too far from device.	Ensure a clear line of sight. Move closer to the device.

SPECIFICATIONS

Model: X-8

Brand: UNIVERSAL REMOTE

Device Capacity: Up to 200 devices

Connectivity Technology: Infrared (IR)

Compatible Devices: Home Theater components (TVs, DVD/Blu-ray players, Cable/Satellite boxes, Audio Receivers, etc.)

Controller Type: Button Control

Battery Type: Lithium (*Note: Specific battery format for user replacement may vary; refer to physical product for details.*)

ASIN: B01M0EX6TP

GTIN/UPC: 656787100886

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official UNIVERSAL REMOTE website. Keep your proof of purchase for warranty claims.

This product is covered by a 30-day money-back guarantee from the seller, as per the product description. For issues beyond this period, please contact the manufacturer directly.