

[Manuals.plus](#) /

› [FILCO](#) /

› FILCO Majestouch Convertible2 Tenkeyless Keyboard User Manual

FILCO FKBC87MRL/EB2

FILCO Majestouch Convertible2 Tenkeyless Keyboard User Manual

Model: FKBC87MRL/EB2

INTRODUCTION

This manual provides instructions for the setup, operation, maintenance, and troubleshooting of your FILCO Majestouch Convertible2 Tenkeyless mechanical keyboard. This keyboard offers both wired USB and wireless Bluetooth connectivity, along with multi-pairing capabilities for up to four devices.



Image: FILCO Majestouch Convertible2 Tenkeyless Keyboard, highlighting its dual USB and Bluetooth connectivity and multi-pairing feature.

PRODUCT FEATURES

- **Cherry MX Red Switches:** Equipped with linear Cherry MX Red switches for a light and soft key touch without a click sound. The switch actuates at 2mm of key travel.
- **Dual Connectivity:** Supports both wired USB and wireless Bluetooth 3.0 connections.
- **Multi-Pairing:** Capable of pairing with up to four different devices, allowing for seamless switching between them.
- **Tenkeyless Design:** Compact 87-key US ASCII layout.
- **DIP Switch Customization:** Allows for hardware-level key function remapping.

 **USB** &  **Bluetooth®**



 
有線&無線 両対応 簡単切り替え可能!



スッキリ!小さめなオリジナルフォント



 CHERRY MXスイッチ赤軸搭載

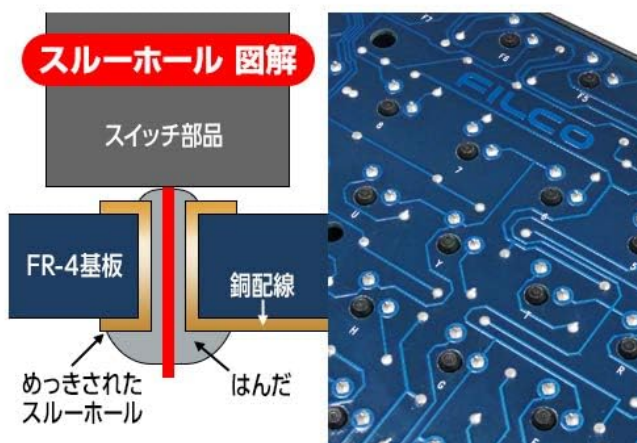

ガラスエポキシ2層基板・スルーホール仕様

USB&Bluetooth3.0両対応! 4台までのデバイス登録とスムーズな切り替えが可能。使い心地、打ち心地にこだわった質実剛健なメカニカルキーボード

Image: Detail of a Cherry MX Red mechanical switch, known for its linear and smooth keystroke.

SETUP

1. Wired USB Connection

1. Connect the provided USB cable to the USB port on the keyboard.
2. Connect the other end of the USB cable to an available USB port on your computer.
3. The keyboard will be automatically recognized by your operating system and ready for use.


2. Wireless Bluetooth Connection

The keyboard can be powered by batteries for wireless use or via USB for both power and wired connection.



CHERRY MX linear red switch

Red switch

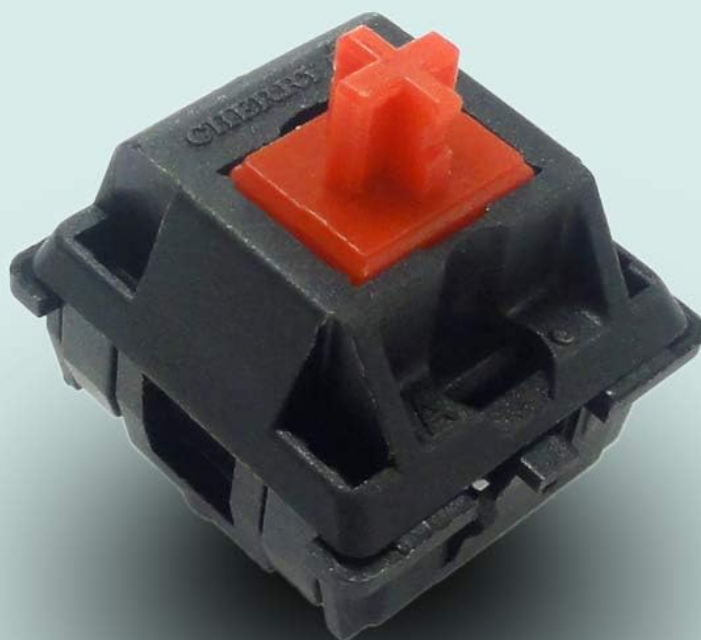

赤軸

軽くソフトなキータッチで、クリック感なし。黒軸同様に押下げ2mmのところでスイッチが入る。メカニカルテイストは薄めだが、万人受けする不動の二番人気。

Image: Visual representation of the three connection modes: wired USB, wireless Bluetooth with battery power, and wireless Bluetooth with USB power.

Pairing with a Device

1. Ensure the keyboard has sufficient power (either via batteries or USB connection).
2. Turn on the Bluetooth function on your computer or mobile device.
3. On the keyboard, press and hold the **Fn** key and one of the **Bluetooth device keys (1, 2, 3, or 4)** for approximately 3 seconds until the corresponding LED indicator flashes rapidly. This puts the keyboard into pairing mode for that device slot.
4. On your device, search for Bluetooth devices and select "FILCO Majestouch Convertible2" from the list.
5. If prompted, enter the pairing code displayed on your device using the keyboard and press **Enter**.
6. Once paired, the LED indicator for the selected device slot will stop flashing and remain lit for a few seconds, then turn off. The keyboard is now connected.

Switching Between Paired Devices

To switch between up to four paired devices, simply press the **Fn** key simultaneously with the corresponding **Bluetooth device key (1, 2, 3, or 4)** that the device is paired to. The keyboard will automatically connect to the

selected device.


OPERATING INSTRUCTIONS

DIP Switch Customization

The keyboard features DIP switches on the underside, allowing for hardware-level customization of certain key functions. To access the DIP switches, ensure the keyboard is disconnected from all devices (both wired and wireless) and gently flip the keyboard over. Use a small, non-conductive tool to adjust the switches.



有線USB接続・無線Bluetooth接続の両方に対応！

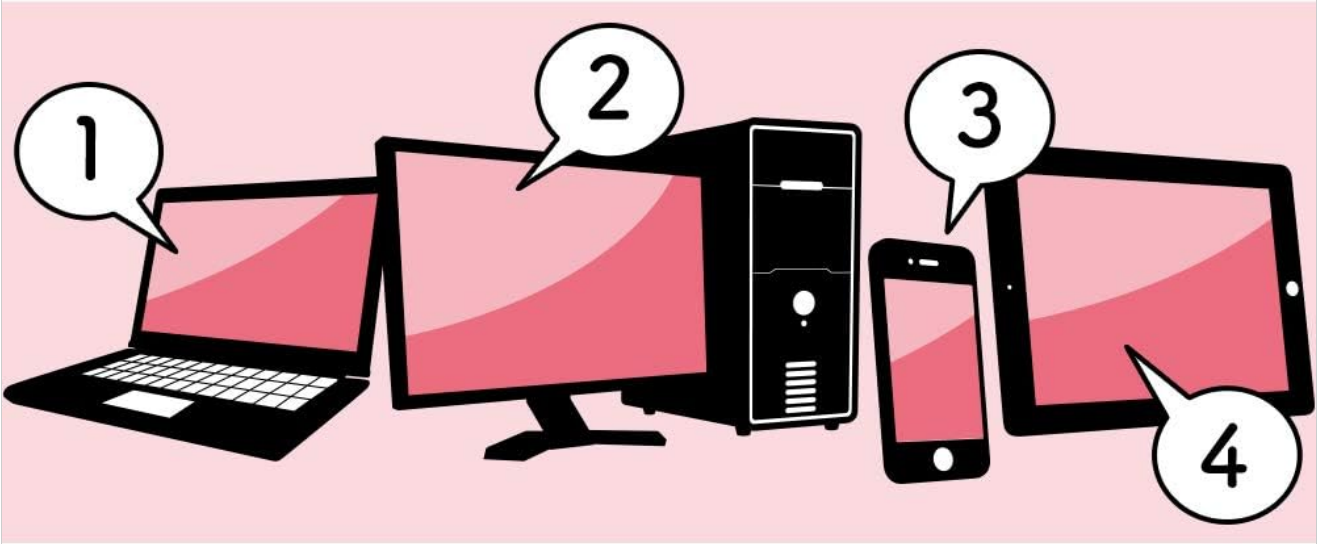

Bluetooth接続は4台のPC・デバイスとペアリング可能

Image: Underside of the keyboard displaying the DIP switches for key function customization.

DIP Switch Functions

Switch	Function (ON Position)
SW1	Locks and disables the Windows key and Application key.
SW2	Swaps the CapsLock key and the left Ctrl key.

Switch	Function (ON Position)
SW3	Swaps the Esc key and the Half-width/Full-width key.
SW4	Changes the Fn key location. (Refer to the detailed diagram on the keyboard's underside for specific mapping.)

After adjusting the DIP switches, reconnect the keyboard to your device. The changes will take effect immediately.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the keyboard. For deeper cleaning, you may use a can of compressed air to remove dust and debris from between the keycaps. Avoid using harsh chemicals or abrasive materials.
- **Keycap Removal:** If necessary, keycaps can be carefully removed using a keycap puller for thorough cleaning. Exercise caution to avoid damaging the switches.
- **Battery Replacement:** If using Bluetooth with battery power, replace batteries when performance degrades. Refer to the battery compartment for the correct battery type and orientation.
- **Storage:** When not in use for extended periods, store the keyboard in a dry, cool place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Keyboard not responding (Wired):**
 - Ensure the USB cable is securely connected to both the keyboard and the computer.
 - Try connecting the keyboard to a different USB port on your computer.
 - Test the keyboard on another computer to rule out a computer-specific issue.
- **Keyboard not responding (Bluetooth):**
 - Check if the keyboard has sufficient battery power.
 - Ensure Bluetooth is enabled on your device.
 - Verify that the keyboard is paired to the correct device slot (1-4) and that you have selected that slot using **Fn + (1-4)**.
 - Try unpairing and re-pairing the keyboard with your device.
 - Ensure there are no strong interference sources (e.g., Wi-Fi routers, other Bluetooth devices) nearby that might disrupt the connection.
- **Keys not functioning correctly:**
 - Check the DIP switch settings on the underside of the keyboard to ensure no unintended remapping has occurred.
 - Clean any debris or dust from under the affected keycaps.

SPECIFICATIONS

Feature	Detail
Brand	FILCO

Feature	Detail
Model Number	FKBC87MRL/EB2
Key Switch Type	Cherry MX Red (Linear)
Layout	US ASCII, Tenkeyless (87 keys)
Connectivity	Wired USB, Wireless Bluetooth 3.0
Multi-pairing	Up to 4 devices
Power Source	USB bus power / Batteries (for Bluetooth)
Weight	0.98 kg
Recommended Use	Office, Gaming

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official FILCO website or contact your local retailer. Keep your proof of purchase for warranty claims.

Official FILCO Website: <https://www.filco.co.jp/>

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question