

Little Partners LP0280

Little Partners Deluxe Learn 'N Play Toddler Easel LP0280
Instruction Manual

Model: LP0280

INTRODUCTION

The Little Partners Deluxe Learn 'N Play Toddler Easel is a versatile art center designed for young children. It features a dual-sided design with a chalkboard on one side and a magnetic dry erase whiteboard on the other, along with a paper feed for roll paper. This manual provides essential information regarding the easel's setup, operation, maintenance, and safety to ensure proper and safe use.

SAFETY INFORMATION

This product has been thoughtfully designed and rigorously tested to meet and exceed safety standards. It is free from harmful chemicals and VOCs, ensuring it is safe for everyday use by children. Always supervise children during use. Ensure the easel is placed on a stable, level surface to prevent tipping. Regularly inspect the easel for any loose parts or damage and discontinue use if any issues are found.

PACKAGE CONTENTS

Before assembly, verify that all the following items are present in your package:

- Easel Frame (Solid Hard Wood New Zealand Pine)
- One paper roll (18 inch x 75 ft)
- Two fabric vinyl coated clean bins
- Two wipe-clean surface trays for organizing supplies
- Four paint cups
- One eraser
- Eight stoppers
- Assembly hardware and instructions



Supplies Included:

- 25 feet of paper
- 4 Spill-proof cups
- 2 Fabric Bins
- 6 Paper Clips
- Eraser



This image highlights the dual-sided nature of the easel and lists the art supplies provided with the product, such as paper, paint cups, and storage bins.

SETUP

The Little Partners Deluxe Learn 'N Play Toddler Easel requires assembly. Please refer to the separate assembly instructions included in your product packaging for detailed steps. Ensure all components are present and undamaged before beginning assembly. A Phillips head screwdriver may be required. Follow the instructions carefully to ensure the easel is assembled correctly and securely.



This image shows a young child engaging with the easel, illustrating its appropriate size and ease of use for toddlers.

OPERATING INSTRUCTIONS



This visual demonstrates the versatility of the easel, showcasing its four primary functions: a magnetic dry erase board, a chalkboard, a surface for magnets, and a paper roll feeder.

Chalkboard Use

Use standard chalk on the black chalkboard surface. To erase, use the provided eraser or a damp cloth. Avoid liquid chalk markers unless specifically designed for chalkboards and tested in an inconspicuous area to prevent permanent marks.

Magnetic Dry Erase Whiteboard Use

Utilize dry erase markers on the white magnetic surface. The surface also supports magnets for attaching papers or magnetic letters/numbers. Erase with the provided eraser or a dry cloth. For stubborn marks, a whiteboard cleaner can be used. Do not use permanent markers.

Paper Feed Operation

To use the paper roll, thread the paper from the roll over the top of the easel and down the desired side (chalkboard or whiteboard). Secure the paper using the integrated paper clips or stoppers located on the easel. Advance the paper as needed by gently pulling it down from the roll.

Storage Bins and Trays

The easel includes two fabric vinyl-coated bins and two wipe-clean surface trays. Use these to organize and store art supplies such as chalk, markers, paint cups, and paper. Place the bins on the lower shelf for easy access.



Two **Spacious Shelves** and
two **Fabric Bins** help
keep supplies **Organized!**

This image focuses on the integrated storage solution, featuring two shelves and two fabric bins for keeping art supplies tidy and accessible.

MAINTENANCE

Proper maintenance ensures the longevity and continued safe use of your easel.

- **Cleaning the Frame:** Wipe down the wooden frame with a damp cloth as needed. Avoid abrasive cleaners or harsh chemicals, which can damage the wood finish.
- **Cleaning the Chalkboard:** For a thorough clean, use a damp cloth after dry erasing. Allow to air dry completely before next use.
- **Cleaning the Dry Erase Board:** Use a dry cloth or the provided eraser for daily cleaning. If marks persist, use a specialized dry erase board cleaner.

- **General Care:** Regularly check all screws and connections to ensure the easel remains stable and secure. Tighten any loose hardware as necessary.

TROUBLESHOOTING

If you encounter any issues with your easel, consider the following:

- **Easel Instability:** If the easel feels unstable, verify that all assembly screws are tightened correctly. Ensure it is placed on a flat, even surface.
- **Paper Roll Feed Issues:** If the paper roll does not feed smoothly, check for any obstructions or ensure the roll is properly seated on its holder.
- **Missing Parts or Assembly Difficulties:** For any missing parts or assembly difficulties not covered in the included instructions, contact Little Partners customer support for assistance.

SPECIFICATIONS

Model Number	LP0280
Brand	Little Partners
Color	Earl Grey
Material	Wood (New Zealand Pine)
Product Dimensions (D x W x H)	19.8" x 23.9" x 51.13"
Item Weight	24 Pounds
Easel Type	A-Frame Easel, Dual-Sided
Required Assembly	Yes



This diagram provides the exact measurements of the assembled easel, including its width, height, and depth, which is useful for planning placement.

WARRANTY

The Little Partners Deluxe Learn 'N Play Toddler Easel comes with a Limited Lifetime Warranty, guaranteeing long-lasting durability. For specific terms and conditions, including coverage details and how to make a claim, please refer to the warranty information provided with your original purchase or contact Little Partners customer service directly.

SUPPORT

For further assistance, questions, or to report any issues with your Little Partners Deluxe Learn 'N Play Toddler Easel, please visit the official Little Partners website. Contact information, including customer service phone numbers or email addresses, can typically be found in the 'Contact Us' section of their website or on the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01M0P72I6>

More documents and user manuals: <https://manuals.plus/>