

Karlsson KA5364WD

Karlsson KA5364WD Flip Calendar Wall Clock Instruction Manual

Model: KA5364WD

INTRODUCTION

Thank you for choosing the Karlsson KA5364WD Flip Calendar Wall Clock. This manual provides essential information for the safe and efficient use of your new clock. Please read these instructions carefully before installation and operation, and retain them for future reference.

SAFETY INFORMATION

- Always use the specified battery type and ensure correct polarity (+/-) when inserting batteries.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the clock will not be used for an extended period to prevent leakage.
- Keep batteries out of reach of children.
- Ensure the clock is securely mounted if hanging on a wall to prevent it from falling.
- Avoid exposing the clock to extreme temperatures, direct sunlight, or high humidity.

PACKAGE CONTENTS

Please check that all items are present in the packaging:

- Karlsson KA5364WD Flip Calendar Wall Clock
- Instruction Manual (this document)

Note: Batteries are not included and must be purchased separately.

PRODUCT OVERVIEW

The Karlsson KA5364WD is a stylish flip calendar clock designed to display the time, date, and day of the

week. It features an analog clock face and a unique flip mechanism for the calendar display, all encased in a bamboo-look frame.



This image displays the Karlsson KA5364WD Flip Calendar Wall Clock. The clock features a light brown bamboo-look frame. The main display is black with white flip cards showing the year, month, date, and day of the week. A small analog clock face is located in the bottom left corner.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of the clock.
2. Remove the cover by sliding or unlatching it.
3. Insert the required batteries (typically AA or C, refer to the compartment label for exact type and quantity) ensuring the correct positive (+) and negative (-) orientation.
4. Replace the battery compartment cover securely.

2. Mounting Options

The Karlsson KA5364WD clock can be either wall-mounted or placed on a flat surface.

- **Wall Mounting:** Use a suitable screw or hook (not included) in your desired wall location. Ensure the screw/hook is strong enough to support the clock's weight (approximately 1.42 kg). Hang the clock using the keyhole slot on the back.
- **Freestanding:** Place the clock on a stable, flat surface such as a desk, shelf, or mantelpiece.

OPERATING INSTRUCTIONS

1. Setting the Time (Analog Clock)

1. Locate the time setting knob on the back of the clock, usually near the analog clock mechanism.
2. Gently turn the knob in either direction to move the hour and minute hands to the correct time.
3. Ensure the hands are not obstructed and move freely.

2. Setting the Date and Day (Flip Calendar)

The flip calendar mechanism typically has separate adjustment wheels or levers for the year, month, date, and day. These are usually located on the side or back of the clock.

1. **Year Adjustment:** Find the wheel or lever for the year and rotate it until the correct year is displayed.
2. **Month Adjustment:** Locate the month adjustment control and advance it until the current month is shown.
3. **Date Adjustment:** Use the date adjustment control to set the current day of the month.
4. **Day of Week Adjustment:** Adjust the day of the week control to display the correct day.

Note: Some models may automatically advance the date and day once set, while others require manual adjustment for months with fewer than 31 days. Refer to the specific controls on your clock.

MAINTENANCE

- **Cleaning:** Wipe the clock surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish.
- **Battery Replacement:** Replace all batteries when the clock starts to lose time or the flip mechanism becomes sluggish. Always replace with fresh batteries of the same type.
- **Mechanism Care:** Avoid forcing the flip mechanism or analog hands. If adjustments are stiff, check for obstructions or consider battery replacement.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not running or running slowly	Dead or weak batteries; Incorrect battery insertion	Replace batteries with new ones, ensuring correct polarity.
Flip calendar not advancing or stuck	Weak batteries; Obstruction in the mechanism; Incorrect setting	Replace batteries. Gently check for any foreign objects. Ensure the date/day is set correctly.

Problem	Possible Cause	Solution
Analog hands are loose or not moving	Impact damage; Internal mechanism issue	Contact customer support if hands are loose. Ensure batteries are fresh.

SPECIFICATIONS

- **Model Number:** PTG-KA5364WD
- **Dimensions (L x W x H):** 30.6 x 3.81 x 27.3 cm (12.05 x 1.5 x 10.75 inches)
- **Weight:** 1.42 kg (3.13 lbs)
- **Material:** Plastic (with bamboo-look finish)
- **Color:** Brown
- **Display Type:** Flip (calendar), Analog (time)
- **Power Source:** Battery Powered
- **Features:** Calendar display (Year, Month, Date, Day)
- **Usage:** Indoor

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact Karlsson customer service directly. Specific warranty details are not provided within this instruction manual.

You can often find support contact information on the manufacturer's official website: www.karlssonclocks.com