

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY BN59-00996A Remote Control User Manual for Samsung TVs

ECONTROLLY BN59-00996A

ECONTROLLY BN59-00996A Remote Control User Manual

For Samsung Television Models

INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY BN59-00996A replacement remote control. This remote is designed to function as a direct replacement for your original Samsung TV remote, offering seamless compatibility with various Samsung television models. No programming is required for its operation.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back of the remote control with the battery compartment open, illustrating where to insert two AAA batteries.

The remote control is now ready for use. No additional programming or pairing is required.

OPERATING INSTRUCTIONS

To operate your television, point the remote control directly at the infrared (IR) receiver on your Samsung TV. Ensure there are no obstructions between the remote and the TV.





Image: Front view of the remote control, showing the layout of all buttons.

Key Functions:

- **POWER** (Red Button): Turns the television on or off.
- **SOURCE**: Cycles through available input sources (e.g., HDMI, AV, Component).
- **Number Buttons (0-9)**: Directly select channels or input numerical values.
- **VOL +/-**: Adjusts the volume level.
- **CH +/-**: Changes the television channel.
- **MUTE**: Silences or restores the television audio.
- **MENU**: Accesses the television's main menu.
- **TOOLS**: Opens a quick menu with common functions.
- **INFO**: Displays information about the current program or input.
- **Directional Pad (Up, Down, Left, Right) & ENTER**: Navigates through menus and confirms selections.
- **RETURN**: Returns to the previous menu or screen.
- **EXIT**: Exits the current menu or function.
- **Colored Buttons (A, B, C, D)**: Provide access to specific functions depending on the TV model or current application.
- **S.MODE, SLEEP, MTS, P.MODE, P.SIZE, CC**: Buttons for various picture, sound, and display settings.
- **Media Playback Controls (Rewind, Play/Pause, Fast Forward, Stop)**: Controls media playback when applicable.

MAINTENANCE

- **Cleaning**: Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement**: Replace batteries promptly when the remote's performance diminishes or it stops responding. Old batteries should be disposed of according to local regulations.
- **Storage**: Store the remote in a dry place, away from direct sunlight and extreme temperatures.
- **Handling**: Avoid dropping the remote control or subjecting it to strong impacts, as this can damage internal components.

TROUBLESHOOTING

- **Remote Not Responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Verify there is a clear line of sight between the remote's IR emitter and the TV's IR receiver.
 - Check for any obstructions in front of the TV's IR receiver.
- **Limited Functionality:**

- Confirm that your Samsung TV model is listed in the compatible models section of this manual. While this remote is broadly compatible, specific advanced functions may vary by TV model.
- Some TV settings or external devices may require their original remote control.

SPECIFICATIONS

Model Number	BN59-00996A
Product Dimensions	5 x 1 x 0.25 inches
Item Weight	2 ounces
Batteries Required	2 x AAA (not included)
Connectivity Technology	Infrared (IR)
Compatible Devices	Television
Max Number of Supported Devices	18

COMPATIBLE SAMSUNG TV MODELS

This remote control is compatible with a wide range of Samsung TV models, including but not limited to:

- LN32C530
- LN32C530F1F
- LN32C530F1FXZA
- LN32C530F1FXZC
- LN32C530F1FXZX
- LN32C540
- LN32C540F2D
- LN32C540F2DXZA
- LN32C540F2DXZC
- LN32C540F2DXZX
- LN32C540F2F
- LN32C540F2FXZA
- LN37C530
- LN37C530F1F
- LN37C530F1FXZA
- LN37C530F1FXZX
- LN40C530
- LN40C530F1F
- LN40C530F1FXZA
- LN40C530F1FXZC
- LN40C530F1FXZX
- LN40C540
- LN40C540F2F
- LN40C540F2FX

- LN40C540F2FXZA
- LN40C540F2FXZC
- LN40C540F2FXZX
- LN46C530
- LN46C530F1F
- LN46C530F1FXZA
- LN46C530F1FXZC
- LN46C530F1FXZX
- LN46C540
- LN46C540F2F
- LN46C540F2FXZA
- LN46C540F2FXZC
- LN46C540F2FXZX
- LN52C530
- LN52C530F1F
- LN52C530F1FXZA
- LN52C530F1FXZC
- LN52C530F1FXZX
- PL50C530
- PL50C530C1F
- PN50C530
- PN42C450B1D

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01M0RBSWZ>

More documents and user manuals: **<https://manuals.plus/>**