

[Manuals.plus](#) /

› [EMDMAK](#) /

› EMDMAK Door Stop Alarm with 120DB Siren Instruction Manual

EMDMAK a-001

EMDMAK Door Stop Alarm with 120DB Siren

Model: a-001 | Brand: EMDMAK

PRODUCT OVERVIEW

The EMDMAK Door Stop Alarm is a versatile security device designed to provide peace of mind whether you are at home or traveling. It functions both as a door stopper and an alarm, preventing unauthorized entry and alerting you to potential intruders with a loud 120DB siren. Its compact and portable design makes it an essential tool for personal safety.

- **Dual Function:** Can be used as a door stop alarm and a simple door stopper. Its rubberized bottom prevents the door from sliding and triggers the alarm.
- **Adjustable Sensitivity:** Features three levels of sensitivity (High-Medium-Low) to suit various needs and environments.
- **Loud Alarm:** Emits a powerful 120DB siren to deter intruders and alert occupants.
- **Easy to Use:** No complex installation required; simply place it behind any inner pull door.
- **Portable:** Lightweight and compact, ideal for travel and personal security.



Figure 1: Two EMDMAK Door Stop Alarms, ready for use.

SETUP

The EMDMAK Door Stop Alarm requires minimal setup. Before first use, you will need to install a 9V battery (not included).

Battery Installation

1. Locate the battery compartment on the underside of the alarm unit.
2. Slide open the battery cover.
3. Insert one 9V battery, ensuring correct polarity.
4. Close the battery cover securely.

Wedge-shaped Design •

If an intruder attempts to enter, the unit will wedge underneath the door.

Sensitivity Switch •

Allows you to adjust the amount of movement required to set off the alarm.

Power On/Off

• Powered by One 9V Battery

• Non-skid Pad

Prevents door from opening and immediately activates an alarm.

Figure 2: Key features including the 9V battery compartment.



Figure 3: The alarm functions as both a door stop and an alarm.

OPERATING INSTRUCTIONS

Placement

Place the EMDMAK Door Stop Alarm on the floor behind any inward-opening door. Ensure the rubberized bottom is firmly against the floor and the metal plate is positioned to be pressed down by the door if it opens.



Figure 4: Proper placement of the door stop alarm under a door.



Figure 5: The alarm sounding when the door is pushed.

Sensitivity Adjustment

The alarm features a sensitivity switch with three settings: High (H), Medium (M), and Low (L). Adjust the switch according to your preference and the environment. Higher sensitivity will trigger the alarm with less pressure/movement from the door.

Multifunctional



Figure 6: Visual representation of the three adjustable sensitivity levels.

Power On/Off

Use the ON/OFF switch located on the side of the unit to activate or deactivate the alarm function. Ensure the alarm is switched to 'ON' for active protection.

Video 2: A review demonstrating the dual function of the door alarm and door stopper, including sensitivity settings and power switch.

MAINTENANCE

To ensure optimal performance of your EMDMAK Door Stop Alarm, regular maintenance is recommended.

Battery Replacement

The alarm is powered by a 9V battery. Under normal circumstances, one battery can last for approximately one year. Replace the battery when the alarm sound becomes weak or the unit fails to activate. Follow the battery installation steps outlined in the Setup section.

TROUBLESHOOTING

If your EMDMAK Door Stop Alarm is not functioning as expected, consider the following:

- **Alarm not sounding:** Check if the unit is switched to 'ON'. Ensure the 9V battery is correctly installed and has sufficient power. Replace the battery if necessary.
- **Alarm too sensitive/not sensitive enough:** Adjust the sensitivity switch (H/M/L) on the side of the unit to match your desired level of detection.
- **Unit sliding on floor:** Ensure the rubberized bottom is clean and free of debris. The non-skid pad is designed to provide firm grip on various floor types including wood, marble, carpet, and tiles.



Figure 7: The alarm is effective on various floor surfaces.

SPECIFICATIONS

Brand	EMDMAK
Model Number	a-001

ASIN	B01M0X4QM4
UPC	603470399744
Color	Black
Material	Plastic, Acrylonitrile Butadiene Styrene
Product Dimensions	5.5"L x 1.8"W x 1.6"Th
Item Weight	3.36 ounces
Power Source	Battery (9V)
Alarm Volume	120DB

WARRANTY AND SUPPORT

Specific warranty and support information for the EMDMAK Door Stop Alarm is not available in the provided product data. Please refer to the product packaging or contact EMDMAK customer service for details regarding warranty coverage and technical support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

