

SENCOR SEG 710BP

Sencor SEG 710bp Egg Kettle Instruction Manual

Model: SEG 710BP | Brand: SENCOR

1. INTRODUCTION

Thank you for purchasing the Sencor SEG 710bp Egg Kettle. This appliance is designed to simplify the process of cooking eggs to your desired consistency, whether soft, medium, or hard-boiled. Please read this instruction manual carefully before first use to ensure safe and optimal operation of your new egg kettle. Keep this manual for future reference.



Image: The Sencor SEG 710bp Egg Kettle, showing its compact design and an example of a perfectly cooked soft-boiled egg.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.

- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Sencor SEG 710bp Egg Kettle:

1. Transparent Lid
2. Egg Tray (removable, holds up to 7 eggs)
3. Heating Plate
4. Base Unit with Power Switch and Indicator Light
5. Measuring Cup with Egg Piercer



Image: An exploded view illustrating the main components of the Sencor SEG 710bp Egg Kettle, including the lid, egg tray, heating plate, and measuring cup.

4. SETUP AND FIRST USE

Before using your egg kettle for the first time, please follow these steps:

- Unpack the appliance and remove all packaging materials.
- Wipe the heating plate with a damp cloth.
- Wash the transparent lid, egg tray, and measuring cup with warm soapy water, then rinse and dry thoroughly. These parts are not dishwasher safe.
- Place the base unit on a stable, flat, heat-resistant surface.
- Ensure the power switch is in the "OFF" position before plugging into a power outlet.

5. OPERATING INSTRUCTIONS

The Sencor SEG 710bp Egg Kettle allows you to cook eggs to three different consistencies: soft, medium, and hard. The amount of water determines the cooking level.

5.1. Preparing the Eggs

- Using the egg piercer located at the bottom of the measuring cup, carefully pierce the larger end of each egg. This prevents the eggs from cracking during cooking.
- Place the pierced eggs onto the egg tray. You can cook up to 7 eggs at a time.



Image: The Sencor SEG 710bp Egg Kettle with eggs placed in the removable tray, ready for cooking.

5.2. Adding Water

Use the provided measuring cup to add the correct amount of water to the heating plate. The measuring cup has markings for different cooking levels:

- **Soft-Boiled Eggs:** Fill water up to the "SOFT" line.
- **Medium-Boiled Eggs:** Fill water up to the "MEDIUM" line.
- **Hard-Boiled Eggs:** Fill water up to the "HARD" line.

Pour the measured water directly onto the heating plate of the base unit.

5.3. Cooking Process

- Place the egg tray with eggs onto the base unit.
- Cover the egg kettle with the transparent lid.
- Plug the appliance into a suitable power outlet.
- Press the power switch to the "ON" position. The indicator light will illuminate.
- The appliance will begin cooking. Once all the water has evaporated and the eggs are cooked, the electronic timer will beep, and the appliance will automatically switch off.

- Carefully remove the lid using the handle, as steam will be hot.
- Using the removable egg tray, carefully transfer the cooked eggs to a bowl of cold water to stop the cooking process and make them easier to peel.



Image: The Sencor SEG 710bp Egg Kettle fully assembled with the transparent lid in place during operation.

6. CLEANING AND MAINTENANCE

Regular cleaning will prolong the life of your Sencor SEG 710bp Egg Kettle.

- Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- **Heating Plate:** After each use, wipe the heating plate with a damp cloth. If mineral deposits (limescale) appear, you can remove them by wiping with a cloth dampened with vinegar or a descaling solution. Rinse thoroughly with a damp cloth afterwards. Do not immerse the base unit in water.
- **Lid, Egg Tray, and Measuring Cup:** Wash these parts in warm, soapy water. Rinse thoroughly and dry completely. These parts are not suitable for dishwasher cleaning.
- Do not use abrasive cleaners or scouring pads, as they may scratch the surfaces.
- Store the appliance in a cool, dry place when not in use.

7. TROUBLESHOOTING

If you encounter issues with your egg kettle, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power switch is off.	Ensure the appliance is securely plugged into a working outlet and the power switch is in the "ON" position.
Eggs are not cooked to desired consistency.	Incorrect water amount; eggs too large/small.	Ensure the correct amount of water is used according to the measuring cup markings. Adjust water slightly for very large or very small eggs.
Eggs crack during cooking.	Eggs not pierced; cold eggs placed directly into hot appliance.	Always pierce the larger end of each egg with the provided piercer. Use room temperature eggs if possible.
Limescale buildup on heating plate.	Hard water deposits.	Clean the heating plate with a cloth dampened with vinegar or a descaling solution.

If the problem persists, please contact customer support.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	SEG 710BP
Brand	SENCOR
Power / Wattage	380 watts
Capacity	Up to 7 eggs
Product Dimensions (L x W x H)	18.3 x 18.1 x 17.4 cm
Item Weight	690 g
Material	Plastic
Colour	Black

9. WARRANTY AND SERVICE

Sencor products are manufactured to the highest quality standards. For information regarding warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Sencor website. Keep your proof of purchase for any warranty claims.

10. CUSTOMER SUPPORT

For further assistance, troubleshooting, or spare parts, please visit the official Sencor website or contact their customer service department. You can find more information and support at www.sencor.eu.

