

[Manuals.plus](#) /

> [Mazzer](#) /

> Mazzer Espresso Grinder Doser Lid User Manual

Mazzer Super Jolly / Normale, Mini & Major

Mazzer Espresso Grinder Doser Lid User Manual

Model: Super Jolly / Normale, Mini & Major Series

Brand: Mazzer

INTRODUCTION

This manual provides essential information for the proper installation, use, and maintenance of your Mazzer Espresso Grinder Doser Lid. This OEM part is designed for compatibility with Mazzer Super Jolly, Normale, Mini, and Major series espresso grinders, ensuring a precise fit and optimal performance.



Image of the Mazzer Espresso Grinder Doser Lid, a circular black plastic component with a small central indentation.

SETUP AND INSTALLATION

The Mazzer Doser Lid is designed for straightforward installation. Ensure your grinder is turned off and unplugged before proceeding.

1. **Preparation:** Ensure the doser chamber is clean and free of coffee grounds or debris.
2. **Placement:** Align the lid with the opening of the doser chamber on your Mazzer grinder.
3. **Secure:** Gently press the lid down until it sits securely in place. The lid should fit snugly to prevent grounds from escaping.

No tools are required for the installation of this lid.

OPERATING INSTRUCTIONS

The doser lid serves to contain ground coffee within the doser chamber and protect it from external elements.

- **During Grinding:** Keep the lid in place while the grinder is operating to prevent coffee grounds from scattering.
- **Accessing Grounds:** To access the ground coffee, simply lift the lid off the doser chamber.
- **Storage:** When the grinder is not in use, keep the lid on the doser to maintain freshness and prevent dust accumulation.

MAINTENANCE AND CLEANING

Regular cleaning of the doser lid will ensure hygiene and prolong its lifespan.

- **Daily Cleaning:** Wipe the lid with a dry, lint-free cloth to remove any residual coffee dust.
- **Periodic Deep Cleaning:**
 - a. Remove the lid from the doser.
 - b. Wash the lid with warm water and a mild, non-abrasive dish soap.
 - c. Rinse thoroughly under running water to remove all soap residue.
 - d. Dry completely with a clean cloth or allow to air dry before reattaching to the grinder.
- **Do Not:** Use abrasive cleaners, solvents, or put the lid in a dishwasher, as this may damage the material.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------------------------------------|--|--|
| Lid does not fit securely. | Incorrect model lid; debris in doser rim; lid warped. | Verify lid compatibility with your Mazzer model. Clean the doser rim. If lid is warped, replacement may be necessary. |
| Coffee grounds escape around the lid. | Lid not seated properly; excessive vibration; lid damaged. | Ensure lid is fully seated. Check grinder for excessive vibration. Inspect lid for cracks or damage; replace if necessary. |

SPECIFICATIONS

- **Brand:** Mazzer
- **Product Type:** Doser Lid
- **Compatibility:** Mazzer Super Jolly, Normale, Mini, Major Espresso Grinders
- **Material:** Durable Plastic
- **Dimensions:** Approximately 5"D x 5"W x 1"H (as per product specifications)
- **Item Weight:** Approximately 0.81 ounces (as per product specifications)
- **UPC:** 648609650891
- **ASIN:** B01M13F6UE

WARRANTY INFORMATION

Specific warranty details for this OEM part are not provided within this manual. Please refer to your original grinder's warranty documentation or contact Mazzer customer support for information regarding replacement parts warranty.

CUSTOMER SUPPORT

For further assistance or inquiries regarding your Mazzer Doser Lid, please contact Mazzer customer support or your authorized Mazzer dealer. Contact information is typically available on the official Mazzer website or through your product's original documentation.

© 2023 Mazzer. All rights reserved.

This manual is for informational purposes only. Mazzer is not responsible for any damage or injury resulting from improper use or installation.