

[Manuals.plus](#) /

› [GoPro](#) /

› GoPro Hero5 Black User Manual

GoPro CHDHX-502

GoPro Hero5 Black User Manual

Model: CHDHX-502

INTRODUCTION

The GoPro Hero5 Black is a versatile and robust digital action camera designed to capture immersive 4K HD video and 12MP photos. Its one-button simplicity, convenient touch display, and waterproof design make it ideal for various environments, including underwater use without additional housing. Featuring smooth, stabilized video, crystal-clear audio, voice control, and GPS, the Hero5 Black offers an advanced capture experience. Footage can be automatically uploaded to your GoPro Plus cloud account for easy access and editing.

WHAT'S INCLUDED

Your GoPro Hero5 Black package includes the following components:

- GoPro HERO5 Black Camera
- The Frame (HERO5 Black)
- Rechargeable Battery (HERO5 Black)
- Curved Adhesive Mount
- Flat Adhesive Mount
- Mounting Buckle
- USB-C Cable

CAMERA OVERVIEW

Familiarize yourself with the key components of your GoPro Hero5 Black camera.



Front-angled view of the GoPro Hero5 Black, showing the lens, front display, and mounting buckle.



Direct front view of the GoPro Hero5 Black, highlighting the camera lens and small front status screen.



Rear view of the GoPro Hero5 Black, displaying its touch screen interface.



Side view of the GoPro Hero5 Black, illustrating the mode/power button and USB-C port cover.

SETUP

1. Battery Installation

Open the battery door located at the bottom of the camera. Insert the rechargeable battery with the correct orientation, ensuring the contacts align. Close the door securely until it clicks into place.

2. microSD Card Insertion

Locate the microSD card slot on the side of the camera. Insert a compatible microSD card (Class 10 or UHS-I/II recommended) with the label facing the front of the camera until it clicks. To remove, push the card in slightly until it springs out.

3. Initial Power On

Press the Mode button (located on the side) to power on the camera. Follow the on-screen prompts for initial setup, including language selection and date/time settings.

4. Charging the Battery

Connect the included USB-C cable to the camera's USB-C port and then to a USB power adapter or computer. The camera's front status light will indicate charging status.

OPERATING THE CAMERA

Basic Controls

- **Mode Button:** Press to power on/off, and to cycle through video, photo, and multi-shot modes.
- **Shutter Button:** Press to start/stop recording video or to take a photo.

Touch Screen Navigation

The 2-inch touch display allows for intuitive control. Swipe left/right to change modes, swipe down for settings, and tap to select options or adjust parameters.

Voice Control

The Hero5 Black responds to voice commands. Simply say

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question