

[Manuals.plus](#) /

> [ADE](#) /

> ADE Mini Electric Chopper KG2156 User Manual

## ADE KG2156

# ADE Mini Electric Chopper KG2156 User Manual

Model: KG2156

## INTRODUCTION

Thank you for choosing the ADE Mini Electric Chopper KG2156. This compact, cordless, and versatile kitchen assistant is designed for efficient food preparation in small spaces, for single households, or on the go. It features multiple attachments for chopping, whisking, and mixing, powered by a rechargeable battery.

Please read this manual carefully before first use to ensure safe and optimal operation of your appliance. Keep these instructions for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the appliance is switched off and disconnected from the power source (USB cable) before assembling, disassembling, or cleaning.
- Keep hands and utensils away from moving blades during operation to prevent injury.
- The blades are extremely sharp. Handle with care during assembly, disassembly, and cleaning.
- Do not immerse the motor unit (handle with battery) in water or other liquids. Clean with a damp cloth only.
- This appliance is not intended for use by children or persons with reduced physical, sensory, or mental capabilities unless supervised.
- Do not operate the appliance if any part is damaged. Contact customer support for assistance.
- Use only original ADE accessories with this appliance.
- The mixer is designed for short-term use. After 50-70 seconds of continuous operation (depending on power level), allow a 1-minute pause to prevent overheating.

## PRODUCT COMPONENTS

The ADE Mini Electric Chopper KG2156 comes with the following components:

- Motor Unit (Handle with integrated battery)

- Transparent Food Container (0.3 L capacity, max 0.25 L fill)
- Container Lid
- Blade Insert (with 3 stainless steel blades)
- Whisk Attachment (stainless steel)
- Mixer Attachment (stainless steel)
- USB Charging Cable



Image: All components of the ADE Mini Electric Chopper KG2156, including the main handle, transparent container, lid, blade unit, whisk, mixer, and USB charging cable, shown in their packaging.

## SETUP AND FIRST USE

### 1. Charging the Battery


1. Before first use, fully charge the motor unit's integrated battery.
2. Connect the provided USB charging cable to the charging port on the motor unit.

3. Plug the other end of the USB cable into a suitable USB power adapter (not included) or a computer USB port.
4. The charging indicator light (if present) will show the charging status. A full charge can provide up to three hours of operation.

## Apparecchio multifunzione senza cavo

**5 livelli di  
potenza**

**Potente  
accumulatore  
integrato da 1300 mAh**

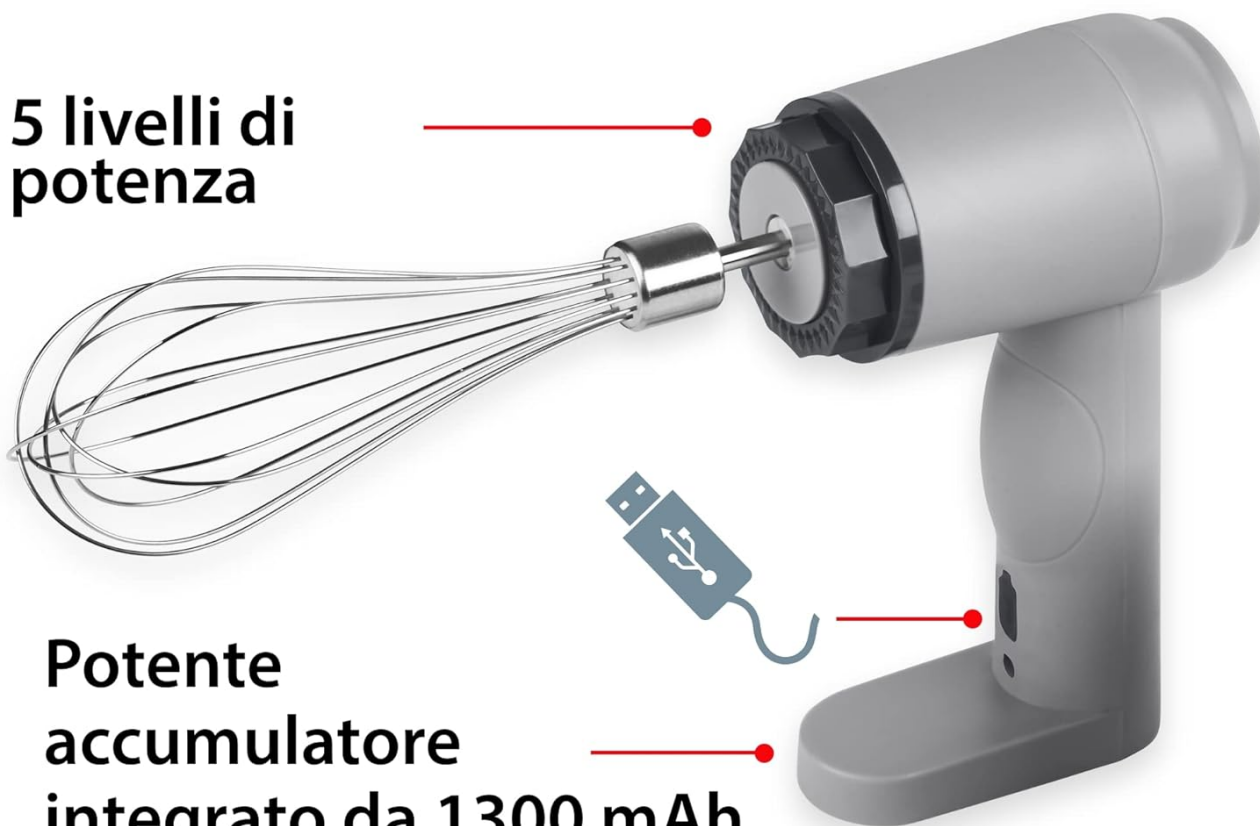

**LUNGA AUTONOMIA, FINO A 3 ORE  
RICARICA RAPIDA TRAMITE USB**

Image: The motor unit of the ADE Mini Electric Chopper KG2156, highlighting the USB charging port and the power level selection on the touchscreen.

### 2. Assembling the Chopper

1. Place the transparent food container on a stable surface.
2. Carefully place the blade insert onto the central pin inside the container. Ensure it sits securely.
3. Add your ingredients to the container. Do not exceed the MAX fill line (0.25 L).
4. Place the container lid onto the container, aligning it properly.
5. Attach the motor unit to the lid, twisting or clicking it into place until secure.

### 3. Assembling the Whisk/Mixer

1. Select either the whisk or mixer attachment.
2. Insert the chosen attachment into the opening on the bottom of the motor unit until it clicks into place.

3. Ensure the attachment is firmly secured before use.



**FRUSTA E AGITATORE**

**Accessoires robustes  
pour battre et mélanger  
les œufs, les crèmes,  
les sauces et plus  
encore**

**In acciaio inox**

**Lavabile in lavastoviglie**

Image: The stainless steel whisk and mixer attachments for the ADE Mini Electric Chopper KG2156, designed for beating eggs, whipping cream, and mixing sauces.

## OPERATING INSTRUCTIONS

### 1. Using the Chopper

- After assembling the chopper (as described in Setup), ensure the motor unit is securely attached.
- Select one of the five power levels on the touchscreen of the motor unit. Start with a lower setting for softer ingredients or for a coarser chop, and increase for harder ingredients or finer results.
- Press and hold the power button to operate. Release to stop. Use short pulses for better control over the consistency.
- For optimal results, do not overload the container. Process ingredients in small batches if necessary.
- Observe the 50-70 second continuous operation limit, followed by a 1-minute pause to prevent motor strain.



# TRITATUTTO

**3 lame in acciaio inox  
affilatissime per cipolle,  
aglio, erbe aromatiche  
e molto altro**

**Capacità di  
300 ml**

**Lavabile in lavastoviglie**



Image: The ADE Mini Electric Chopper KG2156 in use, demonstrating its ability to chop garlic and blend ingredients for a smoothie, highlighting the 300ml capacity container and sharp stainless steel blades.

## 2. Using the Whisk/Mixer

- After attaching the whisk or mixer (as described in Setup), hold the motor unit firmly.
- Immerse the attachment into your ingredients (e.g., eggs, cream, sauces).
- Select the desired power level on the touchscreen.
- Press and hold the power button to operate. Move the whisk/mixer gently through the ingredients for even mixing.
- Adhere to the 50-70 second continuous operation limit, followed by a 1-minute pause.

## CARE AND MAINTENANCE

### Cleaning

1. Always switch off the appliance and disconnect the USB cable before cleaning.
2. Disassemble all removable parts: the container, lid, blade insert, whisk, and mixer attachments.

3. All removable parts, including the blades, are dishwasher safe. Alternatively, wash them by hand with warm, soapy water and rinse thoroughly.
4. **Caution:** The blades are very sharp. Handle with extreme care during cleaning.
5. Wipe the motor unit (handle) with a damp cloth. Do not immerse it in water or rinse it under running water.
6. Ensure all parts are completely dry before reassembling or storing the appliance.

## Storage

Store the appliance and its accessories in a clean, dry place, away from direct sunlight and out of reach of children.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Battery is depleted.	Charge the battery fully using the provided USB cable.
Appliance stops during operation.	Overload protection activated or continuous operation limit reached.	Reduce the amount of ingredients. Allow the appliance to cool down for at least 1 minute before resuming operation.
Ingredients are not chopped/mixed effectively.	Container overloaded or ingredients are too large/hard.	Reduce ingredient quantity. Cut larger ingredients into smaller pieces. Ensure the blade/attachment is correctly installed.
Motor unit does not attach securely.	Lid or attachment not aligned correctly.	Ensure the lid is properly seated on the container and the motor unit is twisted/clicked into place. For whisk/mixer, ensure it's fully inserted.

## TECHNICAL SPECIFICATIONS

**Model:** KG2156

**Brand:** ADE

**Power:** 45 Watts

**Voltage:** 5 Volts (USB charging)

**Power Source:** Battery Powered (integrated rechargeable battery)

**Battery Life:** Up to 3 hours (depending on usage)

**Container Capacity:** 0.3 Liters (max fill 0.25 Liters)

**Dimensions (L x W x H):** 17 cm x 8.8 cm x 16.3 cm

**Weight:** 390 grams

**Blade Material:** Stainless Steel

**Care:** Dishwasher safe (removable parts)

**Special Features:** Cordless, USB rechargeable, 5 power levels

# Compatto e senza cavi



Image: Comparison of the compact ADE Mini Electric Chopper KG2156 with a standard corded hand mixer, illustrating its small size and cordless design.

## WARRANTY AND SUPPORT

For warranty information, please refer to the terms and conditions provided at the point of purchase or on the official ADE website.

If you require assistance, have questions, or need to download instructions in other languages (including Italian), please refer to the following:

- **Online Resources:** Instructions in various languages can be downloaded from the product page on Amazon or by scanning the QR code provided on the printed instructions.
- **Customer Service:** For product support or service inquiries, please contact ADE customer service through their official website or the retailer where the product was purchased.

