

[Manuals.plus](#) /

› [ECR4Kids](#) /

› ECR4Kids Jumbo Princess Palace Playhouse Instruction Manual ELR-12525

ECR4Kids ELR-12525

ECR4Kids Jumbo Princess Palace Playhouse Instruction Manual

Model: ELR-12525

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your ECR4Kids Jumbo Princess Palace Playhouse. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

The Jumbo Princess Palace is a brightly colored structure designed for imaginative and active play, suitable for both indoor and outdoor environments. It features a spacious interior, multiple windows, and a functional front door with a musical doorknob.

SAFETY INFORMATION

- Adult supervision is recommended during play.
- Ensure all parts are securely fastened before use.
- This product is designed for children aged 48 months (4 years) and older.
- Keep small parts away from young children during assembly to prevent choking hazards.
- The product is GREENGUARD[GOLD] Certified for minimal chemical emissions into indoor air.
- Plastic edges are rounded for safety.

SETUP AND ASSEMBLY

Assembly of the ECR4Kids Jumbo Princess Palace Playhouse is required. Follow the included instructions carefully. It is recommended that two adults assemble the playhouse due to its size and weight (approximately 160.9 pounds).

Package Contents:

- 1 Castle (multiple components for assembly)

Tools Required:

- No special tools are typically required for snap-together plastic playhouses, but a rubber mallet may be helpful for securing connections.
- 3 AA batteries for the musical doorknob (not included).

Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components are present and undamaged.
2. **Assemble Base Sections:** Connect the wall panels to form the base structure of the playhouse. Ensure all connections are firm and secure.
3. **Install Door and Windows:** Attach the front door and window frames into their designated openings. The door should swing freely.
4. **Attach Roof Sections:** Carefully place and secure the roof panels onto the assembled walls. This step may require two adults due to the height and size of the roof.
5. **Install Turrets and Flags:** Attach the decorative turrets and flags to the designated points on the roof and castle structure.
6. **Insert Batteries for Doorknob:** Locate the battery compartment on the musical doorknob. Insert 3 AA batteries (not included), ensuring correct polarity. Close the compartment securely.
7. **Final Check:** Inspect the entire playhouse to ensure all parts are correctly assembled and securely fastened.

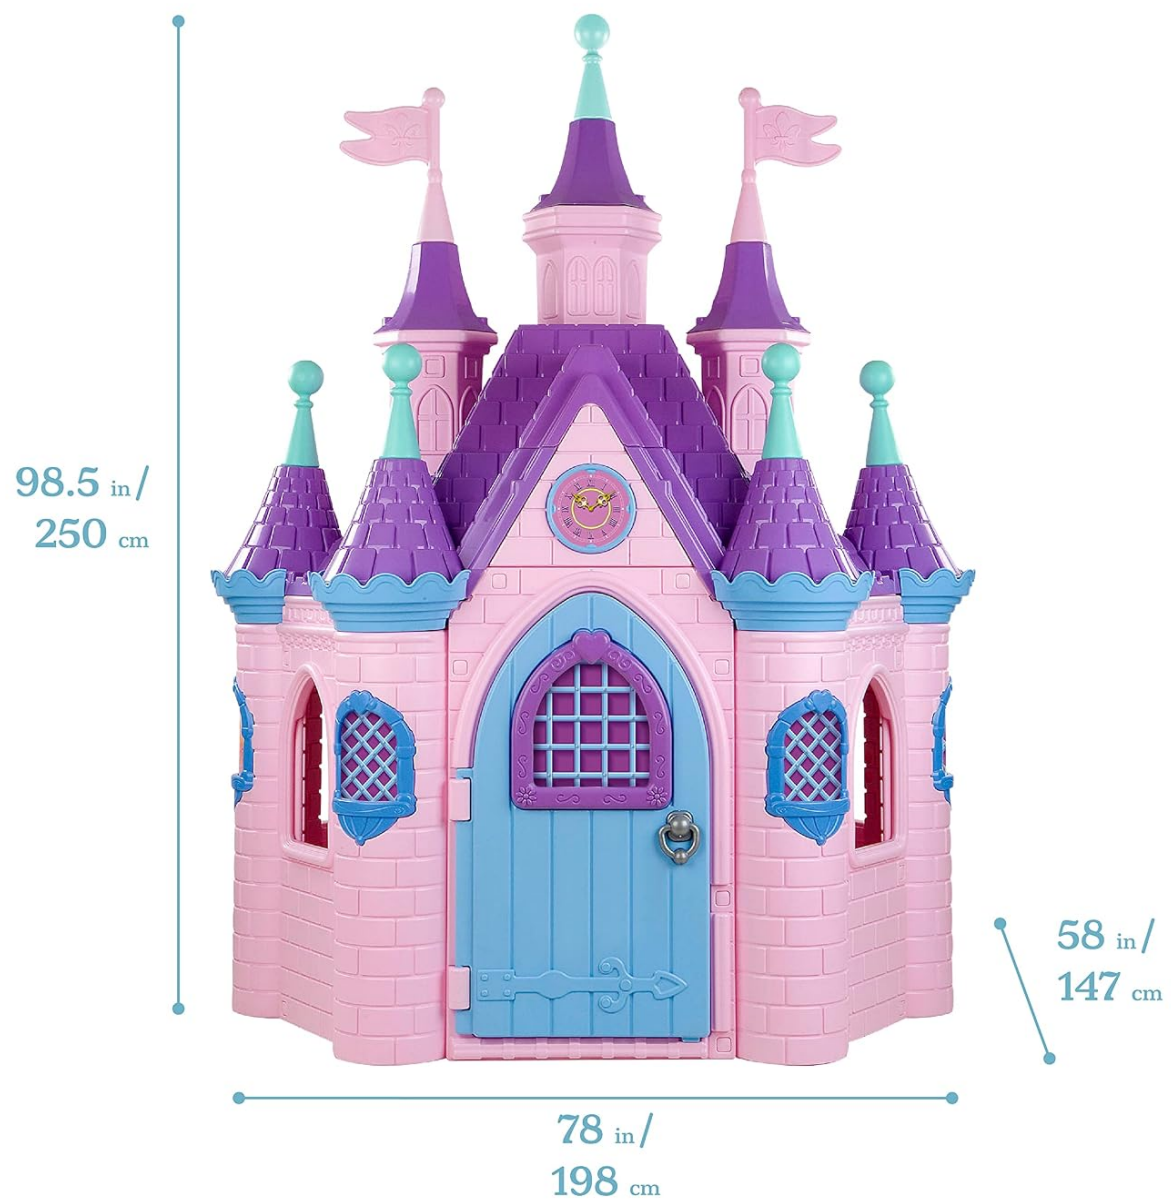


Image: Dimensions of the assembled playhouse.



Image: Assembled playhouse in an outdoor setting.

OPERATING INSTRUCTIONS

The ECR4Kids Jumbo Princess Palace Playhouse is designed for imaginative play. Children can enter and exit through the large front door and interact with the various features.

Musical Doorknob:

- The front door is equipped with a musical doorknob. When activated, it produces playful sounds.
- Ensure 3 AA batteries are correctly installed for the doorknob to function.

General Play:

- The spacious interior allows multiple children to play comfortably.
- The five open windows and large door provide ventilation and visibility.
- The playhouse can be used indoors or outdoors, thanks to its weather- and fade-resistant design.

Jumbo Princess Palace



perfect for
indoors
or out

musical
knocker

plenty of
room inside
for friends

Image: Features of the playhouse, including the musical doorknob and spacious interior.



Image: Child playing with the open door of the playhouse.

MAINTENANCE AND CARE

Regular maintenance will help prolong the life and appearance of your playhouse.

- **Cleaning:** Wipe down plastic surfaces with a damp cloth and mild soap. Rinse thoroughly with water. Avoid abrasive cleaners or harsh chemicals, as these can damage the plastic.
- **Inspection:** Periodically check all connections and fasteners to ensure they remain tight and secure.
- **Outdoor Use:** While designed for outdoor use, prolonged exposure to extreme weather conditions (e.g., intense sun, heavy rain, snow) may affect the product's lifespan. Consider moving indoors or covering during harsh weather.
- **Battery Replacement:** If the musical doorknob stops functioning, replace the 3 AA batteries.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Musical doorknob not working.	Batteries are dead or incorrectly installed.	Replace with 3 new AA batteries, ensuring correct polarity.
Playhouse feels unstable.	Connections are not fully secured.	Re-check all assembly points and ensure panels are firmly snapped together.
Door does not close properly.	Misalignment during assembly or obstruction.	Verify the door frame is correctly installed. Check for any debris or obstructions in the hinge area.

SPECIFICATIONS

- **Model Number:** ELR-12525
- **Brand:** ECR4Kids
- **Material:** Plastic
- **Dimensions (Assembled):** 78 inches (Width) x 58 inches (Depth) x 98.5 inches (Height)
- **Weight:** Approximately 160.9 pounds
- **Number of Windows:** 5
- **Recommended Age:** 48 months to 999 months (4 years and up)
- **Included Components:** 1 Castle (multi-part assembly)
- **Battery Requirement:** 3 AA batteries for musical doorknob (not included)

WARRANTY INFORMATION

Specific warranty details for the ECR4Kids Jumbo Princess Palace Playhouse are not provided in this document. For information regarding product warranty, please refer to the warranty card included with your purchase or contact ECR4Kids customer support directly.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing or damaged parts, please contact ECR4Kids customer support.
Please visit the official ECR4Kids website for contact information:www.ecr4kids.com

