

[Manuals.plus](#) /

› [DENVER](#) /

› Denver LED-5569T2CS 55-inch 4K UHD TV User Manual

DENVER LED-5569T2CS

Denver LED-5569T2CS 55-inch 4K UHD TV User Manual

Model: LED-5569T2CS

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Denver LED-5569T2CS 55-inch 4K UHD LED Television. Please read this manual thoroughly before using your TV and retain it for future reference. Proper installation and usage will ensure optimal performance and longevity of your device.

IMPORTANT SAFETY INFORMATION

General Safety Precautions

- **Power Source:** Ensure the TV is connected to an AC 220-240V, 50/60Hz power supply.
- **Ventilation:** Do not block ventilation openings. Allow adequate space around the TV for proper airflow.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids, such as vases, on the TV.
- **Heat Sources:** Keep the TV away from heat sources like radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug the TV from the wall outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Lightning:** Unplug the TV during lightning storms or when unused for long periods.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

PACKAGE CONTENTS

Please check that the following items are included in your TV package:

- Denver LED-5569T2CS 55-inch 4K UHD TV
- Remote Control
- Power Cable
- TV Stand (2 pieces) and Screws
- User Manual (this document)

If any items are missing or damaged, please contact your retailer.

SETUP GUIDE

1. Unpacking

Carefully remove the TV from its packaging. It is recommended to keep the original packaging for future transport or servicing needs.

2. Stand Installation

If you are not wall-mounting the TV, attach the included stand:

1. Place the TV face-down on a soft, flat surface to prevent screen damage.
2. Align each stand piece with the corresponding slots on the bottom of the TV.
3. Secure each stand piece with the provided screws. Ensure they are tightened firmly.



Image: The Denver LED-5569T2CS 55-inch 4K UHD TV shown with its stand attached, displaying a vibrant nature scene with a waterfall and lake. This image illustrates the TV's appearance when set up on a flat surface.

3. Wall Mounting (Optional)

This TV supports VESA wall mounts. Refer to the wall mount manufacturer's instructions for proper installation. Ensure the wall mount is compatible with the TV's weight and VESA pattern.

4. Connecting Peripherals

- **Power:** Connect the power cable to the TV's power input and then to a wall outlet.
- **HDMI Devices:** Connect external devices such as Blu-ray players, game consoles, or set-top boxes to the HDMI ports (HDMI 1, HDMI 2, HDMI 3) on the back of the TV.
- **USB Devices:** Insert USB storage devices into the USB 2.0 port for media playback.
- **Antenna/Cable:** Connect your antenna or cable TV signal to the appropriate input for DVB-C, DVB-S2, or DVB-T2 reception.

5. Initial Power On

After connecting all necessary cables, plug the TV into the power outlet. Press the power button on the remote control or on the TV itself. The TV will guide you through the initial setup process, including language selection, country, and channel scanning.

Remote Control Functions

Familiarize yourself with the remote control buttons for easy navigation and control of your TV.

- **Power:** Turns the TV on or off.
- **Input/Source:** Selects the input source (HDMI 1, HDMI 2, HDMI 3, TV, USB).
- **Volume +/-:** Adjusts the volume level.
- **Channel +/-:** Changes TV channels.
- **Menu:** Accesses the main menu for settings adjustments.
- **Navigation Buttons (Up/Down/Left/Right):** Navigates through menus and options.
- **OK/Enter:** Confirms selections.
- **Exit/Back:** Returns to the previous screen or exits the menu.

Input Source Selection

To switch between connected devices (e.g., a game console on HDMI 1, a cable box on HDMI 2, or the built-in TV tuner):

1. Press the **Input** or **Source** button on your remote control.
2. Use the navigation buttons to highlight the desired input source.
3. Press **OK** to confirm your selection.

Channel Tuning

Your TV supports DVB-C, DVB-S2, and DVB-T2 tuners. To scan for channels:

1. Press the **Menu** button on the remote.
2. Navigate to the "Channel" or "Setup" menu.
3. Select "Auto Scan" or "Channel Search".
4. Choose your desired tuner type (DVB-C, DVB-S2, or DVB-T2) and follow the on-screen prompts to start scanning.

Media Playback via USB

To play media files from a USB storage device:

1. Insert your USB device into the USB 2.0 port on the TV.
2. Press the **Input** or **Source** button and select "USB".
3. Navigate through the folders and files on your USB device using the remote control.
4. Select the desired file (e.g., video, photo, music) and press **OK** to play.

MAINTENANCE AND CARE

Cleaning the TV Screen

- Always unplug the TV before cleaning.
- Use a soft, lint-free cloth to gently wipe the screen.
- For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner (ensure it's safe for LED).

- screens). Do not spray liquid directly onto the screen.
- Avoid using abrasive cleaners, alcohol, benzene, or thinners, as these can damage the screen.

Cleaning the TV Casing

Wipe the TV casing with a soft, dry cloth. If necessary, use a slightly damp cloth, then immediately wipe dry.

TROUBLESHOOTING

If you encounter issues with your TV, please refer to the following common problems and solutions:

Problem	Possible Cause / Solution
No power	Ensure the power cable is securely connected to the TV and the wall outlet. Check if the outlet is working by plugging in another device.
No picture, but sound is present	Check the input source selection. Ensure the external device (e.g., cable box) is powered on and connected correctly. Try a different HDMI cable.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. Verify audio settings in the TV menu and on the external device.
Remote control not working	Check the batteries in the remote control and replace them if necessary. Ensure there are no obstructions between the remote and the TV's IR sensor.
Poor picture quality (TV channels)	Check antenna/cable connection. Perform a channel rescan. Adjust picture settings (brightness, contrast, sharpness).

SPECIFICATIONS

Technical specifications for the Denver LED-5569T2CS 55-inch 4K UHD TV:

Feature	Detail
Model Name	LED-5569T2CS
Screen Size	55 Inches (140 cm)
Display Technology	LED
Resolution	3840 x 2160 pixels (4K Ultra HD)
Refresh Rate	60 Hz
Aspect Ratio	16:9
Tuner Technology	DVB-C, DVB-S2, DVB-T2
HDMI Ports	3
USB Ports	1 (USB 2.0)
Audio Input	HDMI
Special Features	Flat Screen

Feature	Detail
Mounting Type	Table Mount
Item Weight	26 kg
Manufacturer	DENVER
Model Year	2015

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official DENVER website. Keep your purchase receipt as proof of purchase.

For further assistance, please contact DENVER customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question