

- Manuals.plus /
- › [Redi-Remote](#) /
 - › Replacement Remote for Samsung BN59-00377B, RTBN5900377B, BN5900377B, SPN4235X, HPN6339, HPN5039, HPN4239X

Redi-Remote RTBN5900377B

Instruction Manual for Redi-Remote Replacement Remote Control

Model: RTBN5900377B

INTRODUCTION

This manual provides comprehensive instructions for the Redi-Remote Replacement Remote Control, model RTBN5900377B. This remote is designed as a direct replacement for specific Samsung remote control models, ensuring full functionality without the need for programming. Please read this manual carefully to understand the features and proper operation of your new remote control.

PRODUCT OVERVIEW



Figure 1: Front view of the Redi-Remote Replacement Remote Control, showing all buttons including the slide-down panel.

The Redi-Remote RTBN5900377B is a non-programmable replacement remote. It is engineered to perform all functions

of the original Samsung remote control it replaces. It does not require any setup codes or programming. Simply insert batteries, and it is ready for use.

Key Features:

- No programming required; ready to use out of the box.
- Controls all functions of the specific Samsung unit it is designed for.
- Compact and ergonomic design, measuring approximately 7.5 inches in length, 2.25 inches in width, and 0.75 inches in thickness.
- Features a slide-down cover to reveal additional advanced function buttons.
- Operates using infrared (IR) technology.

SETUP

Battery Installation

The remote control requires four (4) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert four new AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect insertion can prevent the remote from functioning.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for immediate use with your compatible Samsung device. No pairing or programming is necessary.

OPERATING INSTRUCTIONS

This section details the functions of the various buttons on your Redi-Remote replacement control.

Upper Panel Buttons (Primary Functions)



Figure 2: Upper section of the remote control with primary function buttons.

- **PWR (Power):** Turns the connected device on or off.

- **TV/VIDEO:** Switches between TV and video input sources.
- **SLEEP:** Activates the sleep timer function.
- **DISP (Display):** Shows on-screen display information.
- **CH+ / CH- (Channel Up/Down):** Changes channels sequentially.
- **VOL+ / VOL- (Volume Up/Down):** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the audio.
- **MENU:** Accesses the main menu of the device.
- **RECALL:** Switches between the current and previously viewed channel.
- **Number Pad (0-9, 100):** Directly enters channel numbers.
- **ENT (Enter):** Confirms numerical input or selections.

Lower Panel Buttons (Advanced Functions)

The lower section of the remote control is revealed by sliding down the cover. This panel contains buttons for advanced functions.



Figure 3: Lower section of the remote control with advanced function buttons (slide-down panel).

- **ASPECT:** Adjusts the screen aspect ratio.

- **P.MODE (Picture Mode):** Cycles through preset picture modes.
- **MODE:** (Function may vary by device, often related to audio or picture modes).
- **PRE-CH (Previous Channel):** Returns to the last viewed channel.
- **SOURCE:** Selects input sources (e.g., HDMI, AV).
- **INFO:** Displays program information.
- **Navigation Arrows (Up, Down, Left, Right) and ENTER:** Used for navigating menus and confirming selections.
- **EXIT:** Exits the current menu or function.
- **PIP (Picture-in-Picture):** Activates or controls the Picture-in-Picture feature.
- **STILL:** Pauses the current video frame.
- **MTS (Multi-channel Television Sound):** Selects audio modes (e.g., Stereo, SAP).
- **SURROUND:** Toggles surround sound modes.
- **AUTO PROG. (Auto Program):** Initiates automatic channel scanning.
- **ADD/DEL (Add/Delete):** Manages channel lists.
- **SIZE:** Adjusts picture size or zoom.
- **DNLE:** (Function may vary by device, often related to digital noise reduction).
- **CAPTION:** Toggles closed captions on or off.
- **SWAP:** Swaps the main and PIP screens.
- **PIP CH (PIP Channel Up/Down):** Changes the channel in the Picture-in-Picture window.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace all four AAA batteries when the remote's performance degrades or it stops responding. Always replace with new batteries of the same type. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote. Store in a cool, dry place.
- **Avoid Extreme Conditions:** Do not expose the remote to extreme temperatures, direct sunlight, high humidity, or water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-).
Remote works intermittently.	Low battery power; obstruction between remote and device; remote not pointed at device's IR sensor.	Replace batteries. Ensure clear line of sight to the device. Point the remote directly at the device's IR sensor.
Certain buttons do not work.	Button stuck or damaged; device not compatible with that specific function.	Check for physical obstruction on the button. Verify that the function is supported by your specific Samsung model.

Problem	Possible Cause	Solution
Remote does not control auxiliary devices.	This remote is designed for a single device.	Redi-Remotes are not designed to be programmed for or control auxiliary devices. They only control the specific unit they are designed for.

SPECIFICATIONS

Attribute	Detail
Brand	Redi-Remote
Model Number	RTBN5900377B
Compatible Samsung Remote Models	BN59-00377B, RTBN5900377B, BN5900377B, SPN4235X, HPN6339, HPN5039, HPN4239X
Connectivity Technology	Infrared (IR)
Power Source	4 x AAA Batteries (not included)
Product Dimensions	7 x 3 x 1 inches (approx. 19.05 x 7.62 x 2.54 cm)
Item Weight	5 ounces (approx. 141.75 grams)
Special Feature	No Programming Needed
Max Number of Supported Devices	1
Compatible Devices	Home Theater (specific Samsung models)

COMPATIBILITY

This Redi-Remote replacement control (Model RTBN5900377B) is specifically designed to be compatible with the following Samsung remote control models and their associated units:

- BN59-00377B
- RTBN5900377B
- BN5900377B
- SPN4235X
- HPN6339
- HPN5039
- HPN4239X

If your original remote control or device model number is listed above, this replacement remote will function correctly without any additional setup.

SUPPORT AND WARRANTY

For any concerns or issues with your Redi-Remote replacement control after purchase, please contact the manufacturer

or seller directly. Information regarding specific warranty terms and conditions can typically be found with your purchase documentation or by contacting the point of sale.

Redi-Remote products are designed for reliability and ease of use. Should you encounter any difficulties not covered in this manual, professional assistance is recommended.

© 2024 Redi-Remote. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question