

Remax RB-M6

Remax RB-M6 Portable Bluetooth Speaker User Manual

Model: RB-M6 | Brand: Remax

1. INTRODUCTION

Thank you for choosing the Remax RB-M6 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it carefully before use to ensure optimal performance and longevity of your device.

2. PACKAGE CONTENTS

- Remax RB-M6 Portable Bluetooth Speaker
- USB Charging Cable
- AUX Audio Cable
- User Manual

3. PRODUCT OVERVIEW

The Remax RB-M6 is a versatile portable speaker designed for high-quality audio playback and hands-free communication. It features a compact design with a durable build and multiple connectivity options.

Standby Time: 300 Hours

Play Time: 5 Hours

Charging Time: 2 Hours



Figure 3.1: Front and back views of the Remax RB-M6 speaker. Key battery performance metrics are displayed: 300 hours standby, 5 hours play time, and 2 hours charging time.



Figure 3.2: An angled view of the speaker, highlighting the AUX input and micro-USB charging port on its side.

Controls and Ports:

- **Power Button:** Press and hold to turn on/off.

- **Volume Up/Next Track Button:** Short press for volume up, long press for next track.
- **Volume Down/Previous Track Button:** Short press for volume down, long press for previous track.
- **Play/Pause/Call Button:** Press to play/pause music, answer/end calls.
- **Micro-USB Charging Port:** For charging the speaker.
- **AUX Input Port:** For wired audio connection.

4. SETUP

4.1 Charging the Speaker

1. Connect the micro-USB end of the charging cable to the speaker's charging port.
2. Connect the USB-A end to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Once fully charged (approximately 2 hours), the light will change or turn off.

Note: Fully charge the speaker before first use for optimal battery life.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **To Power On:** Press and hold the Power button for a few seconds until you hear an audible prompt and the indicator light flashes.
- **To Power Off:** Press and hold the Power button again for a few seconds until you hear an audible prompt and the indicator light turns off.

5.2 Bluetooth Pairing



Figure 5.1: This image illustrates the Remax RB-M6 speaker's compatibility with various devices such as laptops, tablets, and smartphones via Bluetooth.

1. Ensure the speaker is powered on and in Bluetooth pairing mode (the indicator light will flash rapidly).
2. On your smartphone, tablet, or laptop, enable Bluetooth.
3. Search for available devices and select "RB-M6" from the list.
4. Once paired, you will hear a confirmation tone, and the indicator light will turn solid blue.
5. The speaker will automatically connect to the last paired device when powered on, if available.

5.3 AUX Mode

1. Connect one end of the 3.5mm AUX audio cable to the speaker's AUX input port.
2. Connect the other end to the audio output jack of your device (e.g., MP3 player, computer).
3. The speaker will automatically switch to AUX mode.

5.4 Hands-free Calling

INTELLIGENT



Figure 5.2: The image suggests the speaker's smart features, such as hands-free calling or seamless device interaction.

- When a call comes in while connected via Bluetooth, the music will pause.
- Press the Play/Pause/Call button once to answer the call.
- Press the Play/Pause/Call button once again to end the call.
- To reject an incoming call, press and hold the Play/Pause/Call button.

5.5 Volume Control and Track Navigation

- **Volume Up:** Short press the Volume Up button.
- **Volume Down:** Short press the Volume Down button.
- **Next Track:** Long press the Volume Up button.
- **Previous Track:** Long press the Volume Down button.

6. MAINTENANCE

DELICATE



Figure 6.1: This image showcases the speaker's refined aesthetic, emphasizing its fabric finish and leather handle.

- Keep the speaker away from water, moisture, and extreme temperatures.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid dropping or subjecting the speaker to strong impacts.
- Store the speaker in a cool, dry place when not in use for extended periods.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker not in pairing mode; device Bluetooth off; too far from speaker.	Ensure speaker is in pairing mode. Turn on Bluetooth on your device. Move device closer to speaker (within 10 meters).
No sound.	Volume too low; incorrect input mode; device not playing audio.	Increase speaker and device volume. Ensure correct mode (Bluetooth/AUX). Check if audio is playing on the connected device.

Problem	Possible Cause	Solution
Poor sound quality.	Interference; low battery; device audio quality.	Move away from sources of interference. Charge the speaker. Check audio source quality.

8. SPECIFICATIONS



Figure 8.1: This image details the premium construction of the speaker, featuring aviation-grade aluminum and a leather-like finish.

Feature	Detail
Model Number	RB-M6
Dimensions	136 x 58 x 110 mm (approx. 14 x 6 x 11 cm)
Weight	Approx. 400 grams (Note: Some specifications indicate 2 kg, which may refer to packaged weight.)
Bluetooth Version	4.0
Effective Distance	Up to 10 meters (33 feet)
Frequency Response	100 Hz - 20 kHz
Rated Power Output	5W (Max Output: 25W)

Feature	Detail
Impedance	4 Ohm
Battery Capacity	2000mAh / 3.7V (Rechargeable)
Charging Time	Approx. 2 hours
Play Time	Approx. 5 hours
Standby Time	Approx. 300 hours
Materials	Aluminum, Fabric, ABS, Leather
Connectivity	Wireless (Bluetooth), AUX
Audio Output Mode	Stereo
Special Features	Bluetooth, Wireless, Portable, Hands-free Calling
Compatible Devices	All Bluetooth-enabled devices (Smartphones, Tablets, Laptops)

9. SAFETY INFORMATION

- Do not disassemble, repair, or modify the product.
- Do not expose the product to fire or high temperatures.
- Dispose of the battery according to local regulations. Do not dispose of it in household waste.
- Keep out of reach of children.
- Avoid listening at high volume levels for extended periods to prevent hearing damage.

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included in your package or contact your local Remax distributor. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question