

[Manuals.plus](#) /

› [Axon](#) /

› Axon V168 BTE Sound Enhancement User Manual

Axon V168

Axon V168 BTE Sound Enhancement User Manual

Model: V168 | Brand: Axon

INTRODUCTION

This user manual provides comprehensive instructions for the safe and effective operation, maintenance, and troubleshooting of your Axon V168 Behind-The-Ear (BTE) Sound Enhancement device. Please read this manual thoroughly before using the device to ensure optimal performance and longevity.



Image: Axon V168 BTE Sound Enhancement device. This image displays the compact, beige-colored device, illustrating its behind-the-ear design.

SAFETY INFORMATION

- Consult a medical professional before use if you have any pre-existing ear conditions.
- Keep out of reach of children and pets. Small parts can be a choking hazard.
- Avoid exposure to extreme temperatures, moisture, and direct sunlight.
- Do not attempt to repair or modify the device yourself. Contact authorized service personnel.

- Remove batteries when the device is not in use for extended periods.

PACKAGE CONTENTS

Please verify that all items are present in the package:

- Axon V168 BTE Sound Enhancement Device
- Ear tips (various sizes)
- Cleaning brush
- User Manual
- Battery (1, type unknown, included as per specifications)

SETUP

1. Battery Installation

1. Locate the battery compartment on the device.
2. Gently open the battery door.
3. Insert one battery (type as specified in the Specifications section) with the correct polarity (+/-).
4. Close the battery door securely.

2. Ear Tip Selection and Placement

1. Choose an ear tip size that fits comfortably and securely in your ear canal. A proper fit is crucial for sound quality and to prevent feedback.
2. Attach the selected ear tip firmly to the sound output nozzle of the device.
3. Place the BTE unit behind your ear, then gently insert the ear tip into your ear canal.

OPERATING INSTRUCTIONS

1. Powering On/Off

- To power on the device, locate the power switch (often integrated with the volume control) and slide it to the "On" position.
- To power off, slide the switch to the "Off" position.

2. Volume Adjustment

- The device features a rotary volume control. Rotate the wheel upwards to increase volume and downwards to decrease volume.
- Start with a low volume setting and gradually increase it to a comfortable level. Avoid excessively high volumes to prevent hearing damage.

3. Initial Use and Adaptation

It may take some time to adapt to your new sound enhancement device. Begin by using it in quiet environments and gradually introduce it to noisier settings. Your brain needs time to re-learn how to process sounds with amplification.

MAINTENANCE

1. Daily Cleaning

- After each use, gently wipe the device and ear tip with a soft, dry cloth.
- Use the provided cleaning brush to remove any earwax or debris from the ear tip and sound port.
- Do not use water, cleaning solutions, or alcohol directly on the device.

2. Storage

- Store the device in a cool, dry place, away from direct sunlight and heat.
- When not in use for an extended period, remove the battery to prevent corrosion.

3. Battery Replacement

Replace the battery when the sound becomes weak or the device stops functioning. Refer to the "Battery Installation" section for replacement instructions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound or weak sound	◦ Battery is dead or incorrectly inserted. ◦ Volume is too low. ◦ Ear tip or sound port is blocked by earwax.	◦ Replace battery or check polarity. ◦ Increase volume. ◦ Clean ear tip and sound port.
Whistling or feedback sound	◦ Improper fit of ear tip. ◦ Volume is too high. ◦ Earwax in ear canal.	◦ Try a different size ear tip or re-insert the device. ◦ Decrease volume. ◦ Consult a doctor for earwax removal if necessary.
Intermittent sound	◦ Loose battery connection. ◦ Battery nearing end of life.	◦ Check battery connection. ◦ Replace battery.

SPECIFICATIONS

Feature	Detail
Model Number	V168
Brand	Axon
Type	Behind-The-Ear (BTE) Sound Enhancement
Color	Beige
Material	Plastic
Power Source	Battery Powered

Feature	Detail
Battery Type	1 Unknown battery required (included), Alkaline
Control Type	Button Control (Volume)
Item Weight	200 g
Package Dimensions	22.6 x 16.2 x 3.6 cm
Special Features	Compact size, Durable construction

WARRANTY AND SUPPORT

For information regarding warranty coverage and customer support, please refer to the warranty card included with your product or visit the official Axon website. Keep your purchase receipt as proof of purchase for any warranty claims. For technical assistance or service inquiries, please contact Axon customer support through the channels provided on their official website or product packaging.

© 2023 Axon. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

