

[manuals.plus](#) /

› [Dirt Devil](#) /

› [Dirt Devil QuickFlip Plus 16V Cordless Handheld Vacuum Cleaner User Manual](#)

## Dirt Devil BD30025B

# Dirt Devil QuickFlip Plus 16V Cordless Handheld Vacuum Cleaner

**MODEL: BD30025B**

Your guide to efficient and convenient cleaning.

## 1. Introduction

The Dirt Devil QuickFlip Plus 16V Cordless Handheld Vacuum Cleaner is designed for quick and efficient cleaning tasks. Its lightweight and portable design makes it ideal for tackling dust, debris, and crumbs in various areas, from countertops and stairs to tight corners and vehicle interiors. Powered by a 16V rechargeable lithium battery, this vacuum offers extended runtime and fast charging for convenient use.



Figure 1: The Dirt Devil QuickFlip Plus 16V Cordless Handheld Vacuum Cleaner.

## 2. Important Safety Information

Please read and understand all safety instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner, etc.).
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up large, hard, or sharp objects.
- Do not charge the unit outdoors.
- Use only the charger supplied by the manufacturer to recharge.
- Do not incinerate the appliance even if it is severely damaged. Batteries can explode in a fire.

### 3. Package Contents

---

Verify that all items are included in your package:

- Dirt Devil QuickFlip Plus 16V Handheld Vacuum Unit
- Charging Base/Power Adapter
- QuickFlip Crevice Tool (integrated)
- Stair & Upholstery Tool (Powered Turbo Tool)



Figure 2: Included components of the Dirt Devil QuickFlip Plus 16V Handheld Vacuum.

### 4. Setup

---

#### 4.1 Charging the Battery

1. Place the charging base on a flat, stable surface near a power outlet.
2. Connect the power adapter to the charging base and plug it into a standard electrical outlet.
3. Ensure the vacuum unit is switched off. Place the handheld vacuum onto the charging base. The indicator light on the vacuum will illuminate to show it is charging.
4. Allow approximately 6 hours for a full charge. The indicator light may change or turn off when fully charged (refer to specific model indicator behavior).



Figure 3: Charging the handheld vacuum on its base.

## 4.2 Attaching Accessories

The QuickFlip Crevice Tool is integrated into the unit. For other accessories:

- **Stair & Upholstery Tool:** Align the powered turbo tool with the vacuum's nozzle and push firmly until it clicks into place.



Figure 4: Attaching the Stair & Upholstery Tool.

## 5. Operating Instructions

---

### 5.1 Turning On/Off

To turn the vacuum on, slide the power switch located on the handle to the 'ON' position. To turn it off, slide the switch back to the 'OFF' position.

### 5.2 Using the QuickFlip Crevice Tool

The QuickFlip crevice tool is stored directly on the unit. To use it, simply flip the tool out from its storage position until it locks into place. This allows you to reach into tight spaces, corners, and crevices effectively. To retract, push the tool back into its storage position.



Figure 5: Utilizing the QuickFlip Crevice Tool for edge cleaning.

### 5.3 Using the Stair & Upholstery Tool

Attach the powered turbo tool as described in Section 4.2. This tool is designed for effective cleaning of stairs, upholstery, and pet hair from fabric surfaces. Move the tool slowly over the surface to allow the rotating brush to agitate and lift debris.

### 5.4 Emptying the Dirt Cup

1. Ensure the vacuum is turned off.
2. Locate the dirt cup release button, typically near the nozzle. Press the button to detach the dirt cup from the main unit.
3. Hold the dirt cup over a trash receptacle. Remove the filter assembly from the dirt cup and shake out any accumulated dirt and debris.
4. Reinsert the filter assembly into the dirt cup, ensuring it is properly seated.
5. Reattach the dirt cup to the main vacuum unit, pushing until it clicks securely into place.

## 6. Maintenance

### 6.1 Cleaning the Filter

Regular filter cleaning is essential for maintaining optimal suction performance. The vacuum uses a cloth filter (Model F-101, Item Number 440009116).

1. Remove the dirt cup and filter assembly as described in Section 5.4.
2. Gently tap the filter over a trash can to remove loose dirt.
3. For a more thorough cleaning, rinse the cloth filter under running water until the water runs clear. Do not use detergent.
4. Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum. Do not use a wet filter.



Figure 6: The removable and washable cloth filter.

## 6.2 General Cleaning

Wipe the exterior of the vacuum with a soft, damp cloth. Do not use harsh cleaners or solvents. Ensure all parts are dry before storage or next use.

## 7. Troubleshooting

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged.	Charge the battery for 6 hours.
Reduced suction.	Dirt cup is full.	Empty the dirt cup.
Reduced suction.	Filter is clogged.	Clean or replace the filter.
Reduced suction.	Nozzle or hose is blocked.	Clear any obstructions from the nozzle or hose.

## 8. Specifications

- **Brand:** Dirt Devil
- **Model Name:** Dirt Devil Plus 16V Quick Flip Pro Cordless 16 Volt Lithium Ion Bagless Handheld Vacuum Cleaner BD30025B, Red
- **Item Model Number:** BD30025B
- **Power Source:** Battery Powered
- **Battery Type:** Lithium-Ion (1 included)
- **Battery Life:** 13 minutes

- **Charging Time:** 6 Hours
- **Wattage:** 100 watts
- **Capacity:** 0.5 Liters
- **Form Factor:** Handheld
- **Color:** Red
- **Item Weight:** 3 pounds
- **Product Dimensions:** 14.5"L x 4"W x 6"H
- **Filter Type:** Cloth (F-101, Item Number 440009116)
- **Included Components:** Crevice Tool, Stair Tool, Upholstery Tool
- **Special Feature:** Bagless
- **Is Cordless?:** Yes
- **Recommended Uses For Product:** Car, Upholstery, Quick Cleanups
- **Indoor/Outdoor Usage:** Indoor
- **Manufacturer:** Dirt Devil
- **Manufacture Year:** 2016
- **UPC:** 046034902873

## 9. Official Product Videos

---

No relevant official seller videos for the Dirt Devil QuickFlip Plus 16V Cordless Handheld Vacuum Cleaner (Model BD30025B) were found in the provided data.

## 10. Warranty and Support

---

This product comes with a **2-year limited warranty**. For warranty claims, technical support, or replacement parts, please contact Dirt Devil customer service. Refer to the product packaging or the official Dirt Devil website for the most current contact information.