

One For All WM6211

One For All WM6211 Ultra-Slim Fixed TV Wall Mount Instruction Manual

Model: WM6211 | Brand: One For All

1. INTRODUCTION

This manual provides detailed instructions for the safe and correct installation and use of your One For All WM6211 Ultra-Slim Fixed TV Wall Mount. This mount is designed to securely hold televisions with screen sizes ranging from 13 to 42 inches and a maximum weight of 40 kg (88 lbs). It offers a fixed mounting solution with a minimal wall distance of only 13 mm, suitable for LED, LCD, and Plasma TVs.

Please read this manual thoroughly before beginning installation and retain it for future reference.

2. SAFETY INFORMATION

- Ensure the wall structure can support the combined weight of the mount and your television. Consult a professional if unsure.
- Do not exceed the maximum weight capacity of 40 kg (88 lbs).
- Use only the provided mounting hardware or appropriate hardware for your specific wall type.
- Always use a spirit level to ensure the mount is installed horizontally.
- Keep children and pets away from the installation area.
- Improper installation can result in serious injury or damage to property.

3. PACKAGE CONTENTS

Verify that all components are present before starting the installation. The package for the One For All WM6211 TV Wall Mount includes:

- One For All WM6211 TV Wall Mount bracket
- Mounting hardware kit (screws, wall plugs, spacers)
- Instruction Manual



Image: The retail packaging for the One For All WM6211 TV Wall Mount, showing the product name, features, and specifications.

4. SPECIFICATIONS

Brand	One For All
Model Number	WM6211
Product Type	Fixed TV Wall Mount
Compatible Devices	Televisions (LED, LCD, Plasma)
Screen Size Compatibility	13 - 42 inches
Maximum Weight Capacity	40 kg (88 lbs)
VESA Compatibility	75x75, 100x100, 200x100, 200x200 mm
Wall Distance	13 mm

Mounting Type	Wall Mount
Movement Type	Fixed
Material	Metal
Color	Black



Image: A side profile view illustrating the ultra-slim 13 mm distance between the mounted television and the wall.

5. SETUP AND INSTALLATION

Follow these steps carefully to install your TV wall mount.

5.1 Prepare the TV Mount



Image: The front view of the One For All WM6211 TV Wall Mount, showing the central mounting plate and four arms for VESA compatibility.

1. Unpack all components and verify against the package contents list.
2. Identify the VESA mounting holes on the back of your television. The WM6211 supports VESA patterns: 75x75, 100x100, 200x100, and 200x200 mm.
3. Attach the TV mount arms to the back of your television using the appropriate screws and spacers from the hardware kit. Ensure they are securely fastened.

5.2 Mark Drilling Positions

1. Determine the desired height for the top of your television.
2. Hold the wall plate of the mount against the wall at the desired position.
3. Use a spirit level to ensure the mount is perfectly horizontal.
4. Mark the drilling points through the holes on the wall plate.



Image: A close-up view of a small spirit level integrated into or placed on the TV mount, indicating proper horizontal alignment during installation.

5.3 Drill Holes and Secure Wall Plate

1. Drill holes at the marked positions using an appropriate drill bit for your wall type (e.g., concrete, brick, wood stud).
2. Insert the wall plugs (if required for your wall type) into the drilled holes.
3. Secure the wall plate to the wall using the provided screws. Ensure it is firmly attached and level.

5.4 Mount the Television

1. Carefully lift the television (with the attached mount arms) and align the arms with the wall plate.
2. Hook the television onto the wall plate. The mount features an automatic lock-and-release mechanism for secure attachment.
3. Gently push the bottom of the TV towards the wall until it clicks into place, indicating it is securely locked.

6. OPERATION

The One For All WM6211 mount is designed for fixed positioning. Once installed, your TV will remain in a

static position, 13 mm from the wall.

6.1 Detaching the Television

To remove the television from the wall mount:

1. Locate the pull cords extending from the bottom of the mount behind the TV.
2. Gently pull the cords downwards to disengage the locking mechanism.
3. With the locking mechanism disengaged, carefully lift the television off the wall plate. It is recommended to have assistance when detaching the TV.



Image: A hand demonstrating the use of the pull cord mechanism, which is used to release the television from the wall mount for removal.

7. MAINTENANCE

- Periodically check all screws and connections to ensure they remain tight and secure.
- Clean the mount with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- Do not hang objects from the mount or apply excessive force to the television while it is mounted.

8. TROUBLESHOOTING

- **TV not level:** Ensure the wall plate was installed perfectly horizontally using a spirit level. If not, detach the TV, adjust the wall plate, and re-mount.
- **TV not locking into place:** Verify that the TV mount arms are correctly aligned with the wall plate and that no obstructions prevent the locking mechanism from engaging. Ensure the pull cords are not accidentally engaged.
- **Difficulty detaching TV:** Ensure the pull cords are fully engaged to release the locking mechanism.

Do not force the TV off the mount.

- **Mount feels unstable:** Re-check all wall plate screws and TV arm screws for tightness. Ensure the wall structure is adequate for the weight.

9. WARRANTY AND SUPPORT

One For All products are designed for durability and reliability. For specific warranty information, please refer to the documentation included with your purchase or visit the official One For All website.

For additional installation assistance, you may consult the free One For All application, which provides practical installation aids.

If you encounter any issues not covered in this manual, please contact One For All customer support through their official channels.

Related Documents - WM6211

	<p><u>One For All WM6611 Ultra Slim TV Wall Mount - Quick Installation Guide</u></p> <p>A quick installation guide for the One For All WM6611 Ultra Slim TV wall mount, detailing product specifications, warranty terms, safety warnings, and step-by-step installation instructions with hardware lists.</p>
	<p><u>One For All WM6629 Ultra Slim TV Wall Mount Installation Guide</u></p> <p>Step-by-step instructions for installing the One For All WM6629 Ultra Slim TV wall mount, including safety warnings, parts list, and VESA compatibility information.</p>
	<p><u>ONE FOR ALL WM6619 Ultra Slim TV Wall Mount - Quick Installation Guide</u></p> <p>Comprehensive quick installation guide for the ONE FOR ALL WM6619 Ultra Slim TV Wall Mount, covering warranty, installation steps, and important safety warnings.</p>
	<p><u>ONE FOR ALL WM6422 Ultra Slim TV Wall Mount Quick Installation Guide</u></p> <p>This document provides a quick installation guide for the ONE FOR ALL WM6422 Ultra Slim TV wall mount. It includes warranty terms, important warnings, and step-by-step visual instructions translated into text, covering VESA compatibility, mounting hardware, and safety precautions.</p>
	<p><u>WM6252 ULTRA SLIM TV Wall Mount Installation Guide ONE FOR ALL</u></p> <p>Comprehensive installation guide for the ONE FOR ALL WM6252 ULTRA SLIM TV wall mount, including specifications, guarantee terms, warnings, and step-by-step instructions.</p>
	<p><u>One For All WM6619 Ultra Slim TV Wall Mount Installation Guide</u></p> <p>Comprehensive guide for installing the One For All WM6619 Ultra Slim TV wall mount. Includes warranty information, safety warnings, and step-by-step instructions with parts list.</p>