

Okin 4335393657

OKIN Standard Lift Chair Hand Control User Manual

Model: 4335393657

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Genuine OKIN Standard Lift Chair Hand Control. This hand control is designed to provide simple and reliable control for compatible lift chairs, featuring a green test light and a convenient quick disconnect for enhanced safety and ease of use. Please read this manual thoroughly before installation and operation.

SAFETY INFORMATION

- Always disconnect power to the lift chair before installing, removing, or servicing the hand control.
- Keep the hand control away from liquids and excessive moisture.
- Do not attempt to open or repair the hand control. Refer all servicing to qualified personnel.
- Ensure the cord is not pinched or tangled in moving parts of the lift chair.
- Utilize the quick disconnect feature to remove the hand control when not in use, especially to prevent unauthorized operation by children.

PACKAGE CONTENTS

- 1 x Genuine OKIN Standard Lift Chair Hand Control with Quick Disconnect

SETUP

Follow these steps to properly connect your new hand control to your lift chair:

1. **Identify the Connector:** Locate the existing hand control cable or the connection port on your lift chair's motor. The OKIN hand control features a round 5-pin connector.
2. **Connect the Hand Control:** Align the 5-pin connector of the new hand control with the corresponding port on the lift chair motor. Gently push until it clicks securely into place. Do not force the connection.
3. **Utilize the Quick Disconnect:** The hand control features a straight quick disconnect in the middle of the cord. This allows you to separate the control unit from the main cable for storage or safety. Ensure this connection is firmly seated for operation.
4. **Route the Cable:** Carefully route the cable to prevent it from being pinched or entangled by the chair's moving mechanisms. The quick disconnect can be positioned in the chair's pocket for easy access and removal.
5. **Restore Power:** Once the hand control is securely connected and the cable is safely routed, restore power

to your lift chair.



Overall view of the OKIN Standard Lift Chair Hand Control, showing the ergonomic black remote unit, coiled cord, and the quick disconnect plug.



Detailed view of the round 5-pin connector of the OKIN Lift Chair Hand Control, essential for connecting to the lift chair motor.



Close-up of the straight quick disconnect feature on the cord of the OKIN Lift Chair Hand Control, allowing for easy detachment.

OPERATING INSTRUCTIONS

The OKIN Standard Lift Chair Hand Control features a simple two-button operation:

- **Up Button:** Press and hold the top button (typically marked with an upward arrow) to raise the lift chair or extend the footrest.

- **Down Button:** Press and hold the bottom button (typically marked with a downward arrow) to lower the lift chair or retract the footrest.
- **Green Test Light:** A green light located on the hand control illuminates when the buttons are pressed, indicating that the control is sending a signal to the chair's motor. If the light does not illuminate, check connections or power supply.

Child Safety Feature: The quick disconnect allows you to easily detach the hand control from the main cable. This can be done to prevent children from playing with the control and inadvertently operating the lift chair.



Front view of the OKIN Lift Chair Hand Control, highlighting the two white up and down buttons and the green test light indicator at the top.

MAINTENANCE

Proper care will extend the life of your hand control:

- **Cleaning:** Wipe the hand control with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the unit. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, or for safety, disconnect the hand control using the quick disconnect and store it in a safe, dry place.
- **Cord Care:** Regularly inspect the cord for any signs of wear, fraying, or damage. If damage is observed, discontinue use and replace the unit.

TROUBLESHOOTING

If your hand control is not functioning as expected, try the following:

- **No Response from Chair:**

- Ensure the hand control's 5-pin connector is fully and securely plugged into the lift chair motor.
- Check that the quick disconnect in the middle of the cord is firmly connected.
- Verify that the lift chair is plugged into a working power outlet and that the power supply to the chair is active.
- If the green test light on the hand control does not illuminate when buttons are pressed, the control unit itself may be faulty or there's a power issue.

- **Intermittent Operation:**

- Check all cable connections for looseness.
- Ensure the cable is not being pinched or stressed by the chair's movement.

- **Chair Moves in Wrong Direction:**

- This is highly unlikely with a standard up/down control. If this occurs, immediately disconnect power to the chair and contact a qualified technician.

If troubleshooting steps do not resolve the issue, it may indicate a fault with the hand control, motor, or power supply. Contact the manufacturer or a qualified service technician for further assistance.

SPECIFICATIONS

Brand	Okin
Model Name	OKIN
Item Model Number	4335393657
Product Dimensions	1"D x 2"W x 7"H
Item Weight	8.5 ounces
Connector Type	Round 5-pin
Special Features	Green Test Light, Quick Disconnect
Form Factor	Plastic
Country of Origin	China

WARRANTY INFORMATION

Specific warranty details for the OKIN Standard Lift Chair Hand Control are typically provided at the point of purchase or included with the product packaging. Please refer to your purchase documentation for precise warranty terms and conditions. In general, warranty coverage addresses manufacturing defects under normal use. To inquire about warranty service, retain your proof of purchase and contact the retailer or the manufacturer directly.

SUPPORT

For technical assistance, troubleshooting beyond this manual, or to inquire about replacement parts, please contact the manufacturer or your product supplier. When contacting support, please have your product model number (4335393657) and a detailed description of the issue ready.

You may also visit the official Okin store on Amazon for additional product information and support resources:

[Okin Store](#)

© 2024 OKIN. All rights reserved.