



Manuals.plus /

› **Disney** /

› Disney Series 2 Collectible Blind Bag 3D Foam Key Ring User Manual

Disney 25150

Disney Series 2 Collectible Blind Bag 3D Foam Key Ring User Manual

1. INTRODUCTION

This manual provides instructions for the Disney Series 2 Collectible Blind Bag 3D Foam Key Ring. Each blind bag contains one randomly selected 3D foam key ring featuring a Disney Tsum Tsum character. This product is designed for collecting and decorative use as a keychain.

2. PRODUCT OVERVIEW

The Disney Series 2 Collectible Blind Bags offer a variety of characters as 3D foam key rings. Characters in this series may include Mickey, Stitch, Eeyore, Donald, Daisy, Cheshire Cat, Piglet, Dale, Queen of Hearts, Jiminy Cricket, and Bambi. Each key ring is made of durable foam material and includes an attached key chain for easy attachment.



This image displays a selection of the Disney Tsum Tsum Series 2 3D foam key ring characters you may receive. Each blind bag contains one randomly selected character.

3. SETUP AND UNBOXING

1. **Locate the Blind Bag:** Identify the sealed blind bag containing your collectible.
2. **Open Carefully:** Gently tear or cut along the designated opening seam of the blind bag. Avoid using excessive force to prevent damage to the key ring inside.
3. **Reveal Your Character:** Remove the 3D foam key ring from the packaging.

4. OPERATING AND USAGE

Your 3D foam key ring is ready for immediate use after unboxing.

- **Attaching to Keys:** Use the attached metal ring to securely fasten the key ring to your keys.
- **Decorative Use:** The key ring can also be attached to backpacks, purses, lanyards, or used as a decorative item.

5. MAINTENANCE AND CARE

- **Cleaning:** To clean the foam key ring, gently wipe it with a slightly damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these may damage the material or paint.
- **Storage:** Store the key ring in a cool, dry place away from direct sunlight to prevent fading or material degradation.
- **Avoid Extreme Conditions:** Do not expose the key ring to extreme temperatures or prolonged moisture.

6. TROUBLESHOOTING

- **Minor Scratches/Marks:** Due to the foam material, minor indentations or marks may occur with regular use. These are generally cosmetic and do not affect functionality.
- **Detached Key Chain:** If the metal key chain detaches from the foam character, it may be possible to reattach it if the attachment point is intact. If not, the item may require replacement.
- **Damage:** In case of significant damage, the product is generally not repairable.

7. SPECIFICATIONS

| | |
|------------------------------------|--|
| Brand | Disney |
| Model Name | Collectible Blind Bags |
| Model Number | 25150 |
| Material | Foam |
| Item Dimensions (L x W x H) | 4.75" x 1.5" x 5.5" (approximate, for packaging) |
| Item Weight | 2.25 Ounces (approximate, for packaging) |
| Number of Pieces | 1 (one 3D foam key ring per blind bag) |
| Recommended Age | 4 years and up |

8. SAFETY INFORMATION

- **Choking Hazard:** This product contains small parts and is not suitable for children under 3 years of age.
- **Adult Supervision:** Adult supervision is recommended for young children during use.
- **Not a Toy for Chewing:** This product is not intended for chewing or ingestion.

9. WARRANTY AND SUPPORT

This product is sold without a manufacturer's warranty. For any inquiries regarding your Disney Series 2 Collectible Blind Bag 3D Foam Key Ring, please contact the retailer where the purchase was made.