

Gourmia GKS9130

Gourmia GKS9130 Folding Electronic Kitchen Scale User Manual

Model: GKS9130

INTRODUCTION

Thank you for purchasing the Gourmia GKS9130 Folding Electronic Kitchen Scale. This manual provides important information regarding the setup, operation, maintenance, and troubleshooting of your new kitchen scale. Please read it thoroughly before use and retain it for future reference.

SAFETY INFORMATION

- Do not immerse the scale in water or other liquids.
- Clean the scale with a damp cloth. Do not use abrasive cleaners.
- Do not overload the scale beyond its maximum capacity of 5 kg (11 lbs).
- Keep the scale away from extreme temperatures and direct sunlight.
- Handle the scale with care. Avoid dropping it or subjecting it to strong impacts.
- Dispose of batteries according to local regulations.

PACKAGE CONTENTS

- Gourmia GKS9130 Folding Electronic Kitchen Scale
- User Manual
- 1 x Lithium Battery (CR2032)

PRODUCT FEATURES

- **Maximum Capacity:** 5 kg (11 lbs)
- **Measurement Units:** Grams (g) and Ounces (oz)
- **Precision:** Measures within 1g (0.1 oz)
- **Tare Function:** Allows weighing of multiple ingredients in the same container.

- **Display:** Advanced LCD display with negative functionality.
- **Auto Shutoff:** Automatically turns off after 2 minutes of inactivity to conserve battery.
- **Indicators:** Low battery and overload indicators.
- **Design:** Unique foldable design for compact storage and portability.
- **Material:** Durable ABS plastic.

SETUP

1. Unfolding the Scale

Gently unfold the scale arms until they lock into an open, stable position. The scale is designed to resemble a pair of scissors when unfolded.



Image: The Gourmia GKS9130 Folding Scale in its unfolded, operational state.

2. Battery Installation

The scale requires one CR2032 lithium battery. The battery compartment is typically located on the underside of the scale. Open the compartment, insert the battery with the positive (+) side facing up, and close the cover securely.

OPERATING INSTRUCTIONS

1. Power On/Off

- To turn on the scale, press the **ON/OFF** button. The LCD display will illuminate and show "0" or "0.0".
- To turn off the scale, press and hold the **ON/OFF** button for a few seconds, or wait for the automatic 2-minute shutoff.

2. Unit Conversion

- To switch between grams (g) and ounces (oz), press the **UNIT** button. The current unit will be displayed on the LCD screen.

3. Tare Function

The tare function allows you to weigh ingredients in a container by subtracting the container's weight.

1. Place an empty container on the scale. The display will show its weight.
2. Press the **TARE** button. The display will reset to "0" or "0.0".
3. Add your ingredients to the container. The display will now show only the weight of the added ingredients.

4. Weighing Items

1. Ensure the scale is on and displaying "0" or "0.0".
2. Place the item(s) to be weighed directly onto the scale's weighing surface or into a tared container.
3. Read the weight displayed on the LCD screen.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the scale surface with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use, fold the scale for compact storage. Store it in a dry place away from direct sunlight and extreme temperatures.



Image: The Gourmia GKS9130 Folding Scale in its compact, folded position.



Image: The Gourmia GKS9130 Folding Scale stored neatly in a kitchen drawer.

- **Battery Replacement:** Replace the battery when the low battery indicator appears on the display.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scale does not turn on	Dead or incorrectly installed battery	Check battery orientation or replace with a new CR2032 battery.
Inaccurate readings	Scale not on a flat surface; Overloaded; Drafts or vibrations	Place scale on a stable, flat surface. Do not exceed 5 kg (11 lbs). Avoid windy areas.
"Lo" or low battery indicator	Low battery power	Replace the battery with a new CR2032 battery.
"O-Ld" or overload indicator	Scale is overloaded	Remove items immediately to prevent damage. Do not exceed 5 kg (11 lbs).
Display shows "Err"	Internal error	Turn off the scale, wait a few seconds, then turn it back on. If the error persists, contact customer support.

SPECIFICATIONS

- **Model:** GKS9130
- **Brand:** Gourmia
- **Maximum Weight Capacity:** 5 kg (11 lbs)
- **Measurement Increments:** 1 g (0.1 oz)
- **Units:** Grams (g), Ounces (oz)
- **Power Source:** 1 x CR2032 Lithium Battery
- **Material:** Acrylonitrile Butadiene Styrene (ABS), Plastic
- **Form Factor:** Foldable

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Gourmia website. Please have your model number (GKS9130) and purchase details ready when contacting support.

© 2023 Gourmia. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question