

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Snakebyte](#) /
- › [Snakebyte GAME: KIT for PlayStation 4 Instruction Manual](#)

Snakebyte GAME: KIT

Snakebyte GAME: KIT for PlayStation 4 Instruction Manual

Model: GAME: KIT

INTRODUCTION

The Snakebyte GAME: KIT for PlayStation 4 is designed to enhance your gaming experience and protect your PlayStation 4 controller. This kit includes a durable travel case, a long charging cable, and thumb grips for improved control and comfort. This manual provides instructions for the proper setup, operation, and maintenance of your GAME: KIT components.



Image: Overview of the Snakebyte GAME: KIT components.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1x Travel Case for PlayStation 4 Controller
- 1x 3m (9.8ft) USB Charging Cable
- 4x Thumb Grips (Control: Caps)
- 1x Carabiner (attached to the travel case)

GAMEKIT

PS4 - CASE, 2X CONTROL CAPS, CHARGE CABLE

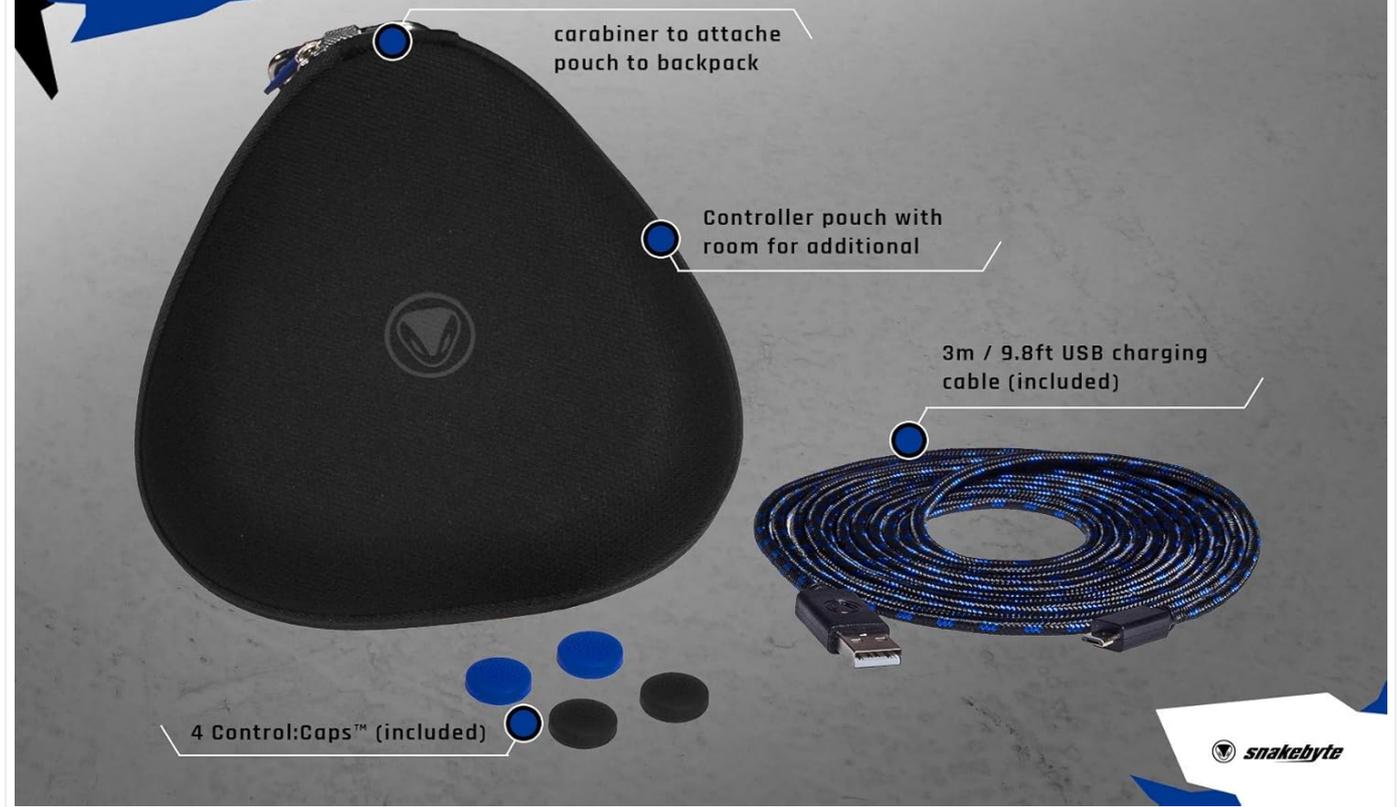


Image: All components of the GAME: KIT, including the case, cable, and thumb grips, with descriptive labels.

SETUP

1. Using the Travel Case

1. Unzip the travel case completely.
2. Carefully place your PlayStation 4 controller into the designated compartment within the case. Ensure it fits snugly to prevent movement during transport.
3. The case includes a mesh pocket for storing the charging cable and thumb grips.
4. Zip the case securely to protect your controller.

GAMEKIT

PS4 - CASE, 2X CONTROL CAPS, CHARGE CABLE



Image: The travel case opened, showing the interior and storage for the charging cable.



Image: A PlayStation 4 controller and thumb grips positioned within the open travel case.

2. Attaching Thumb Grips

1. Select the desired thumb grips (Control: Caps).
2. Carefully stretch a thumb grip over the analog stick of your PlayStation 4 controller.
3. Ensure the grip is fully seated and centered on the analog stick for optimal performance.



Image: The included thumb grips and the USB charging cable.

3. Using the USB Charging Cable

1. Connect the micro-USB end of the 3m charging cable to the charging port on your PlayStation 4 controller.
2. Connect the standard USB-A end of the cable to a compatible USB power source, such as your PlayStation 4 console, a USB wall adapter, or a computer.
3. The controller's light bar will indicate charging status.



Image: The 3-meter USB charging cable with its connectors.

OPERATING INSTRUCTIONS

Travel Case Usage

The travel case is designed to protect your PlayStation 4 controller from impacts, scratches, and dust during transport. Its hard shell provides robust protection. Use the attached carabiner to secure the case to a backpack or travel bag for convenient carrying.



Image: The travel case with its carabiner, demonstrating portability.

Charging Your Controller

The 3m USB charging cable allows you to charge your PlayStation 4 controller while playing or from a distance. Ensure a stable connection between the controller, cable, and power source for efficient charging.

Enhancing Control with Thumb Grips

The included thumb grips provide enhanced grip and comfort during gameplay, reducing slippage and improving precision. They also protect the original analog sticks from wear and tear.

MAINTENANCE

- **Travel Case:** Wipe the exterior of the case with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners. Ensure the case is dry before storing.
- **Charging Cable:** Keep the cable free from kinks and sharp bends. Store it neatly coiled when not in use. Do not expose the cable to extreme temperatures or moisture.

- **Thumb Grips:** The thumb grips can be removed and gently washed with mild soap and water if they become dirty. Allow them to air dry completely before reattaching.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Controller not charging	Loose cable connection, faulty power source, damaged cable.	Ensure both ends of the USB cable are securely connected. Try a different USB port or power adapter. Inspect the cable for visible damage.
Thumb grips slipping off	Improper installation, worn grips, or incompatible analog stick size.	Re-install the thumb grips, ensuring they are fully stretched and seated. If grips are worn, replacement may be necessary. This kit is designed for standard PS4 controllers.
Case zipper stuck	Fabric caught in zipper, debris in zipper teeth.	Gently pull any caught fabric away from the zipper. Clean zipper teeth with a small brush if debris is present. Do not force the zipper.

SPECIFICATIONS

- **Compatible Devices:** PlayStation 4 Controller
- **Closure Type:** Zipper
- **Number of Compartments:** 2 (main controller compartment, mesh pocket)
- **Item Weight:** Approximately 0.75 Pounds
- **Shell Type:** Hard
- **Charging Cable Length:** 3 meters (9.8 feet)
- **Included Accessories:** 4x Thumb Grips, 1x Carabiner

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the manufacturer's official website or contact their customer service department. Keep your proof of purchase for any warranty claims.

Manufacturer: Snakebyte

