

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Karlsson](#) /

› [Present Time Karlsson 7073 Light Wood Effect Glass Clock User Manual](#)

Karlsson 7073

Karlsson 7073 Light Wood Effect Glass Clock User Manual

Model: 7073

[Contents](#) [Setup](#) [Operation](#) [Maintenance](#) [Introduction](#) [Safety Information](#) [Troubleshooting](#) [Package](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for purchasing the Karlsson 7073 Light Wood Effect Glass Clock. This elegant and minimalist clock is designed to complement various interior styles, offering both aesthetic appeal and reliable timekeeping. It can be used as a desk or shelf clock, or easily mounted on a wall.

Please read this manual thoroughly before using the product to ensure proper setup, operation, and maintenance. Keep this manual for future reference.



Figure 1: Front view of the Karlsson 7073 Light Wood Effect Glass Clock.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not expose the clock to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping the clock or subjecting it to strong impacts, as this may damage the glass or internal mechanism.
- Keep batteries out of reach of children and pets. Dispose of used batteries properly according to local regulations.
- Do not attempt to disassemble or repair the clock yourself. Refer all servicing to qualified personnel.
- Use only the specified battery type (AA) and ensure correct polarity during installation.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all items are present and in good condition. If any items are missing or damaged, please contact your retailer.

- Karlsson 7073 Light Wood Effect Glass Clock
- User Manual (this document)

Note: One AA battery is required for operation and is **not included** in the package.

4. SETUP

4.1. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Insert one (1) AA battery, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
3. Close the battery compartment cover securely.



Figure 2: Back view of the clock with battery compartment and setting knob.

4.2. Setting the Time

1. After installing the battery, locate the time setting knob on the back of the clock (refer to Figure 2).
2. Gently turn the knob in either direction until the hour and minute hands indicate the correct time.
3. Ensure the hands are not obstructed and move freely.

4.3. Placement Options

The Karlsson 7073 clock is versatile and can be placed in two ways:

- **Desk/Shelf Placement:** The clock is designed with a stable base that allows it to stand upright on any flat surface, such as a desk, shelf, or mantelpiece.
- **Wall Mounting:** For wall mounting, use the integrated hanging slot located on the back of the clock mechanism (refer to Figure 2). Ensure you use an appropriate screw or hook securely fastened to the wall, capable of supporting the clock's weight.



Figure 3: Side view illustrating the clock's profile.

5. OPERATING INSTRUCTIONS

Once the battery is installed and the time is set, the clock will begin to operate automatically. The analog hands will continuously display the current time.

- **Time Adjustment:** If the time needs to be adjusted (e.g., for daylight saving time or after a power interruption), simply repeat the steps in Section 4.2.

6. MAINTENANCE

6.1. Cleaning

To clean the clock, gently wipe the glass and wood effect surface with a soft, dry, lint-free cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish or internal components.

6.2. Battery Replacement

When the clock hands stop moving or start to slow down, it is an indication that the battery needs to be replaced. Follow the battery installation steps in Section 4.1 to replace the AA battery. Always replace with a fresh, high-quality AA battery.

7. TROUBLESHOOTING

If you encounter any issues with your Karlsson 7073 clock, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Clock is not working / hands are not moving.	Battery is dead or incorrectly installed.	Replace the AA battery with a new one, ensuring correct polarity (+/-).
Time is incorrect or running slow.	Low battery power.	Replace the AA battery.
Hands are stuck or not moving smoothly.	Hands are bent or obstructed.	Gently check if the hands are touching each other or the clock face. If bent, carefully try to straighten them without applying excessive force.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Karlsson
Model	7073
Display Type	Analog
Power Source	Battery Powered (1 x AA, not included)
Material	Wood, Glass
Shape	Round
Product Dimensions	17 cm diameter
Item Weight	330 grams

9. WARRANTY & SUPPORT

For information regarding warranty coverage, returns, or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Specific warranty details are subject to the terms and conditions of the original purchase.