

Joly Joy JO-BTS-03-EU

Joly Joy Soundbar User Manual

Model: JO-BTS-03-EU

1. INTRODUCTION

Thank you for purchasing the Joly Joy Soundbar. This manual provides essential information for the safe and efficient operation of your new soundbar. Please read this manual thoroughly before use and retain it for future reference.

The Joly Joy JO-BTS-03-EU Soundbar is designed to enhance your audio experience with powerful stereo sound. It features multiple connectivity options, including wireless Bluetooth, AUX, Optical, Coaxial, and USB, ensuring compatibility with a wide range of devices such as TVs, smartphones, and tablets. The included remote control allows for convenient operation from a distance.



Image: The Joly Joy Soundbar with its remote control, showcasing its sleek design.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not expose the soundbar to rain, moisture, or extreme temperatures.
- Do not open the casing. Refer all servicing to qualified personnel.
- Keep the soundbar away from heat sources and direct sunlight.
- Ensure proper ventilation around the unit.
- Use only the power adapter supplied with the soundbar.
- Clean the soundbar with a soft, dry cloth. Do not use liquid cleaners.

3. PACKAGE CONTENTS

Please check the package contents upon unpacking. If any items are missing or damaged, contact your retailer.

- Joly Joy Soundbar
- Remote Control
- Power Adapter
- RCA to 3.5mm AUX Cable
- Wall Mounting Brackets and Screws
- User Manual (this document)



Image: All items included in the Joly Joy Soundbar package, laid out for inspection.

4. PRODUCT OVERVIEW

4.1. Soundbar Components

The soundbar features a sleek design with an integrated LED display on the front panel, indicating volume levels and selected input modes. The rear and side panels house various input ports for versatile connectivity.



USB Port

Optical Input
Coaxial Input
RCA/AUX Input

Multiple Connection Options & Cleaner Setup

only need one cable running to the sound bar, without requiring the space, complexity and expense of a home theater receiver setup

Image: Detailed view of the soundbar's connection ports, including USB, Optical, Coaxial, and RCA/AUX inputs.

4.2. Remote Control

The included remote control provides full functionality for the soundbar, allowing you to power on/off, select input modes, adjust volume, and control playback.

Remote Control & LED Display

With a front-panel display, you can easily know how high the volume is or what input you've selected



Image: The soundbar's LED display showing an input mode, with the remote control in the foreground.

5. SETUP

5.1. Placement

Place the soundbar on a stable, flat surface directly in front of your television or monitor for optimal sound projection. Ensure there are no obstructions in front of the soundbar's speakers.

5.2. Wall Mounting

The soundbar can be wall-mounted using the provided brackets and screws. Ensure the wall material is suitable for mounting and use appropriate tools. It is recommended to consult a professional for wall mounting if you are unsure.

5.3. Power Connection

1. Connect the power adapter to the DC IN port on the soundbar.
2. Plug the power adapter into a wall outlet.
3. The soundbar will enter standby mode, indicated by a specific light on the LED display.



Image: The Joly Joy Soundbar positioned below a television, with the remote control in the foreground, illustrating a typical setup.

6. OPERATING INSTRUCTIONS

6.1. Power On/Off

Press the Power button on the soundbar or the remote control to turn the unit on or off.

6.2. Input Selection

Press the 'MODE' button on the remote control or the soundbar to cycle through the available input modes: Bluetooth (BT), AUX, Optical (OPT), Coaxial (COX), and USB. The selected mode will be displayed on the LED screen.

6.3. Volume Control

Use the 'VOL+' and 'VOL-' buttons on the remote control or the soundbar to adjust the volume. The volume level will be shown on the LED display.

6.4. Sound Modes

The soundbar offers optimized listening modes for different content. Press the 'MUSIC' or 'MOVIE' buttons on the remote control to switch between these modes, enhancing your audio experience for music or cinematic content.



Movie/Music Listening Modes

delivers a dynamic and enthralling sound quality improvement by selecting your favorite audio tracks, make your favorite movies and music come alive!

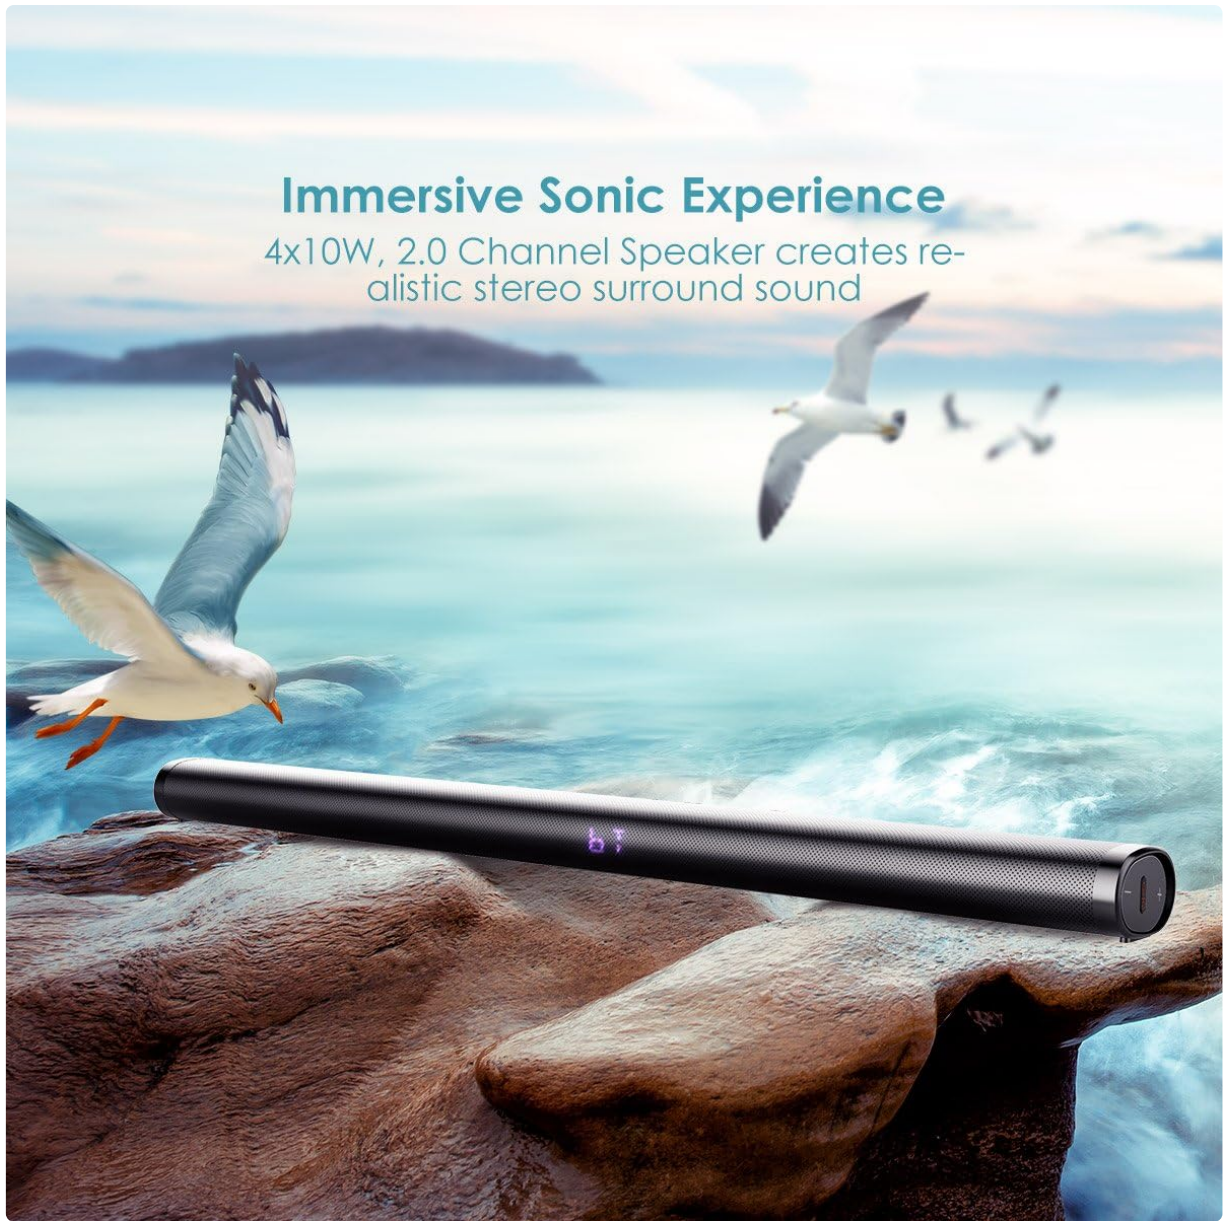


Image: The Joly Joy Soundbar highlighting its Movie/Music Listening Modes for enhanced audio quality.

7. CONNECTIVITY

7.1. Bluetooth Connection

1. Turn on the soundbar and select 'BT' mode using the 'MODE' button. The LED display will show 'BT' and flash, indicating it's in pairing mode.
2. Enable Bluetooth on your device (smartphone, tablet, etc.).
3. Search for 'JO-BTS-03-EU' in your device's Bluetooth list and select it to pair.
4. Once connected, the 'BT' indicator on the soundbar will stop flashing. You can now play audio from your device through the soundbar.



Immersive Sonic Experience

4x10W, 2.0 Channel Speaker creates realistic stereo surround sound

Image: The Joly Joy Soundbar in an outdoor setting, emphasizing its immersive sonic experience.

7.2. Wired Connections

The soundbar supports various wired connections for maximum compatibility:

- **AUX (3.5mm RCA):** Connect your device using the supplied RCA to 3.5mm cable to the 'AUX IN' port. Select 'AUX' mode.
- **Optical:** Connect an optical cable (not included) from your TV or audio source to the 'OPTICAL IN' port. Select 'OPT' mode.
- **Coaxial:** Connect a coaxial cable (not included) from your TV or audio source to the 'COAXIAL IN' port. Select 'COX' mode.
- **USB:** Insert a USB drive with audio files into the 'USB' port. The soundbar will automatically switch to USB mode and begin playback.

8. MAINTENANCE

To maintain the performance and appearance of your soundbar:

- **Cleaning:** Wipe the surface with a soft, dry, lint-free cloth. Do not use abrasive cleaners, waxes, or solvents.

- **Storage:** If storing the soundbar for an extended period, disconnect it from power and store it in a cool, dry place.

9. TROUBLESHOOTING

If you encounter issues with your soundbar, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
No power	Ensure the power adapter is securely connected to the soundbar and a working power outlet.
No sound	Check the volume level on both the soundbar and the connected device. Ensure the correct input mode is selected. Verify audio cables are securely connected.
Bluetooth pairing fails	Ensure the soundbar is in Bluetooth pairing mode. Move the soundbar closer to your device. Disconnect other Bluetooth devices from your source device.
Remote control not working	Check the battery in the remote control. Ensure there are no obstructions between the remote and the soundbar's sensor.

If the problem persists after trying these solutions, please contact customer support.

10. SPECIFICATIONS

Feature	Specification
Model	JO-BTS-03-EU
Output Power (RMS)	40W (2 x 20W)
Bluetooth Version	V2.1
Bluetooth Range	Up to 10 meters (32 feet)
Frequency Response	80Hz - 20KHz
Impedance	4 Ohm
Input Voltage	120V ~ 50/60Hz / 45W
Speaker Drivers	4 x 2 inch, 15W
Control Method	Remote Control
Connectivity Options	AUX, Bluetooth, RCA, USB, Optical, Coaxial
Mounting Type	Wall Mount
Color	Black-03
Dimensions (L x W x H)	Approx. 35.1 x 3.3 x 2.2 inches (89.15 x 8.38 x 5.59 cm)
Weight	Approx. 2.55 kg

11. WARRANTY AND SUPPORT

Joly Joy products are manufactured to high-quality standards. This product comes with a standard manufacturer's warranty against defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or warranty inquiries, please contact Joly Joy customer service through the retailer where you purchased the product or visit the official Joly Joy website for contact information.