

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [JOYOUNG](#) /

› [Joyoung K15-F026M Electric Kettle User Manual](#)

JOYOUNG K15-F026M

Joyoung K15-F026M Electric Kettle User Manual

Model: K15-F026M

INTRODUCTION

Thank you for purchasing the Joyoung K15-F026M Electric Kettle. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or electric kettle in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the heating cycle.

- Ensure the lid is securely closed before operating.
- Do not fill above the MAX line or below the MIN line indicated inside the kettle.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Joyoung Electric Kettle.



Figure 1: Joyoung K15-F026M Electric Kettle. This image shows the kettle body, handle, lid, spout, and power base.

1. **Kettle Body:** Stainless steel construction with 1.5-liter capacity.
2. **Lid:** Removable or hinged lid for filling.
3. **Handle:** Ergonomically designed for safe pouring.
4. **Spout:** For controlled pouring of hot water.
5. **Power Switch:** Located on the handle or base, typically illuminates when boiling.
6. **Power Base:** Cordless design allows the kettle to be lifted off the base.
7. **Water Level Indicator:** (If visible on model) Shows minimum and maximum fill levels.

SETUP

1. **Unpacking:** Carefully remove the kettle and all accessories from the packaging. Retain packaging for future transport or storage.
2. **Initial Cleaning:** Before first use, fill the kettle with clean water to the MAX level. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the power base on a flat, stable, heat-resistant surface, away from the edge of the counter. Ensure the power cord is not dangling where it can be pulled or tripped over.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of your kettle.

OPERATING INSTRUCTIONS

- Filling the Kettle:** Remove the kettle from its power base. Open the lid and fill with the desired amount of fresh, cold water. Do not fill below the MIN mark or above the MAX mark.
- Closing the Lid:** Close the lid securely. Ensure it clicks into place if applicable.
- Placing on Base:** Place the kettle firmly back onto its power base.
- Boiling Water:** Press the power switch to the "ON" position. The indicator light will illuminate, signifying that the kettle is heating.
- Automatic Shut-off:** The kettle will automatically turn off once the water has reached a rolling boil. The indicator light will extinguish.
- Pouring:** Carefully lift the kettle from the power base and pour the hot water slowly and steadily.
- Re-boiling:** If the kettle has just boiled, allow a few moments for the internal thermostat to reset before attempting to re-boil.

Note: The kettle features an automatic shut-off function for safety and energy efficiency. Do not attempt to override this feature.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your kettle.

- Before Cleaning:** Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- Exterior Cleaning:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- Interior Cleaning (Descaling):** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas.
 - Fill the kettle with 1 part white vinegar and 2 parts water.
 - Boil the mixture and let it stand for at least 30 minutes, or longer for heavy scale.
 - Discard the mixture and rinse the interior thoroughly with fresh water several times.
 - For stubborn deposits, a non-abrasive descaling solution designed for kettles can be used following the product's instructions.
- Filter Cleaning (if applicable):** If your kettle has a removable filter in the spout, gently remove it and rinse under running water. Reinsert once clean.
- Storage:** When not in use, store the kettle on its base in a dry, safe place.

Caution: Never immerse the kettle body or power base in water or any other liquid.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat.	Not plugged in. Power switch not activated. Kettle not properly seated on base. No power at outlet.	Ensure plug is securely in outlet. Press the power switch. Reseat kettle firmly on the power base. Check household circuit breaker or try another outlet.

Problem	Possible Cause	Solution
Kettle boils slowly.	Limescale buildup. Overfilled kettle.	Descale the kettle as per maintenance instructions. Do not fill above the MAX line.
Kettle turns off before boiling.	Limescale buildup affecting sensor. Kettle was dry-boiled (safety feature activated).	Descale the kettle. Allow kettle to cool completely before refilling and restarting.
Water tastes metallic or unusual.	New kettle residue.	Perform initial cleaning steps (boil and discard water 2-3 times).

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

- **Model:** K15-F026M
- **Brand:** JOYOUNG
- **Capacity:** 1.5 Liters
- **Material:** Stainless Steel
- **Wattage:** 1100 Watts
- **Heating Method:** Underpan Heating
- **Additional Features:** Auto power off
- **Item Weight:** Approximately 2.35 pounds (1.07 kg)
- **Package Dimensions:** 9.29 x 8.82 x 7.28 inches (23.6 x 22.4 x 18.5 cm)
- **Product Care:** Hand wash, Wipe clean

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official JOYOUNG website. Keep your purchase receipt as proof of purchase for warranty claims.

Manufacturer: JOYOUNG

Website: www.joyoung.com

