

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Boley](#) /
- › [Boley Pretend Play Cash Register Toy Instruction Manual](#)

Boley 75358BOL001

Boley Pretend Play Cash Register Toy Instruction Manual

Model: 75358BOL001

1. PRODUCT OVERVIEW

The Boley Pretend Play Cash Register Toy is an interactive 19-piece set designed to provide an engaging and educational experience for children aged 3 and up. This toy encourages imaginative play and helps develop basic math and business concepts through realistic features and accessories.



Image: The Boley Pretend Play Cash Register Toy with included accessories.

2. PACKAGE CONTENTS

Your Boley Pretend Play Cash Register Toy package includes the following items:

- Cash Register unit with integrated solar-powered calculator, moving conveyor belt, pop-out drawer, pretend scale, and working microphone.
- Handheld scanner with realistic lights and sounds.
- Play money (bills and coins).
- Shopping basket.
- Assorted pretend grocery items.

19 PC



6"

15"

Image: Overview of the 19-piece set included with the cash register toy.

3. INITIAL SETUP

3.1 Battery Installation

The cash register requires 2 AA batteries for full functionality. These batteries are included with your purchase.

1. Locate the battery compartment on the underside of the cash register unit.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 2 AA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

3.2 Component Placement

No complex assembly is required. Simply place the accessories, such as the play money and grocery items, within reach for play. The handheld scanner connects to the main unit via a cord.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the various interactive features of your cash register toy:

4.1 Solar-Powered Calculator

The cash register features a functional solar-powered calculator. Press the 'ON/AC' button to activate it. Use the number pad and arithmetic operators (+, -, x, /) to perform calculations. The display will show the results.

Solar-Powered Calculator



Image: Close-up of the cash register showing the solar-powered calculator display.

4.2 Motorized Conveyor Belt

Place pretend grocery items on the conveyor belt. Press the button located near the belt to activate its motorized movement, simulating items moving towards the scanner.

Motorized Conveyor Belt



Boley

Image: A hand operating the motorized conveyor belt with a shopping basket on it.

4.3 Scanner and Reactive Scale

Use the handheld scanner to 'scan' items. It will emit a beeping sound and light up, mimicking a real scanner. The integrated scale is reactive; place items on it to simulate weighing them.

Reactive Scale & Beeping Scanner



Boley

Image: A hand using the beeping scanner on a pretend grocery item placed on the reactive scale.

4.4 Working Microphone

The cash register includes a working microphone. Speak into it to make announcements, just like in a real store environment.

4.5 Pop-Out Cash Drawer

Press the designated button to open the cash drawer. This drawer is designed to hold the included play money.

4.6 Interactive Phrases

The cash register features three polite phrase buttons, such as "Bye bye!" and "Thank you!", adding to the interactive play experience.

5. CARE AND MAINTENANCE

- **Cleaning:** Wipe the toy with a soft, damp cloth. Do not immerse in water. Avoid harsh chemicals or abrasive

cleaners.

- **Storage:** Store the toy and its accessories in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage.

6. TROUBLESHOOTING

- **No Power/Functionality:** Ensure batteries are correctly installed and not depleted. Replace with fresh batteries if necessary.
- **Conveyor Belt Not Moving:** Check for any obstructions on the belt. Ensure batteries have sufficient power.
- **Scanner Not Beeping/Lighting:** Verify the scanner is properly connected to the main unit. Check battery power.
- **Microphone Sound Quality:** The microphone is designed for play. Ensure it is held close to the mouth for best results.
- **Cash Drawer Not Opening:** Ensure no items are obstructing the drawer mechanism.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Product Dimensions	15 x 7.25 x 5.75 inches
Item Weight	2.25 pounds
Model Number	75358BOL001
Recommended Age	3 years and up
Batteries	2 AA batteries (included)
Material	High-quality, non-toxic plastic

8. IMPORTANT SAFETY INFORMATION

- This toy is intended for children aged 3 years and up.
- All materials used are non-toxic and safe for children.
- Adult supervision is recommended during play.
- Keep small parts away from children under 3 years to prevent choking hazards.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

For further assistance, please refer to the product packaging or visit the official Boley website.