

Casdon 5011551687027

Casdon Dyson Cordless Vacuum Instruction Manual

Interactive & Officially Licensed Toy Dyson Vacuum

1. PRODUCT OVERVIEW

The Casdon Dyson Cordless Vacuum is an officially licensed toy designed to provide realistic role-play fun for children aged 3 and up. This miniature vacuum cleaner mimics the appearance and some functionalities of a real Dyson Cordless Vacuum, encouraging imaginative play and the development of essential motor skills.





Figure 1: Casdon Dyson Cordless Toy Vacuum, fully assembled.

What's in the Box:

- Casdon Dyson Cord-Free Vacuum unit with accessible debris tray
- Long handle attachment
- Short nozzle attachment
- Simulated cyclone action with colorful spinning beads

2. SAFETY INFORMATION

WARNING: Small Parts. Not suitable for children under 36 months due to choking hazard.

Always supervise children during play. Ensure all parts are securely attached before use.

3. SETUP

Battery Installation:

The Casdon Dyson Cordless Vacuum requires 3 AA batteries (not included). To install:

1. Locate the battery compartment on the main vacuum unit.
2. Using a Phillips head screwdriver, open the battery compartment cover.
3. Insert 3 AA batteries, ensuring correct polarity (+/-).
4. Replace the cover and secure with the screw.

Assembly:

The vacuum can be used in two configurations: handheld or with the long handle.

- **For Handheld Use:** Attach the short nozzle directly to the main vacuum unit by aligning the connectors and pushing until it clicks into place.
- **For Upright Use:** Attach the long handle to the main vacuum unit. Then, attach the floor head to the other end of the long handle. Ensure all connections click securely.



Figure 2: Child demonstrating upright use with long handle.

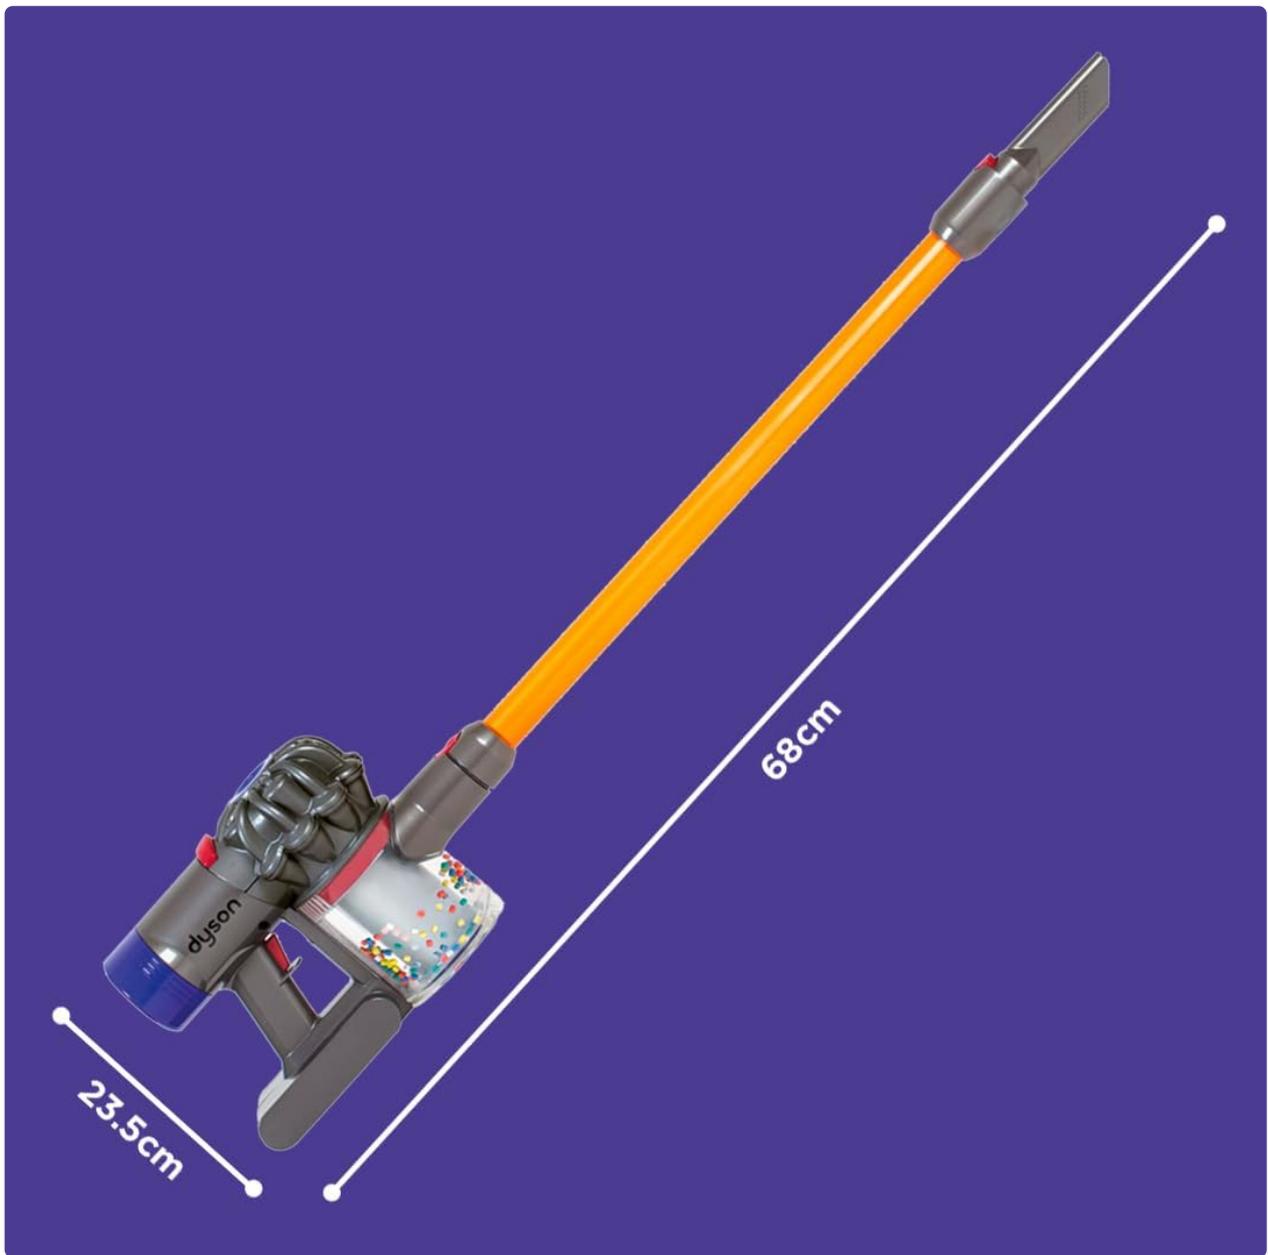


Figure 3: Child demonstrating handheld use with short nozzle.

4. OPERATING INSTRUCTIONS

Basic Operation:

To activate the vacuum's features, press and hold the trigger button located on the handle. This will initiate the simulated cyclone action and realistic vacuum sounds.

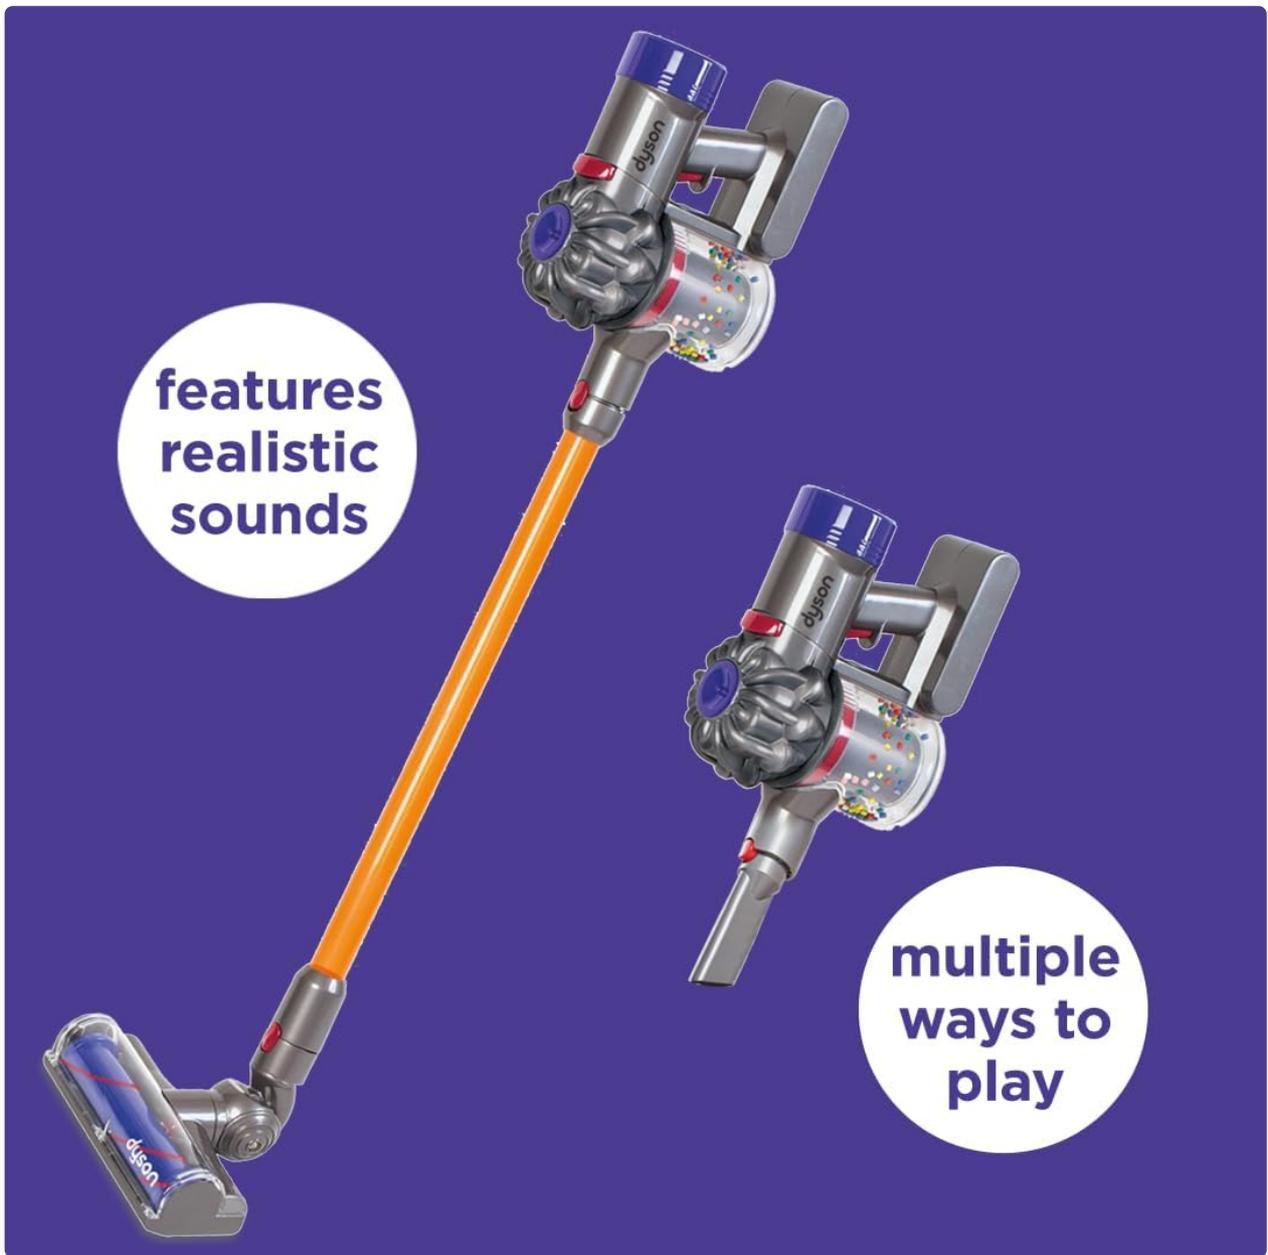


Figure 4: The toy features realistic sounds and offers multiple ways to play.

Simulated Cyclone Action:

When the vacuum is on, colorful beads inside the clear canister will spin, simulating the cyclone action of a real Dyson vacuum. This visual effect enhances the play experience.



cyclone action
with colourful spinning beads



twists & turns
just like the real thing



debris compartment
for endless play over and
over again

Figure 5: Close-up of the simulated cyclone action with colorful spinning beads.

Maneuverability:

The floor head features a 'twist & turn' action, allowing children to easily maneuver the vacuum around furniture and obstacles, just like a real Dyson.

5. MAINTENANCE

Cleaning the Debris Tray:

The toy vacuum includes an accessible debris tray. To empty any small particles collected during play, locate the release button on the canister and open the flap. Dispose of contents and close the flap securely.

6. TROUBLESHOOTING

Power Button Jamming:

In some instances, the power button may become jammed. If this occurs, gently tap the side of the vacuum unit. This may help to dislodge the button and restore functionality. If the issue persists, ensure batteries are correctly installed and have sufficient charge.

7. SPECIFICATIONS

Product Dimensions	9.25 x 3.94 x 26.77 inches
Item Weight	1.52 pounds
Country of Origin	Indonesia
Item Model Number	5011551687027
Manufacturer Recommended Age	36 months - 8 years
Batteries Required	3 AA batteries
Manufacturer	Casdon



Figure 6: Product dimensions for the Casdon Dyson Cordless Toy Vacuum.

8. WARRANTY AND SUPPORT

Specific warranty and support information for this product is not provided in the available data. Please refer to the product packaging or contact Casdon customer service for details regarding warranty coverage and support options.

© 2025 Casdon. All rights reserved.

Documents - Casdon – 5011551687027

no relevant documents