

Beyution AKB72915239

Beyution AKB72915239 Replacement Remote Control User Manual

For LG TV Models: 22LV2500, 26LV2500, 32LK330, 32LK450, 32LV2500, 32LV3500, and many others.

1. INTRODUCTION

This manual provides instructions for the Beyution AKB72915239 replacement remote control, designed for use with various LG television models. This remote control functions as a direct replacement and typically requires no programming.

2. PACKAGE CONTENTS

- 1 x Beyution AKB72915239 Replacement Remote Control
- *(Batteries are not included and must be purchased separately)*

3. SETUP AND BATTERY INSTALLATION

The remote control requires two AAA batteries (not included) for operation. No programming or setup is typically required; the remote is ready for use once batteries are installed.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.
5. The remote control is now ready for use with your compatible LG TV.





Image: Rear view of the remote control with the battery cover removed, illustrating the correct orientation for inserting two AAA batteries.

4. OPERATING INSTRUCTIONS

This remote control provides full functionality for compatible LG TV models. Below is a general overview of the buttons and their functions.





Image: Front view of the Beyution AKB72915239 remote control, displaying the layout of all control buttons.

Key Functions:

- **POWER (●):** Turns the TV on or off.
- **ENERGY SAVING:** Adjusts the TV's energy saving mode.
- **AV MODE:** Selects audio/video input modes.
- **INPUT:** Cycles through available input sources (HDMI, AV, Component, etc.).
- **TV:** Switches to TV mode.
- **Number Buttons (0-9):** Directly select channels.
- **LIST:** Displays the channel list.
- **MARK / FAV:** Accesses favorite channels or marks content.
- **FLASHBK:** Returns to the previously viewed channel.
- **VOL (+/-):** Adjusts the volume level.
- **CH (▲/▼):** Changes channels up or down.
- **MUTE:** Mutes or unmutes the TV audio.
- **INFO:** Displays information about the current program.
- **HOME:** Accesses the TV's home menu or smart features.
- **Q.MENU:** Opens the Quick Menu for common settings.
- **Navigation Pad (▲/▼/◀/▶) & ENTER:** Navigates menus and confirms selections.
- **BACK:** Returns to the previous screen or menu.
- **SIMPLINK:** Activates LG Simplink (HDMI-CEC) functions for connected devices.
- **EXIT:** Exits the current menu or application.
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within certain menus or applications.
- **Media Control Buttons (Rewind, Play/Pause, Fast Forward, Stop):** Controls playback of media content.

5. MAINTENANCE

Battery Replacement:

Replace batteries when the remote control's response becomes inconsistent or stops functioning. Always use new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning:

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Point the remote directly at the TV's infrared receiver.
 - Remove any obstructions between the remote and the TV.
- **Short operating distance:**
 - Replace batteries with new ones.
 - Ensure there are no strong light sources (like direct sunlight) interfering with the remote's signal.
- **Specific TV function not working:**
 - Verify your LG TV model is listed in the compatible models section. While this remote is a replacement, some advanced or smart TV specific functions might vary slightly depending on the original remote it replaces.

7. COMPATIBLE LG TV MODELS

This replacement remote control is compatible with a wide range of LG TV models, including but not limited to:

19LV2500
22LV2500, 22LV255C, 22LV255CUA
26LK330, 26LK330U, 26LV2500, 26LV2500UA, 26LV2520, 26LV255C
32LK330, 32LK330-UB, 32LK330-UH, 32LK330UB, 32LK330UH, 32LK430, 32LK450, 32LK450-UB, 32LK450-UH, 32LK450UB, 32LK450UH, 32LK453C, 32LV2500, 32LV2500-UA, 32LV2500UA, 32LV2520, 32LV255C, 32LV3400, 32LV3400-UA, 32LV3400UA, 32LV3500, 32LV3520
37LK450, 37LK450-UB, 37LK450-UH, 37LK450UB, 37LK450UH, 37LK453C, 37LV3500, 37LV3500-UA, 37LV3500-UG, 37LV3500UA, 37LV3500UG

8. SPECIFICATIONS

Model Number	AKB72915239
Brand	Beyution
Compatible Devices	LG Televisions
Power Source	2 x AAA Batteries (not included)
Operating Distance	Approximately 8-10 meters (26-33 feet)
Material	High-quality ABS
Dimensions (L x W x H)	8.27 x 1.57 x 0.39 inches (21 x 4 x 1 cm)
Weight	3 ounces (85 grams)

9. WARRANTY AND SUPPORT

This product comes with a 1-year return policy. For any questions or support needs, please contact the seller directly. A satisfactory response will be provided within 24 hours.

© 2023 Beyution. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question