

ECHOGEAR LYSB01M4NQ0SC-ELECTRNCS

ECHOGEAR Universal Streaming Device Mount

Model: LYSB01M4NQ0SC-ELECTRNCS

Brand: ECHOGEAR

1. INTRODUCTION

The ECHOGEAR Universal Streaming Device Mount is designed to securely attach media streaming devices and small AV accessories to the back of flat screen TVs, keeping them out of sight. This mount offers a universal design compatible with various devices and TV setups, supporting items up to 3 pounds.



Figure 1.1: The ECHOGEAR Universal Streaming Device Mount with a Roku device secured.

TALK ABOUT A HIDDEN GEM



Hide your streaming device behind your TV.

Figure 1.2: Illustration showing a media device visible in front of a TV (left) and hidden behind the TV using the mount (right).

2. PACKAGE CONTENTS

Verify that all components are present in the package before beginning installation:

- Universal Streaming Device Mount Plate
- Hook and Loop Straps (2)
- Various Philips head screws (M4, M6, M8)
- Washers and Spacers
- Instruction Manual

SO FRESH AND SO CLEAN out the box



Figure 2.1: Contents of the ECHOGEAR Universal Streaming Device Mount package.

3. SPECIFICATIONS

Feature	Detail
Model Number	LYSB01M4NQ0SC-ELECTRNCS
Material	Alloy Steel
Color	Black
Mounting Type	Wall Mount (via TV VESA holes)
Maximum Weight Capacity	3 lbs (1.36 kg)
Item Weight	1.2 pounds (0.54 kg)

SUPPORTS UP TO 3 LBS.

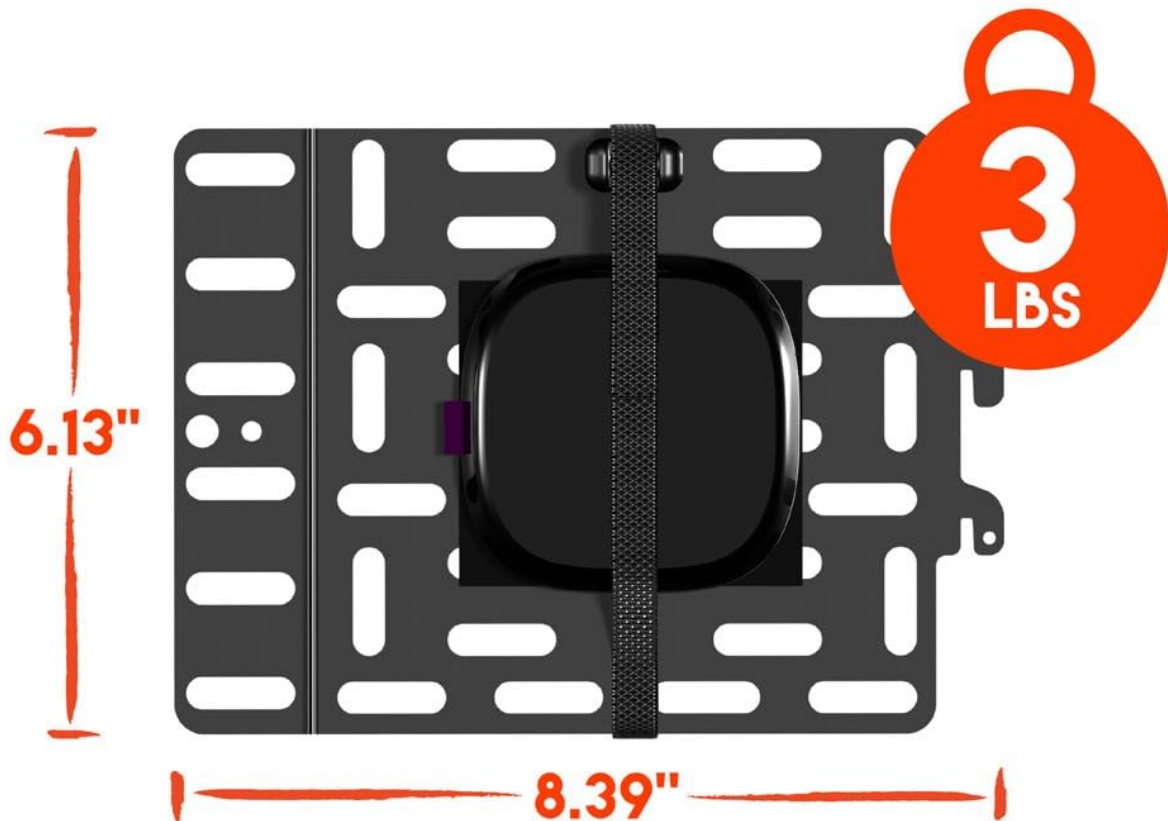 


Figure 3.1: Mount dimensions and weight capacity.

4. COMPATIBLE DEVICES

The ECHOGEAR Universal Streaming Device Mount is designed to be compatible with a wide range of streaming media devices and small accessories, including but not limited to:

- Roku (Roku 2, Roku 3, Roku 4, Roku Express, Roku Express+, Roku Premiere, Roku Premiere+, Roku Ultra)
- Apple TV (1st, 2nd, 3rd, and 4th Generation, 4K models)
- Amazon Fire TV
- TiVo Mini
- Slingbox
- Other small AV devices up to 3 lbs

BRACKET ATTACHES TO THE BACK OF THE TV TO HOLD:



and more!



ALL TRADEMARKS ARE THE PROPERTY OF THEIR RESPECTIVE OWNERS.

Figure 4.1: Examples of compatible streaming devices.

5. SETUP AND INSTALLATION

The mount can be attached directly to the back of your TV using an existing VESA hole or integrated with an existing TV wall mount.


5.1. Installation Steps

1. **Attach Panel to TV or TV Mount:** Select an appropriate VESA screw hole on the back of your television. Use the provided screws, washers, and spacers to securely attach the mount panel. Ensure the panel is stable. If attaching to an existing TV mount, the panel slides between the TV and the mount at one of the VESA points.
2. **Attach Streaming Device to Panel:** Place your streaming device onto the mount panel. Use the included hook and loop straps to firmly secure the device to the panel. Ensure the device is centered and the straps are tightened to prevent movement.

EASY INSTALL

STEP 1

ATTACH PANEL
DIRECTLY TO
BACK OF TV OR
TO ANY TV MOUNT

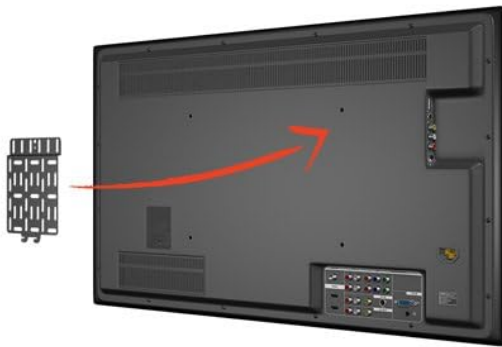

STEP 2

ATTACH
STREAMING DEVICE
OR ACCESSORY
TO PANEL



Figure 5.1: Basic installation steps.

EASILY ATTACHES TO TV MOUNT OR DIRECTLY TO TV

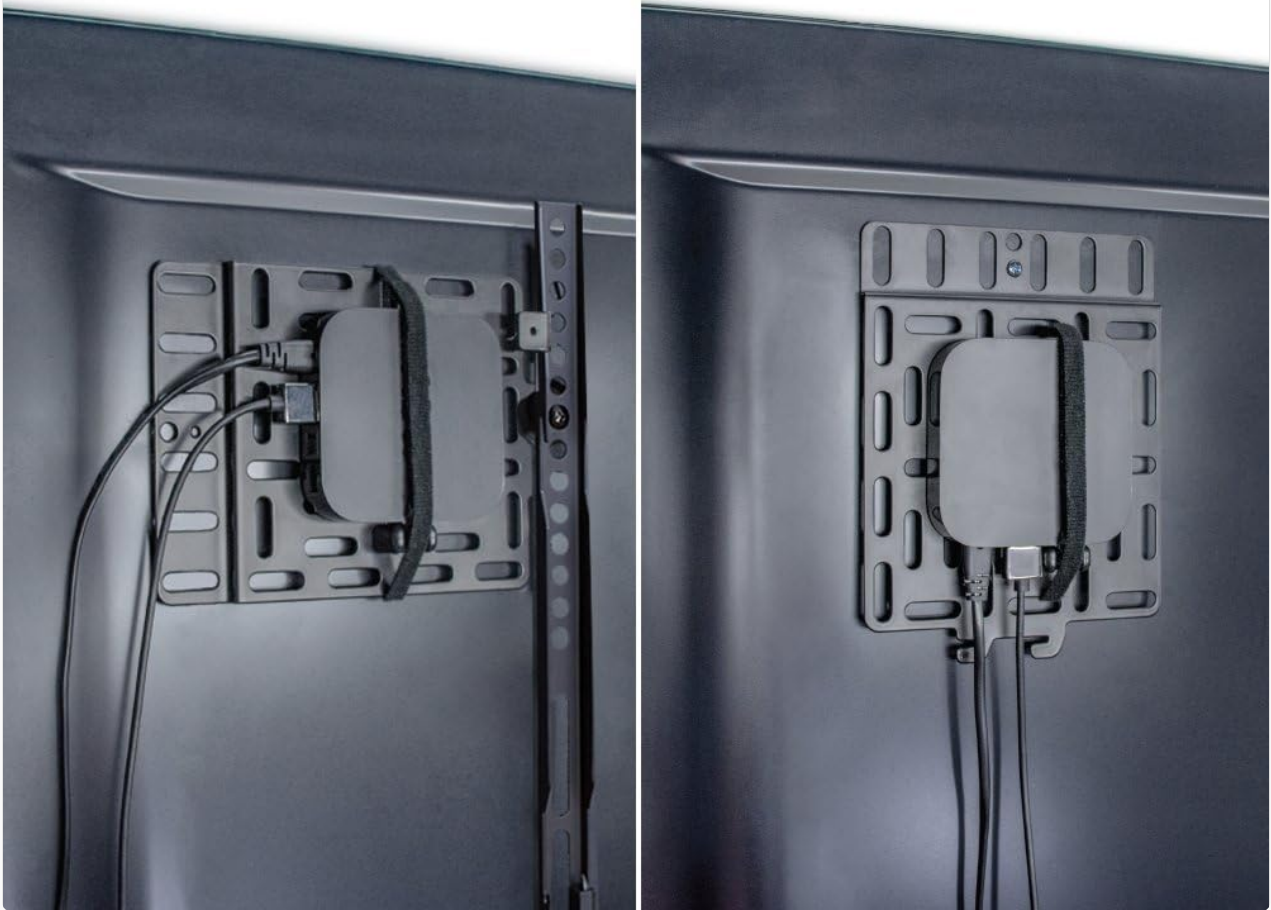


Figure 5.2: Mount attachment options: to a TV wall mount (left) or directly to the TV (right).

5.2. Cable Management

Once the device is secured, route all necessary cables (power, HDMI, etc.) neatly. The open design of the mount allows for various cable routing options to maintain a clean appearance behind the TV.



Figure 5.3: The mount discreetly positioned behind a wall-mounted television.

6. OPERATING INSTRUCTIONS

The ECHOGEAR Universal Streaming Device Mount is a passive accessory. Once installed and your device is secured, no further operation is required from the mount itself. Ensure your streaming device is properly connected to your TV and power source as per its own manufacturer's instructions.

7. MAINTENANCE

To ensure continued secure performance of your ECHOGEAR mount:

- **Regular Checks:** Periodically inspect the mount and the secured device to ensure all screws remain tight

and the hook and loop straps are still firmly holding the device.

- **Cleaning:** If necessary, gently wipe the mount with a dry, soft cloth to remove dust. Avoid using abrasive cleaners or solvents.
- **Weight Limit:** Do not exceed the maximum weight capacity of 3 lbs. Overloading can compromise the mount's integrity and lead to damage.

8. TROUBLESHOOTING

8.1. Device Not Secure

- Ensure the hook and loop straps are threaded correctly and pulled tight around the device.
- Verify that the device's weight does not exceed the 3 lbs capacity.
- Check that the mount plate itself is securely fastened to the TV or TV mount.

8.2. Mount Does Not Fit TV VESA Hole

- The mount is designed to attach to a single VESA screw hole. Ensure you are using the correct screw size (M4, M6, or M8) and appropriate washers/spacers for your TV.
- If using with a wall-mounted TV, ensure the mount does not interfere with the existing wall mount's stability. If the TV appears skewed, consider adding washers of equivalent thickness to the other VESA mounting points to even out the spacing.

8.3. Cables Are Not Tidy

- Utilize cable ties or clips (not included) to bundle and route cables along the mount or behind the TV for a cleaner appearance.

9. WARRANTY AND SUPPORT

For specific warranty information regarding your ECHOGEAR Universal Streaming Device Mount, please refer to the warranty card included in your product packaging or visit the official ECHOGEAR website.

ECHOGEAR provides US-based customer service available 7 days a week to assist with any questions or support needs. Contact information can typically be found on the product packaging or the ECHOGEAR official website.