

Manuals.plus /

› Spares2go /

› Spares2go Glass Lid Knob and Safety Skirt Instruction Manual for Swan Slow Cookers (Model 09-KK31-101)

Spares2go 09-KK31-101

Spares2go Glass Lid Knob and Safety Skirt Instruction Manual

Model: 09-KK31-101

INTRODUCTION

This manual provides instructions for the installation and maintenance of your Spares2go replacement glass lid knob and safety skirt. This high-quality, heat-resistant compatible replacement part is designed for use with various Swan slow cooker models.

PRODUCT COMPONENTS

The Spares2go Glass Lid Knob and Safety Skirt package includes the following components:

- 1 x Black Lid Knob
- 1 x Safety Skirt
- 1 x Fixing Screw

COMPATIBILITY

This replacement lid knob and safety skirt are compatible with most Swan slow cooker models that feature a single fixing hole in the glass lid. Compatible models include, but are not limited to:

- SF17030N
- SF17020N
- SF17010N
- SF11041
- SF11031
- SF17030ROU
- SF17020ROUN

INSTALLATION INSTRUCTIONS

Follow these steps to install the new lid knob on your Swan slow cooker glass lid:

1. **Prepare the Lid:** Ensure the slow cooker lid is clean and dry. If replacing an old knob, carefully remove the existing knob and any remaining hardware.
2. **Position the Safety Skirt:** Place the safety skirt on the underside of the glass lid, aligning its central hole with the fixing hole in the lid. The skirt acts as a protective barrier between the screw and the glass.
3. **Position the Knob:** Place the new black lid knob on the top side of the glass lid, aligning its central hole with the fixing hole and the safety skirt below.
4. **Secure with Screw:** Insert the provided fixing screw through the knob, then through the glass lid, and finally into the safety skirt. Use a screwdriver to tighten the screw until the knob is firmly attached to the lid. Do not overtighten, as this may damage the glass.



Figure 1: Top view of the lid knob with the fixing screw.



Figure 2: Side view illustrating the knob, glass lid, safety skirt, and screw assembly.

MAINTENANCE

To ensure the longevity of your lid knob:

- Clean the knob with a soft, damp cloth. Avoid abrasive cleaners.
- Periodically check the screw for tightness. If it becomes loose, gently retighten it.
- The knob is heat-resistant, but avoid exposing it to direct flame or extreme temperatures beyond normal slow cooker operation.

SPECIFICATIONS

Feature	Specification
Brand	Spares2go
Model Number	09-KK31-101
Color	Black
Item Shape	Oval
Material	Heat-resistant material (implied from description)
Package Dimensions	6.5 x 6.5 x 4 cm
Country of Origin	China

WARRANTY AND SUPPORT

For any questions regarding this product, installation assistance, or warranty information, please contact Spares2go customer support directly through their official channels. Refer to your purchase documentation for specific contact details.