

[Manuals.plus](#) /

› [Philips Compatible](#) /

› Instruction Manual for Philips Compatible Hair Clipper Comb

Philips Compatible Hair Clipper Comb

Instruction Manual for Philips Compatible Hair Clipper Comb

Model: Replacement Clipper Comb



INTRODUCTION

This manual provides essential information for the proper use and maintenance of your new replacement hair clipper comb. This comb is designed as a universal replacement part for various Philips QT series hair and beard trimmers. Please read these instructions carefully before use to ensure optimal performance and longevity of the product.



Figure 1: Front view of the red replacement hair clipper comb. This image shows the comb's teeth and the overall structure from the front, highlighting its translucent red plastic material.

PRODUCT OVERVIEW

The replacement clipper comb is a durable accessory made from red plastic, designed to guide hair for an even trim. It is compatible with a range of Philips QT series models.

Key Features:

- **Material:** High-quality, durable red plastic.
- **Compatibility:** Designed for Philips QT4000, QT4001, QT4006, QT4011, QT4013, QT4002, QT4004, QT4005, QT4007, QT4014, QT4015 series trimmers.
- **Function:** Guides hair for precise and even trimming.



Figure 2: Side view of the red replacement hair clipper comb. This image provides a profile view, showing the curvature and the length of the comb's teeth, which are essential for guiding hair during trimming.

SETUP AND INSTALLATION

Before installing the new comb, ensure your Philips trimmer is turned off and unplugged for safety. Remove any existing comb or attachment from the trimmer head.

1. **Align the Comb:** Carefully align the new red replacement comb with the attachment points on your Philips QT series trimmer head. The comb is designed to snap securely into place.
2. **Attach Securely:** Gently press the comb onto the trimmer head until you hear or feel a click, indicating it is firmly attached. Ensure there is no wobble and the comb is seated correctly.
3. **Verify Fit:** Once attached, gently tug on the comb to confirm it is securely fastened and will not detach during use.



Figure 3: Back view of the red replacement hair clipper comb. This image shows the rear of the comb, including the attachment mechanism or slots that connect to the trimmer body.

OPERATING INSTRUCTIONS

Once the comb is securely attached, your trimmer is ready for use. The comb helps to lift and guide hair towards the blades for an even cut.

- **Power On:** Turn on your Philips trimmer.
- **Trimming Technique:** Move the trimmer against the direction of hair growth, ensuring the comb glides smoothly over the skin. The comb will help maintain a consistent cutting length.
- **Cleaning During Use:** Periodically remove accumulated hair from the comb during longer trimming sessions to maintain optimal performance.



Figure 4: Another side view of the red replacement hair clipper comb. This image offers a different angle of the comb's profile, emphasizing its design and how it would sit on a trimmer.

MAINTENANCE

Regular cleaning of the comb will extend its lifespan and ensure hygienic use.

- **After Each Use:** Remove the comb from the trimmer. Use a small brush (often supplied with trimmers) to brush away any trapped hair from the comb and the trimmer blades.
- **Washing:** The plastic comb can be rinsed under running water. Ensure it is completely dry before reattaching it to the trimmer or storing it. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the comb in a clean, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your replacement comb, refer to the following common solutions:

Problem	Possible Cause	Solution
Comb does not fit or is loose.	Incorrect model compatibility or improper alignment.	Verify your trimmer model is listed in the compatible models. Ensure the comb is aligned correctly and pressed firmly until it clicks into place.

Problem	Possible Cause	Solution
Hair gets stuck in the comb frequently.	Accumulated hair or comb not clean.	Clean the comb thoroughly after each use and periodically during longer trimming sessions. Ensure blades are also clean and oiled if recommended by trimmer manufacturer.
Comb appears damaged after short use.	Excessive force during use or accidental impact.	Use the trimmer with gentle, consistent pressure. Avoid dropping the trimmer with the comb attached.

SPECIFICATIONS

- **Product Type:** Replacement Hair Clipper Comb
- **Color:** Red
- **Material:** Plastic
- **Compatible Models:** Philips QT4000, QT4001, QT4006, QT4011, QT4013, QT4002, QT4004, QT4005, QT4007, QT4014, QT4015
- **Package Dimensions:** 4.72 x 3.54 x 3.15 inches (approximate)
- **Item Weight:** 1.76 ounces (approximate)

WARRANTY AND SUPPORT

This product is a replacement accessory. Specific warranty information for this replacement part may vary. Please refer to the original purchase documentation or contact your retailer for details regarding returns or defects. For operational issues related to your Philips trimmer, please consult the trimmer's original instruction manual or Philips customer support.

