

[Manuals.plus](#) /

> [Girmi](#) /

> Girmi FE42 Electric Ventilated Oven - 42 Liters User Manual

Girmi FE4200

Girmi FE42 Electric Ventilated Oven

Model: FE4200

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

General Safety

- Do not touch hot surfaces. Always use oven mitts or gloves when handling hot items.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from flammable materials.
- Do not immerse the cord, plug, or appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.

Electrical Safety

- Connect the appliance only to an AC 220-240V ~ 50/60Hz power supply.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.

2. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the various parts of your Girmi FE42 Electric Ventilated Oven.



Figure 2.1: Front view of the Girmi FE42 Electric Ventilated Oven, showcasing its red and black design with a large glass door and control panel on the right.



Figure 2.2: Detailed view of the three control knobs on the oven's right side. From top to bottom, these control temperature, cooking function, and timer settings.



Figure 2.3: Close-up of the oven door, showing the sturdy handle and the mechanism for opening and closing the double-glazed door.



Figure 2.4: The included accessories: a stainless steel grill rack, a baking tray (leccarda), and a handle for safely removing hot trays and racks.



Figure 2.5: Interior view of the oven, highlighting the internal light for visibility and the ventilation fan for even heat distribution.



Figure 2.6: Diagram illustrating the external dimensions of the oven: approximately 56.5 cm (width), 36 cm (depth), and 40 cm (height).

3. SETUP AND FIRST USE

Unpacking

Carefully remove the oven and all accessories from the packaging. Retain the packaging for future storage or transport if needed. Check for any damage during transit. If any damage is found, do not use the appliance and contact customer support.

Placement

Place the oven on a flat, stable, and heat-resistant surface. Ensure there is adequate space around the oven (at

least 10 cm on all sides) for proper ventilation. Do not place the oven near walls, curtains, or other heat-sensitive materials. Avoid placing it under cabinets or near water sources.

Initial Cleaning

Before first use, wipe the interior and exterior of the oven with a damp cloth. Wash the grill rack, baking tray, and handle with warm, soapy water. Rinse thoroughly and dry completely.

First Use (Burn-in)

To eliminate any manufacturing odors, operate the oven empty for approximately 15 minutes. Set the temperature to 230°C and the function to 'Combined' (both top and bottom heating elements). Ensure the room is well-ventilated during this process. A slight odor or smoke may be present; this is normal and will dissipate.

4. OPERATING INSTRUCTIONS

The Girmi FE42 oven features three control knobs for easy operation.

Control Panel Overview

- **Top Knob:** Temperature control (100°C to 230°C).
- **Middle Knob:** Cooking function selector (Base, Grill, Combined).
- **Bottom Knob:** 60-minute timer with acoustic signal.

Cooking Functions

- **Base (Bottom Heating):** Ideal for baking cakes, pastries, and dishes that require heat primarily from below.
- **Grill (Top Heating):** Perfect for grilling, toasting, and browning the top of dishes.
- **Combined (Top and Bottom Heating):** Suitable for most general cooking and roasting, providing even heat distribution.

Step-by-Step Operation

1. Place the food on the grill rack or baking tray.
2. Insert the rack/tray into the desired slot inside the oven.
3. Close the oven door securely.
4. Set the desired temperature using the **Top Knob** (100°C - 230°C).
5. Select the appropriate cooking function using the **Middle Knob** (Base, Grill, or Combined).
6. Set the cooking time using the **Bottom Knob** (Timer, up to 60 minutes). The oven will begin heating, and the indicator light will illuminate. The oven will automatically turn off when the timer reaches zero, accompanied by an acoustic signal.
7. To stop cooking before the timer finishes, turn the timer knob to the 'OFF' position.
8. Carefully remove cooked food using the provided handle or oven mitts.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your oven.

General Cleaning

- Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
- Clean the interior walls and glass door with a damp cloth and mild detergent. For stubborn stains, a non-abrasive oven cleaner designed for conventional ovens can be used, following the product instructions carefully. Ensure all cleaner residue is removed.

Cleaning Accessories

- The grill rack, baking tray, and handle can be washed in warm, soapy water. Rinse thoroughly and dry immediately to prevent rust.

Care and Storage

- Do not store anything on top of the oven when it is in use.
- Store the oven in a cool, dry place when not in use.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your oven.

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; timer not set.	Ensure the oven is securely plugged into a working outlet. Check your household's circuit breaker. Turn the timer knob to the desired cooking time; the oven will not operate without the timer being set.
Oven not heating sufficiently or unevenly.	Incorrect temperature/function setting; ventilation issues; faulty heating element.	Verify that the temperature and cooking function knobs are set correctly for your recipe. Ensure adequate space around the oven for ventilation. If the issue persists, especially if one heating element consistently fails to heat, contact customer support.
Internal light not working.	Light bulb needs replacement.	Consult a qualified technician for light bulb replacement. Do not attempt to replace it yourself unless specified in a service manual.
Timer does not work or stops prematurely.	Timer mechanism issue.	Ensure the timer knob is turned past the 'OFF' position to activate. If the timer consistently malfunctions, contact customer support.

If you experience any issues not listed here or if the problem persists after attempting the suggested solutions, please contact Girmi customer support.

7. SPECIFICATIONS

Feature	Detail
Model	FE4200
Capacity	42 Liters

Feature	Detail
Power	2000 W
Voltage	AC 220-240V ~ 50/60Hz
Temperature Range	100°C to 230°C
Timer	60 minutes with acoustic signal
Dimensions (W x D x H)	56.5 x 36 x 40 cm
Weight	8.5 kg
Heating Elements	4 armored steel heating elements
Door	Double glass for thermal insulation
Internal Features	Ventilation, Internal light
Compatibility	Can accommodate a plate up to 32 cm in diameter
Included Accessories	1 grill rack, 1 baking tray, 1 tray handle

8. WARRANTY AND SUPPORT

Girmi products are manufactured to high-quality standards. This product is covered by a manufacturer's warranty against defects in materials and workmanship from the date of purchase. Please refer to the warranty card included with your product for specific terms and conditions.

Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact Girmi customer support. Contact details can typically be found on the official Girmi website or on the product packaging.

Please retain your proof of purchase for warranty purposes.