

[Manuals.plus](#) /

› [Bushnell](#) /

› Bushnell Pinseeker Slope Tour V4 Jolt Rangefinder User Manual

Bushnell Pinseeker Slope Tour V4 Jolt

Bushnell Pinseeker Slope Tour V4 Jolt Rangefinder User Manual

Model: Pinseeker Slope Tour V4 Jolt

INTRODUCTION

The Bushnell Pinseeker Slope Tour V4 Jolt is a high-performance laser rangefinder designed for golf. It provides precise distance measurements to flags, hazards, and other objects on the course, incorporating Bushnell's Pinseeker technology with JOLT vibration feedback and Slope compensation for accurate adjusted distances. This manual provides essential information for the proper setup, operation, and maintenance of your device.



Image: The Bushnell Pinseeker Slope Tour V4 Jolt rangefinder, showing its black body with red accents and optical lenses.

SAFETY INFORMATION

Please read and understand all safety warnings before using this product. Failure to follow these instructions may result in injury or damage to the device.

- **Laser Safety:** This device uses an invisible Class 1 laser. Do not stare directly into the laser beam or view directly with optical instruments.
- **Eye Protection:** Always use caution when operating the rangefinder. Avoid pointing the device at others.
- **Battery Handling:** Use only the specified battery type. Do not mix old and new batteries. Dispose of batteries properly according to local regulations.
- **Water Resistance:** The device is waterproof. However, avoid prolonged submersion or exposure to high-pressure water jets.
- **Cleaning:** Use a soft, clean cloth for cleaning. Avoid abrasive materials or harsh chemicals.

PACKAGE CONTENTS

Verify that all items are present in your package:

- Bushnell Pinseeker Slope Tour V4 Jolt Rangefinder
- Premium Carry Case
- CR2 Battery
- Cleaning Cloth
- User Manual (this document)

SETUP

1. Battery Installation

1. Locate the battery compartment on the side of the rangefinder.
2. Twist the battery cap counter-clockwise to open.
3. Insert a new CR2 3-volt lithium battery, ensuring the positive (+) terminal is facing outwards.
4. Replace the battery cap and twist clockwise until securely closed.

2. Powering On/Off

- To power on, press and release the Power/Fire button (usually located on top).
- The device will automatically power off after approximately 10 seconds of inactivity to conserve battery.

3. Focus Adjustment

Rotate the eyepiece until the display and the target appear sharp and clear. This adjustment is crucial for optimal viewing and accurate measurement.

4. Mode Selection (Slope Switch)

The Tour V4 Jolt features a Slope Switch for easy toggling between Slope-compensated distance mode and non-Slope (tournament legal) mode.

- To activate Slope mode, slide the side switch to reveal the red indicator. In this mode, the device calculates and displays the "play as" distance based on elevation changes.
- To deactivate Slope mode (for tournament play), slide the switch to cover the red indicator. The device will then provide only line-of-sight distance.

OPERATING INSTRUCTIONS

1. Measuring Distance (Pinseeker with JOLT)

1. Look through the eyepiece and aim the aiming circle (reticle) at your desired target.
2. Press and hold the Power/Fire button. The distance will be displayed in the lower part of the display.
3. For Pinseeker technology, aim at the flag. As the device isolates the flag from background objects, the JOLT technology will provide short vibrating pulses, confirming that the flag has been locked onto. The precise distance to the flag will be displayed.

2. Scan Mode

For continuous distance readings to multiple targets:

1. Press and hold the Power/Fire button.
2. Pan the rangefinder across various targets. The display will continuously update with distances to different objects.

3. Changing Units of Measurement (Yards/Meters)

To switch between Yards (Y) and Meters (M):

- With the unit powered on, press and hold the Mode button (usually located near the Power/Fire button) for approximately 3 seconds.
- The unit of measurement will change, indicated by 'Y' or 'M' in the display.

MAINTENANCE

1. Cleaning Lenses

Gently blow away any dust or debris from the lenses. Use the provided cleaning cloth or a soft, lint-free cloth to wipe the lenses. Avoid using abrasive materials or excessive force, which can scratch the lens coatings.

2. Battery Care

- Replace the battery when the low battery indicator appears in the display.
- Remove the battery if the device will not be used for an extended period to prevent leakage.

3. Storage

Store the rangefinder in its protective case in a cool, dry place when not in use. Avoid extreme temperatures and high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No display or device won't power on.	Dead or incorrectly installed battery.	Replace the CR2 battery, ensuring correct polarity.
Inaccurate distance readings.	Unclear focus, dirty lenses, or aiming at the wrong target.	Adjust the eyepiece focus. Clean the lenses. Ensure you are aiming at the intended target, especially with Pinseeker.
JOLT feature not working.	Not locking onto the flag, or low battery.	Ensure the flag is clearly visible and isolated. Replace the battery if low.
Cannot switch between Yards/Meters.	Not pressing the Mode button correctly or long enough.	Press and hold the Mode button for approximately 3 seconds while the unit is powered on.

SPECIFICATIONS

Brand: Bushnell

Model: Pinseeker Slope Tour V4 Jolt

Color: Black

Magnification: 5X

Water Resistance: Waterproof

Battery Type: CR2 3-volt Lithium (included)

UPC: 029757201676

ASIN: B01M5G6CZG

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the official Bushnell website or contact their customer service department. Keep your proof of purchase for warranty claims.

Official Bushnell Website: www.bushnellgolf.com

© 2023 Bushnell. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01M5G6CZG>

More documents and user manuals: <https://manuals.plus/>